CLA-422-441 CONSTANTLY CHRMING

CARACOLE CLASSIC

ASSEMBLY INSTRUCTIONS


PLEASE UNPACK ALL PARTS AND CHECK QUANTITY AGAINST PARTS LIST BEFORE DISCARDING PACKING CARTON!

- 1) Turn the top box upside down on a soft clean surface, Secure the upper legs into the top box with bolts (B), with the spring washers (C), flat washers (D), and the wrench(E). Do not tighten the bolts.
- 2) Secure the bottom legs and the shelf frame into the upper legs with bolts (F), and the wrench (A). Tighten up all the bolts
- 3) Place the adjustable floor glides into the legs.
- 4) Turn the table upside down, the assembling steps are done

*** NOTE KEEP THIS SHEET!!! ***


In the unlikely event that you would need a replacement part, please contact your local authorized Caracole dealer.

		CLA-442-441					
CONSTANTLY CHARMING							
Part List							
NO.	Hardware List		Part Number	QTY			
1		Top Frame	CLA-442-441-0307	1			
2		The pu ll	CLA-442-441-0309	3			
3	-	Shelf frame	CLA-442-441-027	1			
4		Bottom Leg	CLA-442-441-0119	4			
5	E	Upper Leg	CLA-442-441-0117	4			
6		Central Support Leg	CLA-442-441-0118	1			
7	9	Adjustable Floor Glide	CLA-442-441-075	5			

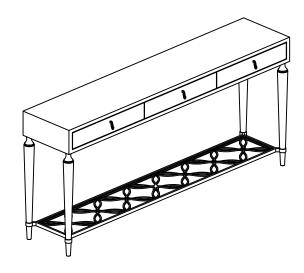


RTA Hardware						
	QTY					
Α		Allen Wrench	DIA 3/8"*4"	1		
В		Bolts	DIA 1/4"*1-1/8"	8		
С	0	Spring Washer	DIA 1/4"	8		
D	0	Flat Washer	DIA 1/4"*16mm	8		
E		Allen Wrench	4mm	1		
F		Bolts	DIA 3/8"*12"	4		
G	©	Tip-Tilt Restraint H	1			

Created on: 2022-07-15 Page 1 of 2

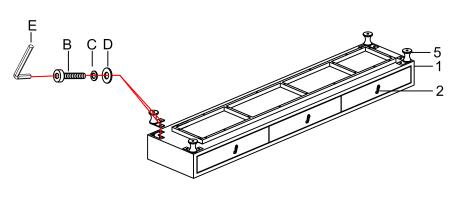



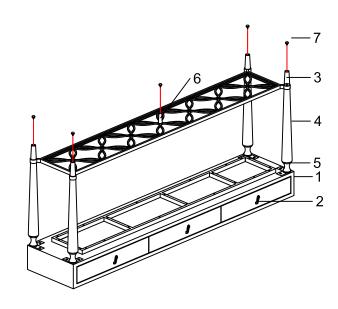

STEP 3

