

M131-421-531 LA MODA MEDIA CONSOLE

MODERN LA MODA

ASSEMBLY INSTRUCTIONS

PLEASE UNPACK ALL PARTS AND CHECK AGAINST PARTS LIST ON THIS INSTRUCTION SHEET BEFORE DISCARDING PACKING AND CARTON!!

This is a set-up case and no assembly is required except for anti-tip restraint strap. (follow instruction for anti-tip restraint assembly)

Note: Touch-up pen is provided for repair of minor issues resulting from transit ,handing and normal use.

***** NOTE KEEP THIS SHEET!!! *****

In the unlikely event that you would need a replacement part for your furniture, please contact your local authorized Caracole International dealer. If you need replacement hardware quickly, it could be purchased from your local hardware store.

M131-421-531		
LA MODA MEDIA CONSOLE		
Part Description	Part No.	QTY
Anti-tip Restraint	M133-421-011-30157	1
Adjustable Floor Glide	M133-421-011-3075	4
Soft Closing Guide	M133-421-011-30424	2set
Door Hinge	M131-421-531-3005	4
Magnetic Catch	M131-421-531-3012	2
Touch-up pen	M133-421-061-30439	1
Single Roller Catch	M131-421-531-30343	2

