# **GasKnight Gas Detector User Manual**

<u>WARNING:</u> While this product can reduce your risk of harm resulting from gas leaks, it can in no way guarantee your safety. Please instead limit gas leaks at their source. Do not depend on this detector alone to save your life. **Detector must be replaced 5 years after purchase date.** For more info on gas safety, go to <u>www.GasKnight.com</u> to download our free E-book.

**LEGAL DISCLAIMER:** The use or misuse of this gas detector is conditioned upon the user's agreement that in no event shall the manufacturer, importer, reseller, or distributor of this gas detector be liable for any direct, indirect, punitive, incidental, special consequential damages, to property or life, whatsoever arising out of or connected with the use of this gas detector.

#### Where to Install

- 1. Install 3-9 feet (or 1-3 meters) near the suspected gas leak AND
  - Natural Gas Install 1-3 feet (or 0-1 meter) from the ceiling.

**Propane/Butane -** Install 1-3 feet (0-1 meter) from the floor.

- 2. **DO NOT** install in a location that is too hot, cold, humid, windy, dusty, smoky, obstructed or enclosed.
  - **DO NOT** install near windows, doors, behind furniture or appliances, inside cabinets or enclosed places.
  - DO NOT install anywhere with improper temperature, too much air ventilation, or with lack of air flow.

### How to Install and Use

1. Plug your GasKnight into an electrical outlet. You may also use an extension cord to plug in.

<u>Note:</u> Immediately after plugging in, the device says "welcome to use the gas leak alarm" and the 3-minute-long warm-up process will begin. The blue LED light will blink during the warm-up process.

2. During the warm-up process, lightly tap the "GasKnight" logo on the front of the detector to test that it is working.

<u>Note:</u> After you tap the logo, the <u>red</u> LED will flash and the detector will play the 1st level voice alarm. Wait 5 seconds and then tap again (while 1<sup>st</sup> level alarm is still sounding) to hear the 2<sup>nd</sup> level alarm. Wait 5 seconds and then tap again (while the 2<sup>nd</sup> level alarm is still sounding) to hear the 3<sup>rd</sup> level alarm. See below for details.

Alarm Level	Gas Level	Voice Alarm Says	Sound/Flash
1	0-2000ppm	"Suspected gas leak, please check it."	Yes
2	2000- 3500ppm	"Gas leaking, please open the doors, windows and turn off the gas valve."	Yes
3	Above 3500ppm	"Danger! Danger! Serious gas leak!"	Yes

3. Wait for the 3-minute warm-up process to finish and then enjoy the added safety of having a GasKnight in your home.

Note: After the warm-up process, the detector is operational. Tapping the GasKnight logo will not trigger any test alarms after the warm-up. The blue LED light will blink once every 5 seconds showing that the detector is operational. If a gas leak occurs, the red LED light and voice alarm will both go off. Tap the GasKnight logo to silence the alarm.

**Maintenance:** Recalibrate each 6 months by unplugging and plugging back in.

Replace detector 5 years after purchase date.

**Testing:** Unplug the detector and plug it back in to restart the warm-up process. To test, either tap the GasKnight logo during the warm-up process or use a live gas/propane source. Test weekly. <u>Note:</u> The GasKnight logo is the test button, but does not work while the detector is operational. The test button only works during the 3-minute warm-up process.

Warranty: 1-year manufacturer warranty + 1-year extension is available if you sign up at <a href="https://www.GasKnight.com">www.GasKnight.com</a>.

## **Product Specifications**





Installation	AC Plug-In	
Standard	GB15322.2 : GB15322.5	
Working Voltage	110V/220V	
Power Consumption	Static Current: ≤ 30uA Alarm Current: ≤ 30mA	
Working Temperature	32°F - 131°F (0°C - 55°C)	
Working Humidity	≤95%	
Detection Concentration	<u>GAS</u> : 0 - 10,000ppm	
Detection Area	323 Square Feet (30 Square Meters)	
Alarm Method	Siren/LED Flashing Light/Voice Output	
Alarm Sound	≥85dB	
Product Life Span	5 years	

#### **Additional Features:**

- Gas concentration voice alarm in 3 levels (low/middle/high)
- Dedicated microprocessor control, Strong environmental adaptability
- Anti-dust, pest control
- SMT with good stability
- MCU intelligent control to reduce false alarms