


VISIT OUR WEBSITE

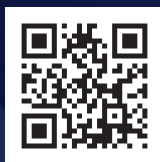

www.volterman.com



**VOLTERMAN**  
YOU NEVER LOSE

## WIRELESSCHARGER USER GUIDE

### CONTENTS

Before using your new product, please read these instructions to prevent any damage

Package Contents:

Qi Wireless Charging Pad, the cover,  
made of natural leather  
Volterman Charging Cable  
This User Guide



### COMPATIBILITY

Works with all Qi devices. However, it was originally designed to charge Volterman products.

### HOW TO USE YOUR VOLTERMAN CHARGING PAD

Connect the USB charge to the USB port on your charging pad.  
Connect it also to the power outlet.  
Place your Qi-enabled device on the charging pad with the screen face up. The LED is blue then it goes red, when your device is charging.  
Note: If the LED is blue, your device is not charging. The wireless charging pad should be placed with the Volterman logo face up.

### TROUBLESHOOTING

Your device is not charging. What to do?  
Make sure that you use an adapter of 5V- 2A, when you connect the wireless charger to the power outlet.  
Make sure that your device is Qi-enabled.  
Make sure that your charging pad is connected to a working power outlet.  
Make sure that you are using the charging cable that came with Volterman charging pad.  
Make sure that your device is positioned correctly on your Volterman charging pad. (See the picture)




Remove any objects that are on the charging pad.  
Remove your device's case or any metallic cover. It may be blocking the wireless signal.

Why is the device charging slowly and what to do?

Your device may charge slower with the charging pad than with a charging cable.  
Make sure that your device is positioned correctly on your charging pad. (See the picture)

### SPECIFICATIONS

Volterman Qi Wireless Charging Pad:  
Input: 5V/2A  
Output: 5V/2A  
Dimensions: length: 15.5 cm (6.1 inch), width: 11.5 cm (4.5 inch), thickness: 1 cm (0.3 inch)  
Weight: 100 gr.  
Material: natural leather

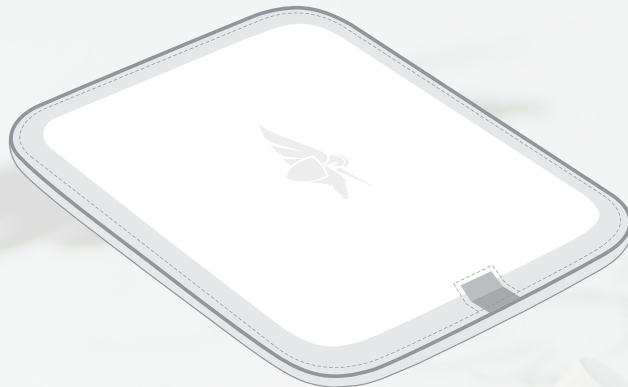

### SAFETY INFORMATION

Use only the charging cable that comes with the wireless charger.  
Do not make unauthorized changes to the power supply.  
Do not attempt to disassemble the wireless charger. It may result in short-circuit or damage.  
Because the charger has a leather cover, stretches may appear because of normal wear and tear.  
Keep away from water.  
Do not keep in a humid environment.

### ONE-YEAR LIMITED WARRANTY

Volterman gives a one-year warranty. For details, please visit our website: [www.volterman.com](http://www.volterman.com)

### CONTACT US

Still have questions or face difficulties? Please contact our Customer Support by [wow@volterman.com](mailto:wow@volterman.com). For further details, you may visit our website: [www.volterman.com](http://www.volterman.com).

