
N54/N55/S55/N52/N20/N26 Magnetic Oil Filter Housing Cap Install Guide



- 1) Remove the OEM oil filter cap from the vehicle's oil filter housing.
- 2) With the OEM filter cap removed from the Engine you may remove the oil filter bypass valve and transfer it into your new filter cap, as shown below.



- 3) With the filter bypass valve transferred to your new cap you may now apply a new O-ring gasket to the exterior of the cap, just as you would with your OEM filter cap.



- 4) Tighten and torque your oil filter cap to the recommended specifications.



- 5) With the Engine running inspect the area where the oil filter housing and filter cap meet for any oil leaks, excessive oil loss in this area is likely to occur in the event of improper installation.