

TABLE OF CONTENTS

01	IMPORTANT INFORMATION
02	PRODUCT INFORMATION
03	WHAT'S IN THE BOX?
04	WHICH FUEL TO USE?
05	GENERAL INFORMATION
06	GAS SAFETY
07	CONNECTING THE GAS PART
08	GAS LEAK
09	FIRST FIRING
10	PRE-BAKING
11	CARE INSTRUCTIONS
	How do I turn off the Glowen Dragon?

TABLE OF CONTENTS

12	CLEANING & MAINTENANCE
13	STORAGE
	Where do I store Glowen Dragon?
14	TROUBLESHOOTING
	I notice a change in colour on the oven
	The oven temperature is too high
	The oven temperature is too low
	The cooking stone cracked
15	SAFE USE
16	WARRANTY
	What does the warranty cover?
	What does the warranty not cover?
	Warranty Claims
17	EU DECLARATION OF CONFORMITY
18	OVEN DIMENSIONS

1

IMPORTANT INFORMATION

	IMPORTANT	Your safety is most imp instructions carefully ar	•	
×	Glowen Dragon is designed use, therefore do not use it			Never use the oven without supervision.
×	Do not use the oven in stro	ng wind.		Always use heat-resistant gloves when using the oven.
	Do not put hands and othe inside the oven.	er limbs		Do not touch the exterior of the oven while using it.
	Blowing into the oven is strictly forbidden.			Keep children and animals away from the oven while using it.

PRODUCT INFORMATION

Glow Seven d. o. o. Ljutomerska cesta 22, 2270 Ormož, Slovenia								
Appliance Name: Glowen Drago				n Gas Oven				
Model/Type No.: GDGO 1.1								
Trade Name:			Glowen Drago	gon				
			7 kW (506 g/h) for I _{3B/P(30)} , I _{3+(28-30/37)} 7,9 kW (566 g/h) for I _{3B/P(50)}					
Injector Size:	1,4 mm	1,4 mm		1,4 mm	1,4 mm			
Gas Category:	I _{3+(28-30/37)}			I _{3B} /P(30)	l _{3B/P(50)}			
Gas Type:	Butane	Propane		Butane, propane or their mixture	Butane, propane or their mixture			
Gas Pressure:	28-30 mbar	37 mbar		28-30 mbar	50 mbar			
Destination Countries:	BE, FR, IT, LU, IE, GB, GR, PT, ES, CY, CZ, LT, SK, CH, SI, LV			LU, NL, DK, FI, SE, CY, CZ, EE, LT, MT, SK, SI, BG, IS, NO, TR, HR, RO, IT, HU, LV	AT, DE, SK, CH, LU			
Pin code:	WARNING! Do r	not use spirit	or petrol for light	ore using the appliance. ting or re-lighting. Keep young children away.				

<u>03 & 04</u>

WHAT'S IN THE BOX?

1. Oven

The fully insulated main chamber retains all the necessary heat. Integrated non-slip feet ensure that the oven stands firmly and safely.

2. Cooking stone


Clay stone that retains the necessary heat.

WHICH FUEL TO USE?

GLOWEN DRAGON is designed for use with gas burner. The oven heats up super-fast and retains heat. The air circulation is the same as in real, masonry wood-burning ovens.

The highest temperature is at the top of the chamber, the lowest where air enters the oven. Burn slowly and observe, and measure the temperature if necessary.

Before you start cooking again, clean the oven.

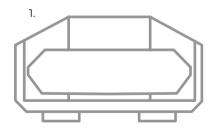





GENERAL INFORMATION

BEFORE FIRST USE

Before starting with your culinary creations with the new Glowen Dragon oven, carefully read the instructions to familiarize yourself with the oven's features and save them for any questions you may have later.

CARBON MONOXIDE

Carbon monoxide is a colorless, flammable, and highly toxic odorless gas. It is the main product of incomplete combustion of carbon and carbon-containing compounds.

May cause symptoms such as headache, dizziness, weakness, nausea, vomiting...

Therefore, please note that the oven is intended for OUTDOOR USE and should never be used indoors.

WARNING:

This appliance will become very hot, do not move it during operation.

FIRE

Most fires are caused by a grease buildup or an improper gas connection. Ensure all people and pets are kept as far away as possible.

If you are able, turn the gas off at the cylinder or the on/off valve. Use a fire extinguisher if possible.

If water is the only fire retardant available, thoroughly soak the area around the appliance.

When spraying water on the Dragon itself, do not use a strong jet of water, as this may cause splashing of burning grease.



GAS SAFETY

Check the oven before use.

If the device shuts down, reduce the gas supply to the regulator and turn off the gas valve, wait 5 minutes and try again.

The warranty does not cover damage caused by fat.

If a fat fire occurs, immediately shut off the gas supply to the valve and remove all food from the oven.

Before use, check the valve for leaks.



Do not disconnect the gas connections during the operation of the oven.




Do not store gas cylinders indoors.



Check all hoses and connections for gas installations.



Keep the fuel hose away from heated surfaces or direct sunlight.

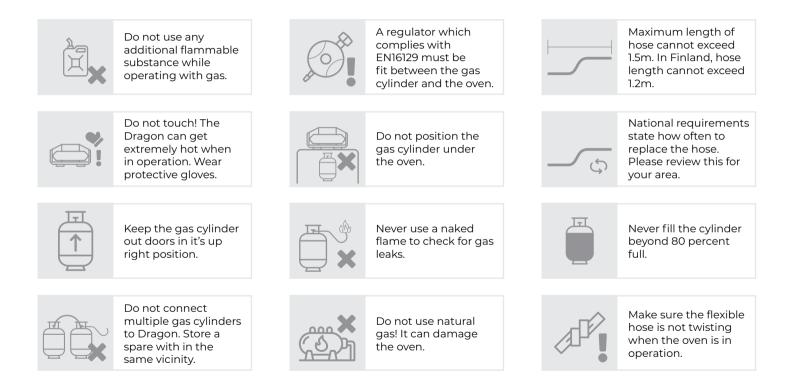

CONNECTING THE GAS PART

1. Please make sure you have the suitable gas and gas regulator for your country.

2. Please make sure you turn the valve in clockwise direction until it stops.

3. Push the hose on the valve.



4. Please make sure you put the hose to the end.





5. Tighten the clamp in clockwise direction.



6. Push the hose on the gas regulator.

7. Make sure you push the hose to the end.





- 8. Tighten the clamp in clockwise direction.
- 9. Screw thread gas regulator to gas cylinder.





Ensure the gas is turned off on the gas cylinder by twisting the handle anticlockwise.


Whilst aligning the regulator with the gas cylinder twist the handle and ensure a tight fit has been made.

08

10. When all connections are made and tested with a mixture of soap and water you can open the valve on the gas cylinder.



11. When the gas is open test for the leaks.

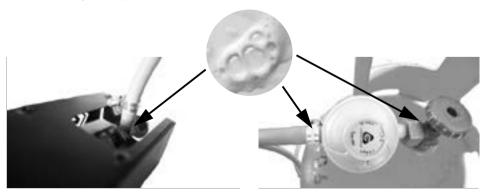

GAS LEAK

Use a mixture of soap and water to test for gas leaks. Apply the mixture to all joints and areas where any cracks appear. If no bubbles appear on the joints, the joints are well sealed. If bubbles appear, the tightness is poor and you need to fit them better.

Each time you disconnect and reconnect the gas connection, you must check all gas connections. Do not ignite the oven when checking for leaks.

Do not use an open flame to check for leaks. Replacement of the gas cylinder must be carried out away from any ignition sources.

Recheck for leaks with soap and water mixture. If leakage persists after retightening, turn off the gas and DO NOT USE THE OVEN.

FIRST FIRING

Firing with lighter

1. Light the lighter outside the oven.

2. Push the lighter in the hole on the oven.

3. Make sure the lighter is burning. Then twist the valve anticlockwise.

Firing with piezo

1. Twist the valve anticlockwise and push the piezo lighter button.

If the oven won't fire, push the piezo lighter button again till it fires. If it won't fire in 5 seconds, turn the gas off and wait a few minutes before firing again or fire it with lighter.

TIP: For the first firing after purchasing we highly recommend firing the oven at its lowest temperature for 30 minutes before setting it to high flame this will help cure the oven.

10

PRE-BAKING

Before the first use, fire up the oven and let it heat up at the highest temperature for at least 45 minutes. The process is called pre-baking.

After that, allow the oven to cool down and wipe the inside with a dry cloth. This disinfection process will burn oils and coatings left over from the manufacturing process. In this step, it smokes harder from the oven, since it is necessary for the paint coatings to burn completely onto the oven. Now the oven is ready for cooking. The first step to delicious food is high quality fuel. When burning gas, always check the gas connections, tank, hoses and regulator to prevent any gas leaks. Place the oven on a solid enough base to hold the oven and the necessary ingredients. We recommend metal or stone surfaces, but we do not recommend using glass or plastic surfaces.

If you need a lower temperature or just a little rest, you can simply reduce the gas supply with the gas valve. It is recommended to clean and move the oven when it has cooled down (approximately 2 hours after the end of cooking). It is essential to store the cold oven in a dry and airy place. Never use water to cool the oven.

<u>11 & 12 & 13</u>

CARE INSTRUCTIONS

Where should I store the oven?

We recommend that you store the GLOWEN DRAGON in a dry and closed place when not in use to protect the oven from various weather conditions.

How do I clean the oven?

Always wait for the oven to cool completely before cleaning. If necessary, clean the inside with a dry cloth. The outer surfaces can be wiped with a damp cloth and dried completely before storing the oven.

How do I clean the cooking stone?

Clean the cooking stone by firing the GLOWEN DRAGON oven at the highest temperatures. If you need to remove heavier food debris, use a brush. Make pizzas and dough-based dishes directly on the stone, other dishes in cast iron pans.

How do I turn off the Glowen Dragon?

Just turn off the gas supply! Cooling also depends on the ambient temperature. Do not use water to cool the oven.

CLEANING & MAINTENANCE

We recommend cleaning and inspecting before each use for the oven to operate optimally. Clean the cooled oven's burner with a brush and blow it out with the help of compressed air.

No chemicals. No abrasive methods. No fuss.

Protect the Dragon from adverse weather, including rain and high winds.

General cleaning: Make sure the holes on the gas burner are always clean from food and other things.

STORAGE

Glowen Dragon provides an outstanding modern baking experience for you, your family, and your friends. Handle the oven with all the love and tenderness because only then will it last forever.

Where do I store Glowen Dragon?

Glowen Dragon is stored in a dry and closed place to protect against weather conditions. Glowen Dragon must be completely dry and cooled before storage. Suppose you are near the sea or store saltwater, Glowen Dragon indoors / sheds, so sea salt does not damage the oven.

14

TROUBLESHOOTING

On the first pre-baking, the oven will smoke slightly differently due to the additional baking of the paint on the surface. After prebaking, it will burn with minimal smoke during use.

I notice a change in colour on the oven

Glowen Dragon is made of high quality painted stainless steel. You can notice some colour changes - patina - on the steel after repeated heating cycles, but these do not affect the quality of the oven. Remember to store the oven in a dry and closed place.

The oven temperature is too high

Correcting with fuel is the easiest way to cool the oven. If it is too hot in the oven, simply reduce the flame with the gas valve and wait for it to cool to a suitable temperature.

The oven temperature is too low

The Glowen Dragon needs to be heated for about 15 minutes. If the temperature is too low, increase the flame with the gas valve.

Note: Heating may take longer if your oven has been exposed to rain or extreme cold.

The cooking stone cracked

The cooking stones are made of natural material and crack when exposed to a too high temperature too quickly. Prebaking should be moderate. The stones are consumables and are not covered by the warranty.



If you have any questions or comments, email us at info@glowen.si

SAFE USE

- · Glowen Dragon should only be used outdoors or in a well-ventilated area.
- \cdot Do not use the oven in a tent.
- \cdot Do not use the Glowen Dragon on enclosed balconies.
- \cdot Glowen Dragon is not suitable for use in vehicles or trunks.
- · Place the oven on a flat, non-combustible surface with no residual combustible materials.
- \cdot Do not try to use the burner with other ovens.
- · Do not use burners that are not part of the Glowen Dragon or unapproved third-party burners in the Glowen Dragon oven.
- \cdot Do not remove the burner during use.
- \cdot Before use, ensure the burner is securely and correctly installed.
- \cdot Do not store flammable materials near the Glowen Dragon.
- \cdot Do not attempt to add flammable liquids into the oven during use.
- \cdot Always use heat-resistant gloves when using the Glowen Dragon oven.
- \cdot Before using, check all components for damage.
- \cdot Tighten all gas fittings with a wrench and do not overtighten.
- · Before using the oven, check the joints for leaks with soap. Never check for leaks with a free flame.
- \cdot Before use, ensure the burner is securely and correctly installed.
- \cdot Never try to disconnect the gas regulator during use.
- \cdot Do not smoke near the oven and gas supply.
- \cdot It is always necessary to use a gas regulator for gas supply.
- \cdot Do not store gas cylinders indoors.
- · Always keep gas cylinders upright.
- \cdot Do not use more than one cylinder for gas supply.
- \cdot Do not use natural gas, only propane or butane.
- \cdot Do not use additional flammable substances.
- \cdot Make sure that the gas hose is not twisted during operation.

WARRANTY

What does the warranty cover?

The warranty applies to the Glowen Dragon oven.

This warranty is not transferable and only applies to the original purchaser. An original invoice is required to enforce the warranty.

Glow seven d.o.o. guarantees that the products (hereinafter the product) will not have defects in workmanship and materials.

The warranty is valid for 2 years from the date of purchase. If Glow seven d.o.o finds irregularities, the product or spare part will be replaced free of charge.

We ensure the product's maintenance and provision of spare parts within the statutory period (Article 18 of the Slovenian Consumer Protection Act).

What does the warranty not cover?

The warranty does not apply in cases where the customer has not complied with the enclosed instructions.

The warranty does not cover damage or defects resulting from normal wear and tear of the product, misuse, negligence, improper maintenance, accident or discoloration of the product. The warranty does not cover damage to the product due to use for purposes other than intended. It also does not apply if an unauthorized or unprofessional person has tampered with the product.

The warranty does not cover damage to products purchased at unauthorized points of sale, including third parties and retailers from Bolha, Amazon, E-bay websites.

The warranty does not apply to clay stones.

Warranty Claims

All warranty claims must be submitted directly to Glow seven d.o.o, namely to info@glowen.si with the subject "Warranty claim during the warranty period" with the original invoice attached and an explanation of the defect on the product. Incomplete returns will not be accepted. When Glow seven d.o.o. receives your warranty claim, it confirms or rebuts it (usually 7-10 business days).

After confirming the complaint, you can return the damaged product through registered mail at the company's expense. You are responsible for the customs duties and taxes that arise.

Glow seven d.o.o. is not responsible for products lost during transport.

EU DECLARATION OF CONFORMITY

Manufacturer's Name: Glow Seven d.o.o. Manufacturer's Address: Ljutomerska cesta 22, 2270 Ormož, Slovenia

Here with declare that this product


Product: **Glowen Dragon Gas Oven** Model(s)/Type(s): **GDGO 1.1**


Tradename: Glowen Dragon

Is in conformity with the following harmonized standards have been applied: **EN498:2012**

18

OVEN DIMENSIONS

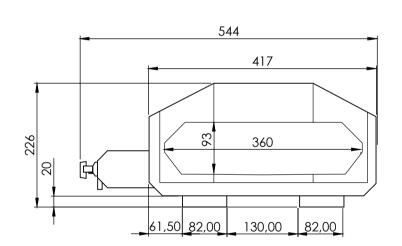

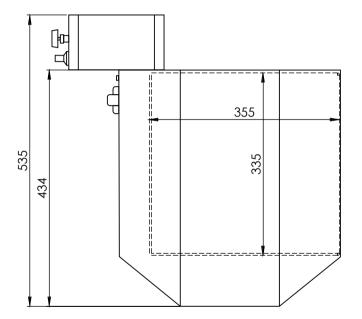

Front view

Top view



STAY WITH US!


We love to see what you create in our ovens, therefore feel free to tag us when posting your photos with **#glowen #glowenoven**

Follow us on our social networks

& O glowenoven



If you have any questions or comments, email us at **info@glowen.si**

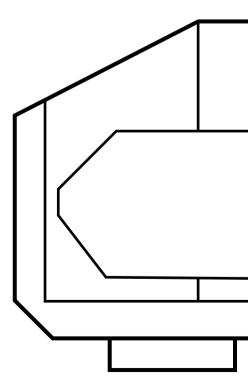

www.glowen.si