 


In-Use Screen

After a Massage program is selected, In-use screen displays all settings to that program.

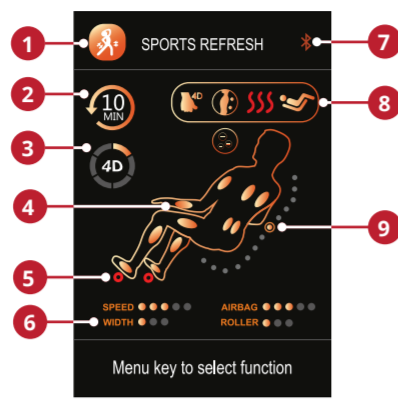

- | | |
|------------------|------------------------------------|
| 1 Program | 6 Indicators |
| 2 Time left | 7 Bluetooth connected |
| 3 4D intensity | 8 Status Icons |
| 4 Active airbags | 9 Back-roller position & direction |
| 5 Active rollers | |

Chromotherapy

From the **HOME** screen, select the **LIGHTS** menu. Navigate to **THEMES**, then press OK button to select your desired light setting.

Solid: Single color light.

Breathe: Single color that dims and brightens on a loop.

Wake Up: Blue enriched lights to boost energy levels - gradually increasing brightness.

Wind Down: Colors of sunset - gradually decreasing brightness.

Multi-wave: All the colors of the rainbow morphing into each other.

Multi-rotate: Colors rotate from one to another.

To turn lights off: select the **LIGHTS** menu, navigate to **THEMES** and then scroll down to hover over the active light setting. Press OK button to deselect and turn lights off.

Intelligent Voice Commands

Awaken Intelligent Voice Commands by saying: **'Switch to Voice Mode'**.

You may now give your chair any of the commands below **within 5 seconds**. Make sure to speak clearly and slowly. After 5 seconds the Intelligent Voice Command function will turn off automatically and must be awakened again.

Commands

- | | |
|------------------|-----------------|
| Power On | Deep Shiatsu |
| Switch Off | Healthy Breath |
| Activate Massage | Massage Extend |
| Sports Refresh | Relaxation |
| Extension | Air Bag Massage |
| Rest & Sleep | Zero Gravity |
| Working Relief | Start Heat |
| Neck & Shoulder | Heat Off |
| Waist & Spine | |

Sounds

From the **HOME** screen, select the **SOUNDS** menu. Toggle the following settings to play Nature sounds from your chair.

Sound: Select from Nature sounds.

Volume: Set volume level.

BEEP: Set to OFF to stop sounds from remote control.

To play Nature sounds, Bluetooth must be **ON** prior to selection.

Quick Access Controller

Button Operation

On/Off:

 
Press and hold.

Change Auto Program:

Short press; new program will be announced and start.

Dial Operation

Turn left or right to recline or incline.

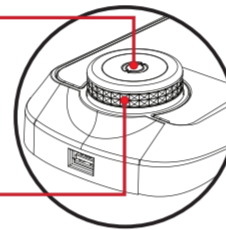


KYOTA | The World's Most Advanced Massage Chairs®

72 Stard Road, Seabrook, NH 03874 | (800) 242-0761
www.kyotamassagechairs.com

Version 1.6

KYOTA®

 Quick Start Guide

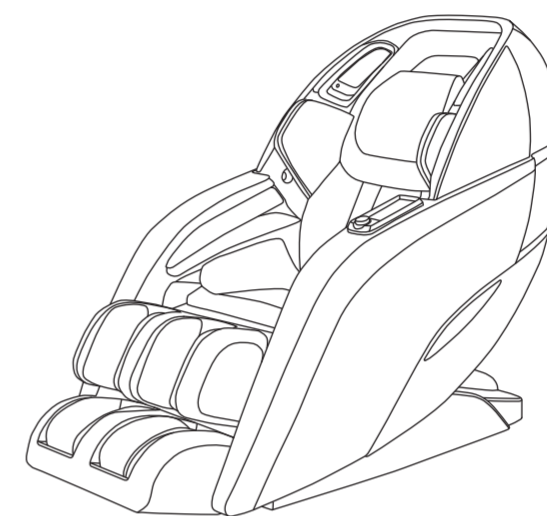

Yutaka M898 4D Massage Chair

KYOTA®

Power – Powers up the remote or returns the chair to the exit position and powers down remote.

Home – Shortcut to the home page of all menu screens.

 
OK – After navigating to the command desired on the display, push OK to select.

Zero Gravity – Press for zero gravity 1, press again for zero gravity 2, press again to restore recline.

Foot Roller – Press to turn off foot roller, press again to resume foot roller.

Footrest – Press and hold up arrow to bring footrest up, press and hold down arrow to bring footrest down.

Leg Length – Press and hold right arrow to extend the leg length, press and hold left arrow to retract the leg length.

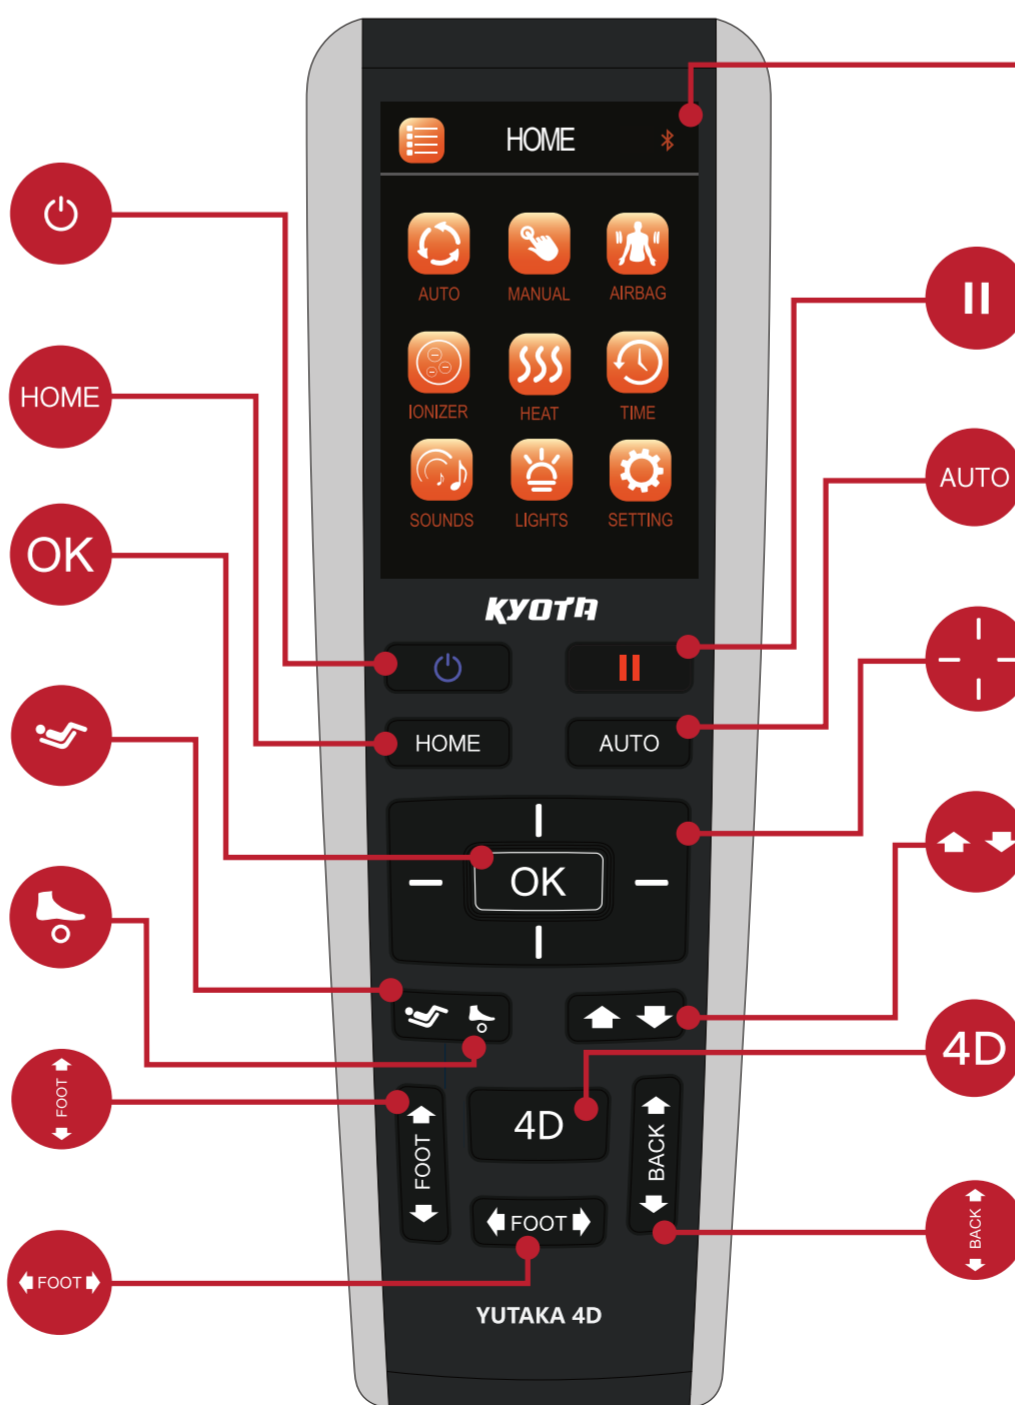

Multi-Functional Screen – Use the directional buttons below to navigate these menu screens. Then press OK to select.

Pause – Press pause to immediately stop all massage chair activity, press again to resume.

Auto – Shortcut to the auto programs menu screen.

Directional Button – Press up, down, left or right to navigate the display screen.

Back Adjustment – Back mechanism position adjustment; press and hold up to raise, press and hold down to lower. Use during initial body scan fine tuning or in manual point or partial zone mode.

4D – Press to increase or decrease 4D intensity of back mechanism. In-use screen displays intensity dial.

Seat Back Position – Press and hold down arrow to recline the seat back, press and hold up arrow to upright the seat back.