


HUUM Extension Box

2 - Heater Circuits
1 - Control Circuit

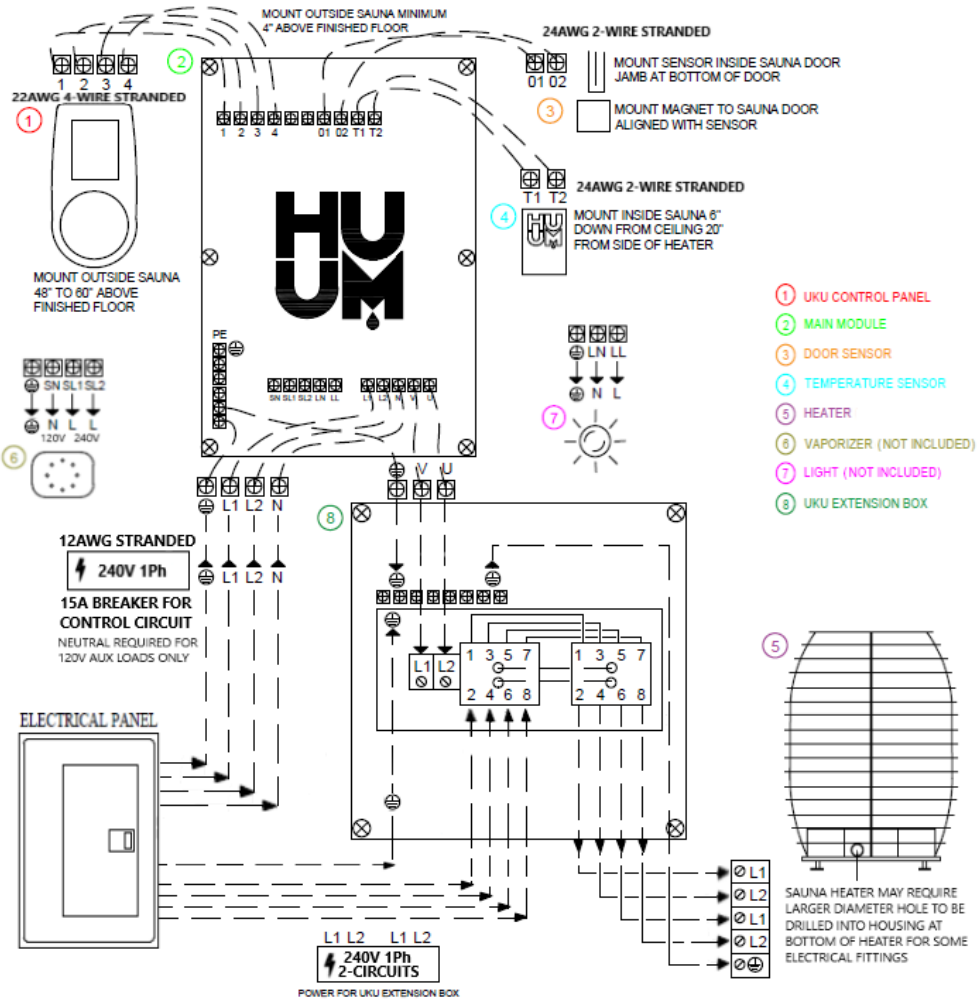

- 1 UKU CONTROL PANEL
- 2 MAIN MODULE
- 3 DOOR SENSOR
- 4 TEMPERATURE SENSOR
- 5 HEATER
- 6 VAPORIZER (NOT INCLUDED)
- 7 LIGHT (NOT INCLUDED)
- 8 UKU EXTENSION BOX


HEATER	VOLTAGE	KW	AMPS	BREAKER	AWG
HIVE 12	240 V	12	25 / 25	30 / 30	10 / 10
HIVE 15	240 V	15	31.25 / 31.25	50 / 50	8 / 8
HIVE 18	240 V	18	37.5 / 37.5	50 / 50	8 / 8

All supply wire to be 90 °C copper

! IMPORTANT !
All wiring must be done in accordance with National Electric Code and local building code.

HUUM Extension Box

1 - Heater Circuit
1 - Control Circuit

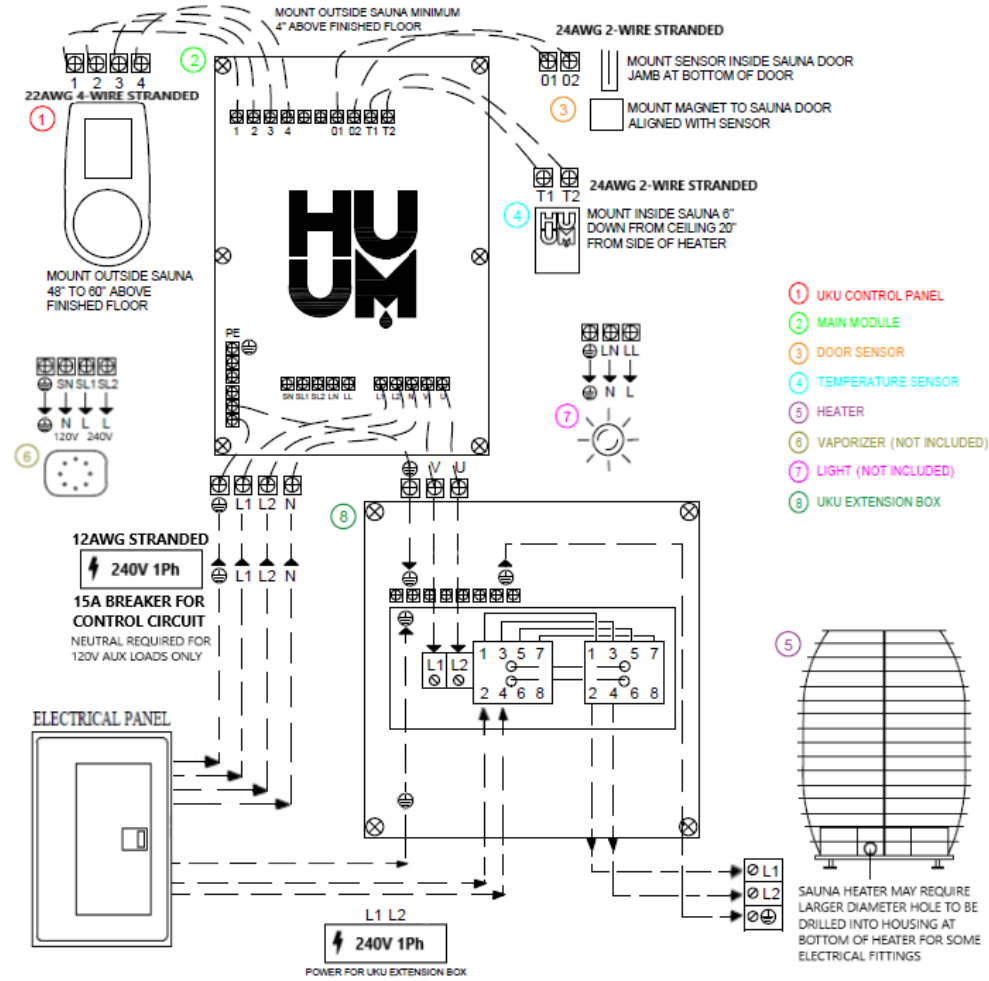

- 1 UKU CONTROL PANEL
- 2 MAIN MODULE
- 3 DOOR SENSOR
- 4 TEMPERATURE SENSOR
- 5 HEATER
- 6 VAPORIZER (NOT INCLUDED)
- 7 LIGHT (NOT INCLUDED)
- 8 UKU EXTENSION BOX

HEATER	VOLTAGE	KW	AMPS	BREAKER	AWG
CLIFF 10.5	240 V	10.5	43.75	60	6
STEEL 10.5	240 V	10.5	43.75	60	6
HIVE MINI 10.5	240 V	10.5	43.75	60	6

All supply wire to be 90 °C copper

! IMPORTANT !
All wiring must be done in accordance with National Electric Code and local building code.