



# 12V TOURING OVEN

## OWNERS MANUAL





## WARRANTY

---

Aussie Traveller PTY LTD ACN 642 775 460 (Aussie Traveller) offers the following warranty in relation to the products it supplies directly or through an authorised manufacturer, dealer or approved service repair agent (Product).

Our product is guaranteed to be free from quality and manufacturing defects for a period of **12 months**.

If your product becomes defective during this period, Aussie Traveller PTY LTD will offer you either a replacement, credit or refund where a product is faulty; wrongly described; different from the sample shown to you or do not do what they are supposed to do.

This warranty will not cover substantially modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim the warranty, please email "warranty@aussietraveller.com.au" and a member of our warranty department will be in contact. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim. Should you not be able to provide proof of purchase with a receipt or bank statement, identification showing name, address and signature may be required to process your claim.

Any expenses relating to the return of your product to Aussie Traveller will normally have to be paid by you. For online purchases, Aussie Traveller PTY LTD will pay for the return freight for any product assessed as having a major failure.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

### Contact

#### Australia Wide

1300 663 868

#### Melbourne Office

235 Barry Road, Campbellfield, Melbourne, VIC, 3061

Ph: +61 3 9357 6565

enquiries@aussietraveller.com.au

#### Brisbane Head Office, Factory & Showroom

11-15 Oasis Court, Clontarf, Brisbane, QLD, 4019

Ph: +61 7 3284 3284

enquiries@aussietraveller.com.au

To receive a copy of the Aussie Traveller Warranty Terms & Conditions or information regarding specific Aussie Traveller products, please contact Aussie Traveller Head Office on (07) 3284 3284 or email enquiries@aussietraveller.com.au.

## 12V OVEN INCLUDES:

---

- 12V DC / 8.3 Amp / 100 Watts
- Adjustable temperatures 0-180°.
- Adjustable running time up to 120mins.
- Stainless steel housing and latches.
- Insulated body including door.
- 2 x removable mesh shelves.
- Three plug configurations: 12V, 50 Amp Heavy Duty Connector and Merit.
- 1.5m power cord with hardwired Anderson Plug/Connector.
- 15Amp In-lined Fuse in power cord.
- 2 x Steel Mounting Bracket.

## KEY FEATURES



Stainless steel locking latch




Stainless steel insulated housing including door insulation



2 x Removable mesh shelves



2 x Stainless steel mounting brackets

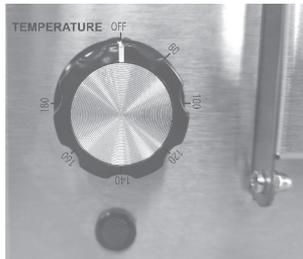

Up to 180°C adjustable temperature



Up to 120 minutes adjustable timer with audible alarm function



Three plug configurations - 12V, 50 Amp connector and Merit



15A Replaceable inline fuse protection

## SAFETY PRECAUTIONS

---

### WARNING!

This 12V Portable Oven, its outer surfaces and contents that have been in the oven may be hot. Ensure that appropriate precautions are taken before handling the oven, its outer surfaces or contents.

## OPERATING INSTRUCTIONS

---

### POWER SUPPLY

This 12V Portable Oven runs from a 12 volt power supply only. The oven will draw 8.3 Amp / 100 Watts when it is operating fully.

There are three plug configurations to operate your oven: 12V, 50 Amp heavy duty connector and Merit.

As most vehicles' 12V plugs are designed to take a maximum of 10 Amp, this oven is close to the limit at 8.3 Amp. It is suggested that you hard wire it to your battery using the 50 Amp heavy duty connector. If you are using the oven regularly or if the 12V socket is old, worn or loose then there is a higher chance of failure, especially when driving on rough or uneven ground. The 50 Amp heavy duty connector provides a superior connection and will reduce the chance of a poor connection heating up and potentially melting the 12V/Merit plugs. The oven cord is fitted with an inline 15A blade type fuse as well as a secondary 15A glass type fuse within the 12V/Merit plug. If either fuse does blow then there is most likely a problem that you should diagnose and rectify before replacing the fuse.

On the front of the oven is an "ON" indicator light. This light will only illuminate when the following criteria are met:

1. There is power reaching the oven.
2. The oven timer is switched "ON" and is counting down, and/or
3. The temperature gauge is switched "ON".

The oven is fitted with a thermostat so if the desired temperature is met then the light will go off, as it is not heating anymore, until the temperature drops and the element comes on.

### SETUP

Setting up and installation of your 12V Portable Oven is simple. Once you have decided which plug configuration you will be using for your power supply, simply plug in your 12V Portable Oven, set your temperature gauge to the desired temperature, turn the timer switch on for the time you will need to cook. After preheating the oven, put your food in.

1. Your oven comes with a set of mounting brackets that can be used to securely attach it in your vehicle. There are slots at the top and bottom of the oven allowing you to secure it to a shelf or roof of your vehicle. Simply insert the two prongs into the slots in the side of the oven and screw the brackets down. Periodically check the attachment to ensure it has not become loose.
2. The mesh shelves can slide in and out of the oven making it easier for you to reach your food. Be aware that the mesh shelves can get very hot and appropriate hand protection should be used when handling them.

3. If the oven is 'rattling' when you are driving, when the oven and mesh shelves are cool, you can gently pinch down the arms on the sides of the mesh shelves so that they hold tightly onto the arms inside the oven.
4. The oven does not require any ventilation at the rear, sides, top or bottom and as such can safely be recessed.
5. The oven is insulated on 5 sides using cotton insulation. This should keep the outside temperature below 40°C, although this can vary depending on the ambient temperature. The door is insulated through a double wall which only allows convection to heat it up when handling them.

## COOKING

Set your **12V Portable Oven** to the desired temperature with 180°C the approximate maximum temperature. Many modern recipes and instructions provide cooking time for a fan forced oven. As the **12V Portable Oven** is not fan forced it will take longer to create similar results. To achieve the best results, we suggest you preheat the oven for 20-30 minutes, especially if you are cooking with fresh ingredients. To give you a rough idea it will take you about 50 minutes preheating for the oven to get to 150°C. The **12V Portable Oven** heat source is on the bottom of the inside of the oven and heat is transferred throughout the oven itself through conduction of the metal and convection in the air.

We recommend that you do not over-fill the oven, which reduces air flow, and that you rotate your food between shelves and on the shelves throughout the cooking time to avoid hot spots. Food in mesh shelves and foil or similar coverings can be placed directly onto the bottom of the oven. However, you should check it regularly as it is easy to burn food using this method. If you are reheating or cooking frozen food we suggest that you rotate your food between shelves and on the shelves throughout the cooking time to avoid the outside burning before the middle is defrosted.

What you put in the 12V Portable Oven significantly affects the amount of time it takes to cook. The time required to cook a roast is not always the same. Even in your home it will take 1.5 hours to cook a 1kg pork roast but it will take 3.5 hours to cook a 3kg roast. So if you put 2 frozen pies into the oven it will take longer than 2 defrosted pies. Similarly, if you put in 4 frozen pies it will also take longer than the 2 frozen ones. A few good rules of thumb are to try not to overload the oven and try to defrost the items before putting them in. Also, rotate them between the top and bottom shelves and the front and back throughout the cook.

## CLEAN UP

---

Always unplug the unit prior to cleaning.

Do not immerse the unit in any liquid.

When cleaning, use a cloth, brush or sponge with water and mild detergent.

Do not use metal scouring pads.

## SPECIFICATIONS

<b>OVERALL SIZES</b>	Exterior: L370 x W310 x H195mm Interior: L267 x W250 x H100mm
<b>MAXIMUM VOLTAGE</b>	12V DC
<b>OUTPUT WATTAGE</b>	100 Watt
<b>MAXIMUM AMPERAGE DRAW</b>	8.3 Amp
<b>TEMPERATURE RANGE</b>	80 - 180°C
<b>OVEN TIMER</b>	20 - 120 Minutes
<b>FUSE TYPE</b>	15A Blade Type
<b>INSULATION</b>	Cotton
<b>CASING</b>	Stainless Steel
<b>NET WEIGHT</b>	6.40kg



MADE IN CHINA

Stock Code: 265102000

Description: 12V Touring Oven

Manufactured and packaged for Aussie Traveller PTY LTD

ABN: 36 642 775 460

11-15 Oasis Court Clontarf, Queensland, 4019, Australia



Recyclable  
paper