



24" HD DVD CARAVAN TV

USER MANUAL



READ CAREFULLY BEFORE USING
RETAIN MANUAL FOR FUTURE REFERENCE

CONTENTS

IMPORTANT INSTRUCTIONS	2
Safety Instructions	2
Battery Handling & Usage	3
Disposal Of Old Electrical Appliances	3
ACCESSORIES	4
FEATURES	4
GENERAL PARTS	5
REMOTE CONTROL	7
REMOTE CONTROL PREPARATION	9
Battery Installation	9
Service Life of Batteries	9
Remote Control Operation	9
BASIC CONNECTION	10
Power Connection	10
Connect External Antenna to Unit	10
Coaxial Connection	11
AV Connection	11
PC/VGC Connection	12
HDMI Connection	12
USB Connection	13
Earphone Connection	13
BASIC OPERATIONS - DVD	13
BASIC OPERATIONS - TV	19
MAIN MENU	26
Picture	26
Sound	28
Channel Menu	29
Feature Menu	30
Setup Menu	32
MAINTENANCE	32
WALL MOUNTING	33
STAND INSTALLATION	33
SPECIFICATIONS	34
TROUBLESHOOTING	34
WARRANTY	35

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061





Read this installation instruction thoroughly.
 Incorrect installation or operation may void any warranty.
 Incorrect use or operation may cause serious injury.

IMPORTANT INSTRUCTIONS

SAFETY INSTRUCTIONS

HAZARD SIGNAL	DEFINITION
	The lightning flash and arrowhead within the triangle is a warning sign alerting you of “dangerous voltage” inside the product.
	CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK. DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.
	The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.

⚠ WARNING: To reduce the risk of fire, electric shock, or serious personal injury:

- If the cord is damaged, have it repaired by the manufacturer, its service or a similarly qualified person to avoid any hazard.
- The cord should always be readily accessible.
- The apparatus should not be exposed to dripping or splashing of water or liquids and that no objects filled with liquids such as flowers vases shall be placed on the product.
- The normal ventilation of the product should not be impeded for intended use.
- Always leave a minimum distance of 10 cm around the unit to ensure sufficient ventilation.
- Naked flame sources, such as candles, should not be placed on top of the device.
- The device is intended for use only in a temperate climate.
- Situate this product away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
- Clean the product only as recommended by the manufacturer (see “Maintenance” section for details). Unplug the power plug from the wall outlet before cleaning,
- Unplug the power plug from the wall outlet when left unused for an extended period.
- Prevent objects/liquids from falling or spilled on the product.
- Operate the product only with the supplied power cord. Route power cords so they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to plugs, convenience receptacles, and the point where they exit from the product.
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device should remain readily operable.
- Do not operate this product under the following conditions:
 - When the power-supply cord or plug is damaged.
 - If liquid has been spilled into or objects have fallen into the product.
 - If the product has been exposed to rain or water.
 - If the product does not operate when used according to the operating instructions.
 - If the product has been dropped or damaged in any way.
- Do not attempt to service the product; take it to the electronics repair shop of your choice for any servicing or repair.
- Do not overload wall outlets, extension cords, or integral convenience receptacles.
- Connect this product to the power outlet which has protective earth connection.

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

IMPORTANT INSTRUCTIONS (cont.)

⚠ CAUTION: To reduce the risk of personal injury or product/property damage:

- This product is intended solely for non-commercial, non-industrial, personal use as a television. Do not use this product for any other purpose.
- Ensure product is not subjected to violent shocks, extreme temperatures, or lengthy periods of direct sunlight.
- Keep the product away from magnetic objects, motors, and transformers.
- Do not use outdoors in inclement weather.
- Do not use the TV while driving; this is dangerous and is illegal in some areas.

BATTERY HANDLING & USAGE:

- **CAUTION:** Danger of explosion if battery is incorrectly replaced or not replaced by the same type or equivalent.
- The battery should not be exposed to excessive heat such as sunshine, fire or similar.
- Different types of batteries, new and used batteries should not be mixed.
- The battery must be installed according to the polarity.
- If the battery is worn, it must be removed from the product.
- The battery must be disposed of safely. Always dispose of batteries in collection bins.
- Keep batteries away from children and pets. Only adults should handle batteries.
- Never throw batteries into a fire or expose them to fire or other heat sources.
- Follow the battery safety and usage instructions.

DISPOSAL OF OLD ELECTRICAL APPLIANCES:

The European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance, it must be separately collected.



CAUTION: To avoid possible hearing damage, do not listen at high audio volume for long periods of time.

Occasionally, a few non-active pixels may appear on the screen as a fixed black, blue, green or red point. Please note that this does not affect the performance of your product. Take care not to scratch the screen with fingernails or other hard objects.

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

ACCESSORIES

- 1 × User Manual
- 1 × Remote Control
- 1 × Power Adaptor
- 1 × 12V Adaptor

All the pictures in this manual are for your reference, appearance and display should subject to the final product.

The user interface may vary due to software upgrades.


FEATURES

- **24" LED DISPLAY**
This unit has a built-in LED display window to provide clear vision and low radiation.
- **Built-in DVD Player**
- **Support Auto Program Scanning Function**
- **Support Digital Broadcasting Reception**
- **Compatible with USB for Music, Photo and Video Playback (TV Mode) Support Multi-languages On Screen Display**
- **Support Full Function Remote Control**
- **Compatible with HDMI, VGA, PC AUDIO and AV Input**
- **Compatible with EARPHONE and COAXIAL Output**
- **Support PVR Function**
- **Support TIME SHIFT Function**
- **With Detachable Stand Holder**
- **With External Antenna Jack**
- **With Built-in Speakers**
- **With Noise Reduction Function**

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

GENERAL PARTS

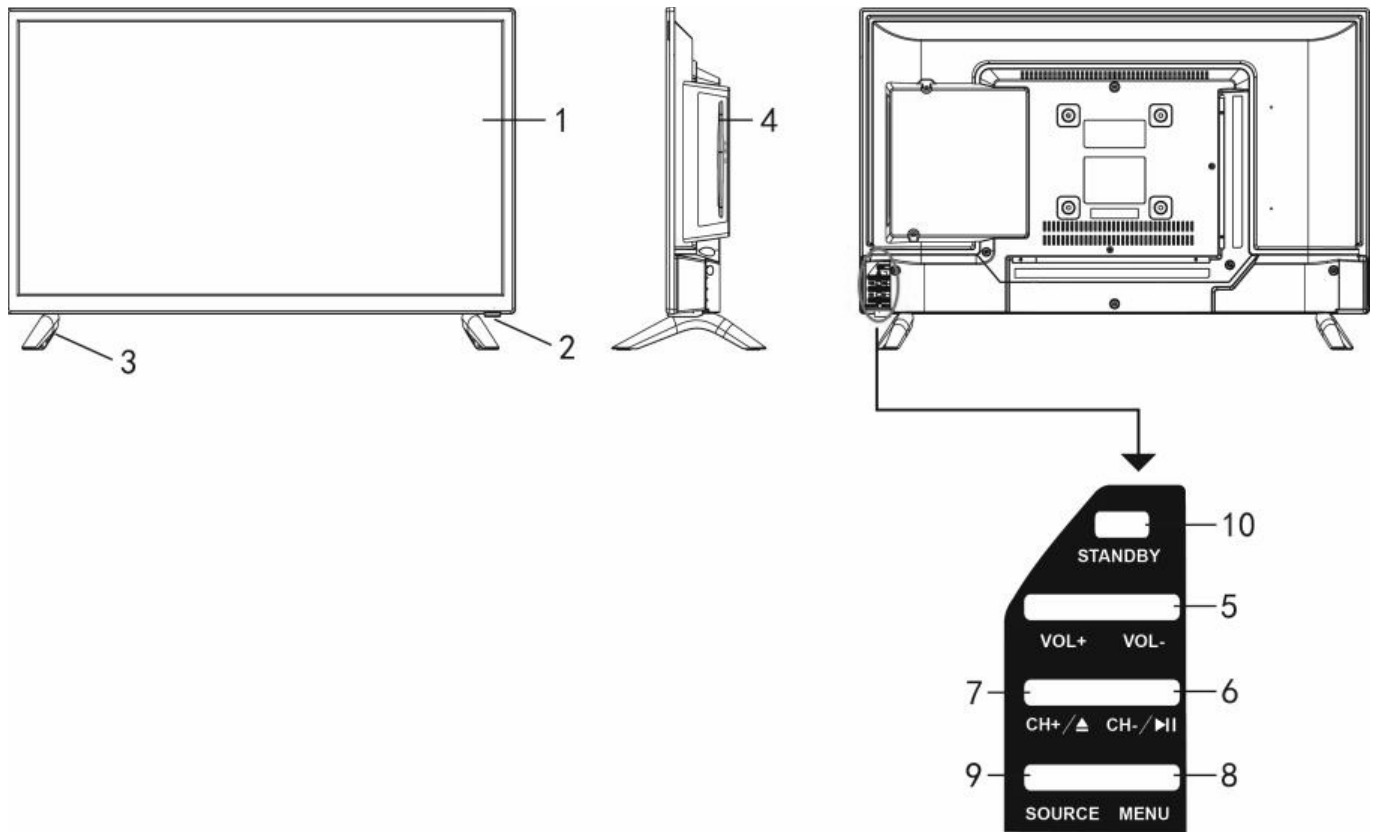


1. LED display screen.
2. Remote control sensor / Power indicator - In standby mode the indicator light is red; when switching on the unit the indicator light is blue colour.
3. Stand holder.
4. Disc slot - To insert a disc according to the silk screen on the side of this slot.
5. VOL +/- button- To increase/decrease the volume level or move left/right.
6. CH + / - To select next channel or move up. / To open or close the disc compartment.
7. CH - / - To select previous channel or move down. / To play or pause playing (DVD).
8. MENU button- To enter menu setting page.
9. SOURCE button- To select the input source.
10. STANDBY button- To turn the TV ON/OFF.

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

GENERAL PARTS (cont.)

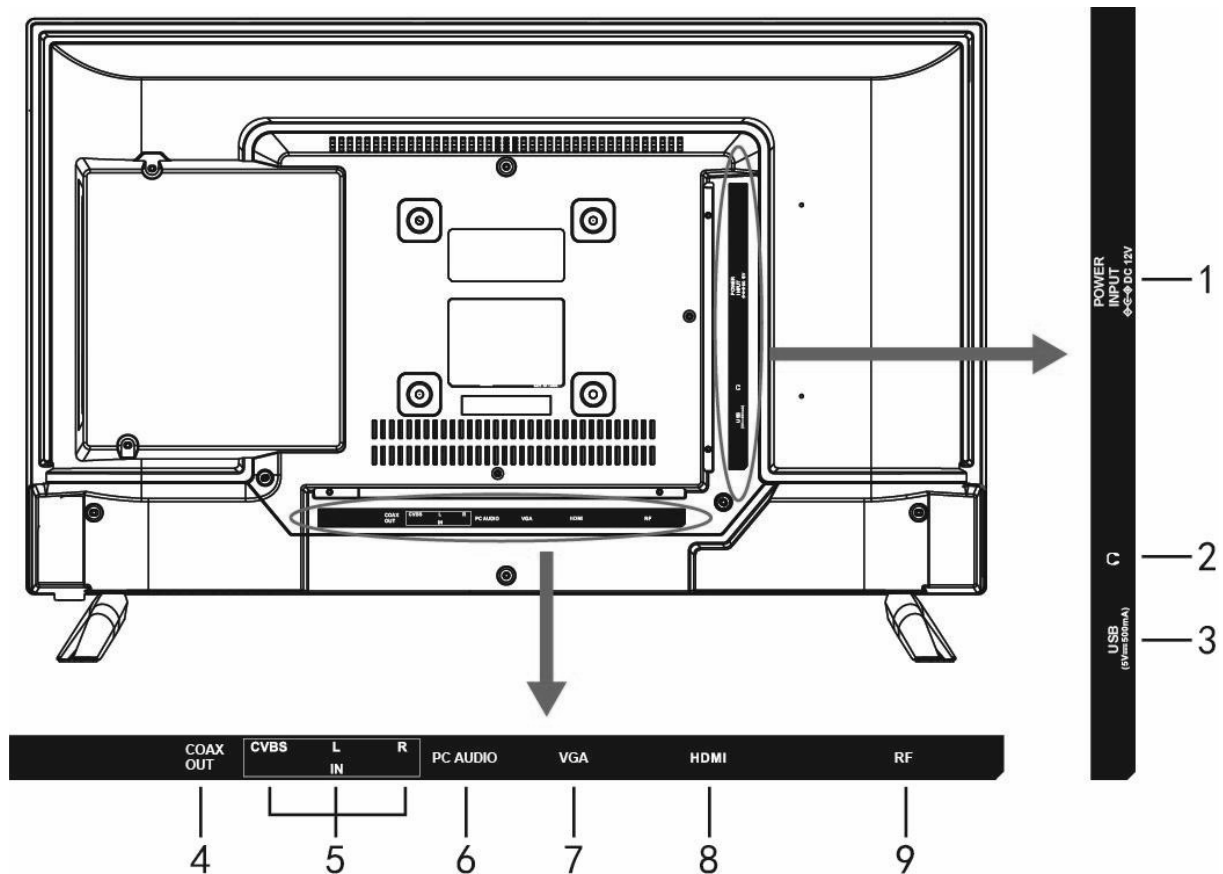


1. Power input (DC).
2. EARPHONE output terminal.
3. USB input terminal.
4. COAXIAL output terminal.
5. CVBS and AUDIO L/R input terminals.
6. PC AUDIO input terminal.
7. VGA input terminal.
8. HDMI input terminal.
9. RF input terminal to connect the external TV antenna (DVB T/DVB T2/DVB C)

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

REMOTE CONTROL

1. **STANDBY**
Set the unit in standby mode; press it again to switch it on.
2. **TV/RADIO (TV)**
Switch the unit between TV and Radio.
- ▲ (DVD)
Load/eject an available disc.
3. **RED button (TV)**
GOTO (DVD)
Start playing from a certain point.
4. **GREEN button (TV)**
ANGLE (DVD)
Change the playing angle, if available.
5. **BLUE button (TV)**
A-B (DVD)
Repeat playing between A and B.
6. **YELLOW button (TV)**
REPEAT (DVD)
Change repeat mode.
7. **FAV**
Display the favorite channels list.
8. **TEXT**
Display the available Teletext.
9. **EPG (TV)**
Display electronic program guide.
D.MENU (DVD)
Display the main disc menu.
10. **HOLD**
Hold the Teletext.
FREEZE
Hold the picture.
11. **SUBTITLE**
Enable/disable subtitles.
12. **SIZE (TV)**
Switch Teletext size.
ZOOM (DVD)
Shrink/enlarge the picture.
13. **SUBPAGE**
Enter Teletext sub-page.
14. **ASPECT**
Press it repeatedly to select desired screen size.
15. **MEDIA**
Enter Media (USB) mode directly.
16. **▶||**
Start/pause playing.
17. **▶▶**
Move fast forward.
18. **◀◀**
Move fast backward.
19. **● (TV)**
Start RECORDING when watching available digital programs.
D.SETUP (DVD)
Call out the setup menu.

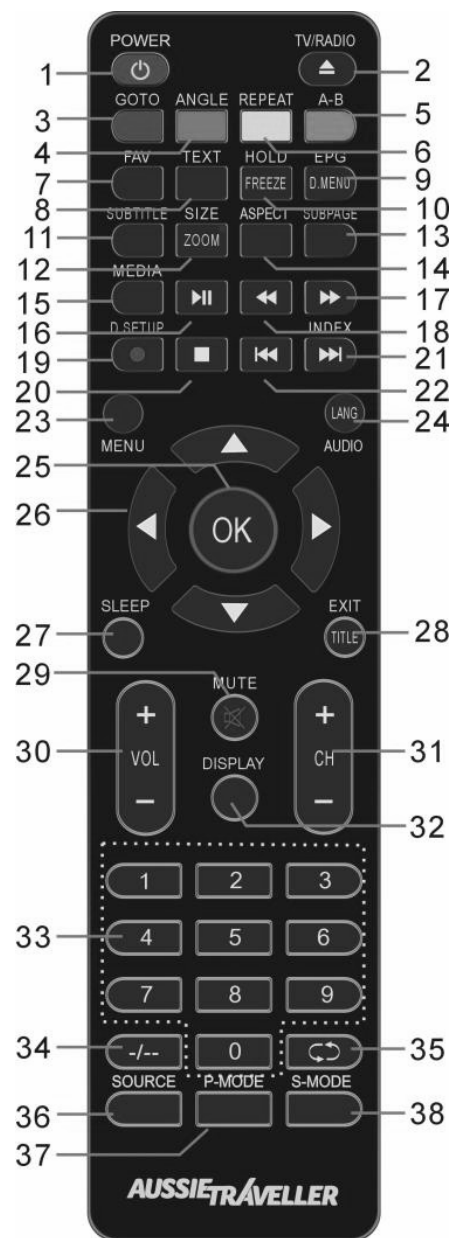


1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

REMOTE CONTROL (cont.)

- 20. ■
Stop playing.
- 21. ►►
Play the next file.
INDEX (TV)
Display the record list or Teletext index.
- 22. ◀◀
Play the previous file.
- 23. **MENU**
Call out the main menu or return to previous menu.
- 24. **AUDIO (TV)**
Switch the available soundtrack.
LANG (DVD)
Switch the available soundtrack language.
- 25. **OK**
Confirm selection.
- 26. ▲▼◀►
Navigation buttons
- 27. **SLEEP**
Set desired sleep time.
- 28. **EXIT (TV)**
Exit the menu page.
TITLE (DVD)
Display the title menu.
- 29. **MUTE**
Mute the sound.
- 30. **VOL + | -**
Increase/decrease the volume level.
- 31. **CH + | -**
Play the next/previous program.
- 32. **DISPLAY**
Display the available program information.
- 33. **Number buttons (0-9)**
Input the number information, such as channel number and so on.
- 34. -/--
Switch the digit when watching TV programs.
- 35. ↶↷
Return to previous channel.
- 36. **SOURCE**
Select desired input source.
- 37. **P-MODE**
Switch the picture mode.
- 38. **S-MODE**
Switch the sound mode.

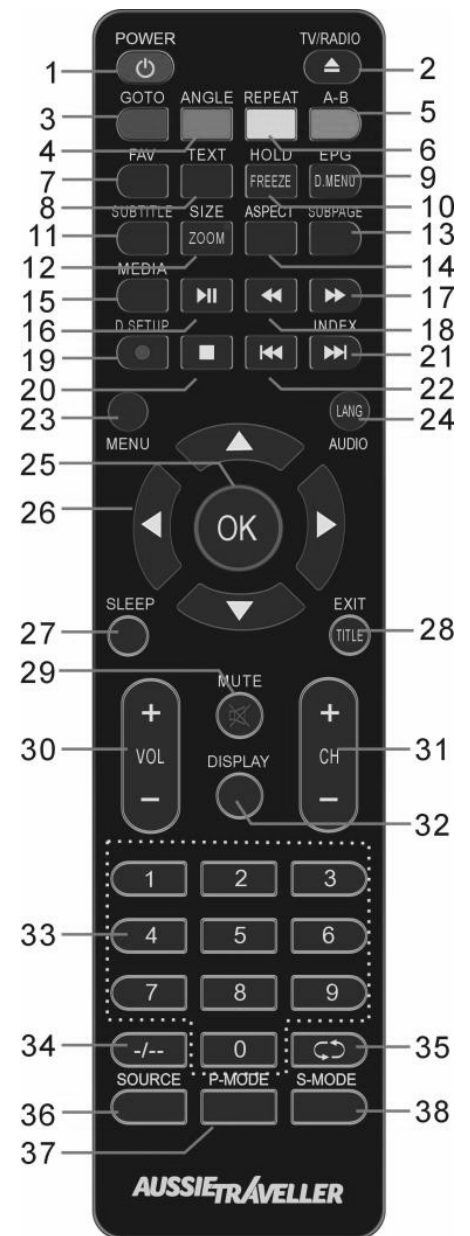

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

REMOTE CONTROL PREPARATION

BATTERY INSTALLATION:

Install the batteries as the following pictures. Be sure + and – terminals are positioned as indicated in the battery compartment (Fig 1).

SERVICE LIFE OF BATTERIES:

- The batteries typically last for one year although this depends on how often the remote control is used.
- If the remote control fails to work even when it is operated near the player, replace the batteries.
- Use two size AAA dry batteries.

NOTE:

- Do not drop, step on or otherwise impact the remote control. This may damage the parts or lead to malfunction.
- If the remote control is not going to be used for a long time, remove the batteries.

REMOTE CONTROL OPERATION:

Point the remote control from no more than about 6m from the remote control sensor and within about 60° of the front of the player (Fig 2).

NOTE:

- The operating distance may vary according to the brightness of the room.
- Do not point bright light at remote control sensor.
- Do not place objects between the remote control and the remote control sensor.
- Do not use this remote control while simultaneously operating the remote control of any other appliances.

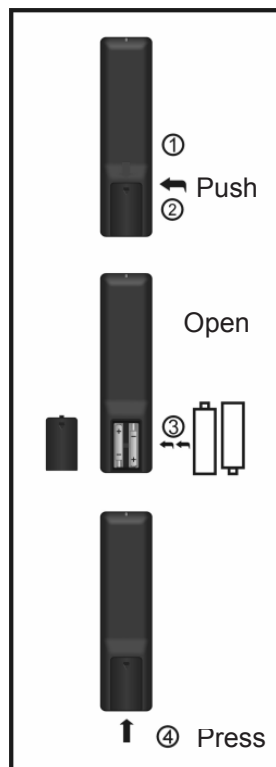


Fig 1

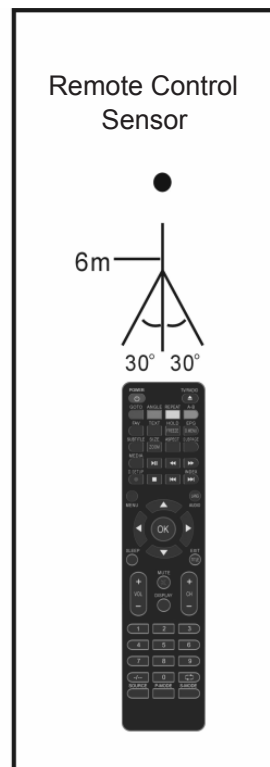


Fig 2


1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

BASIC CONNECTION


- Insert one end into the power jack on the back of the TV.
- Plug the other end of the adapter into the mains socket.

POWER CONNECTION:

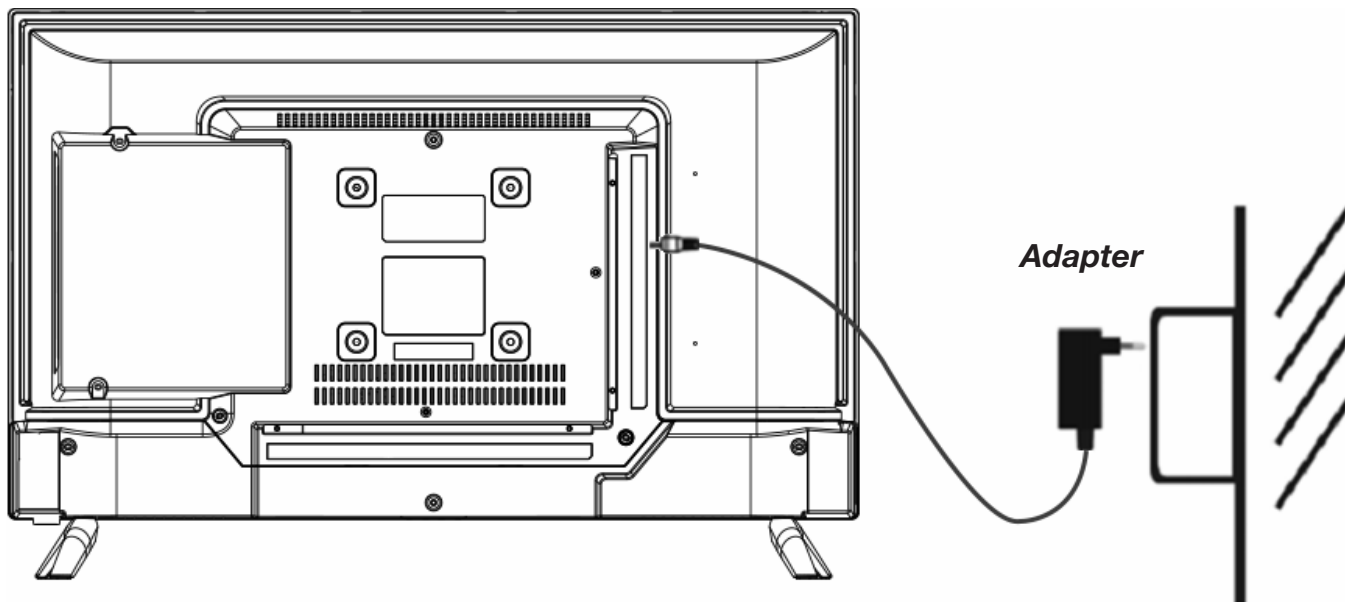

CONNECT EXTERNAL ANTENNA TO UNIT:

Install external antenna into antenna jack for best picture.

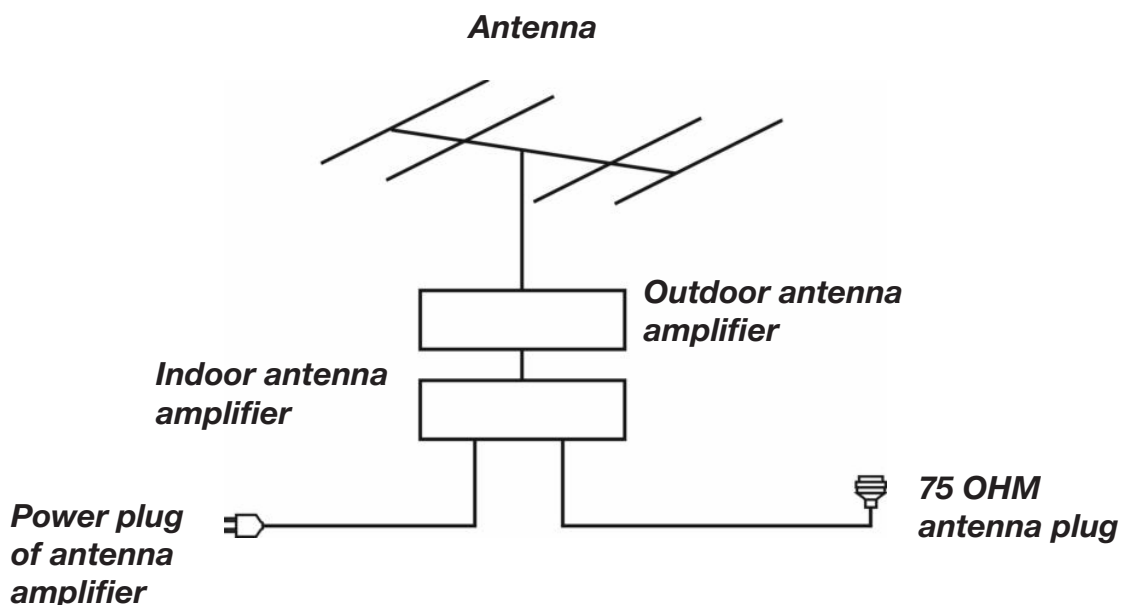


1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

BASIC CONNECTION (cont.)


COAXIAL CONNECTION:

Use a Coaxial cable (not included) to connect the unit with amplifier or other audio decoding devices for audio signal output.

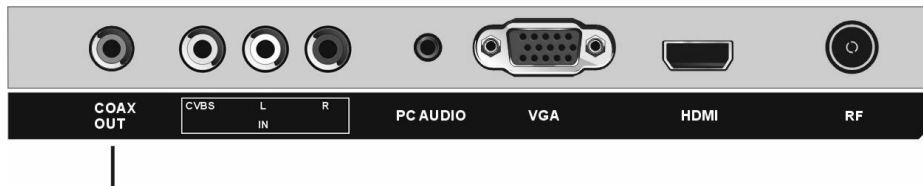

AV CONNECTION:

For basic connection, use the composite Audio L/R (white/red) and CVBS (yellow) cable to connect the unit with other devices.

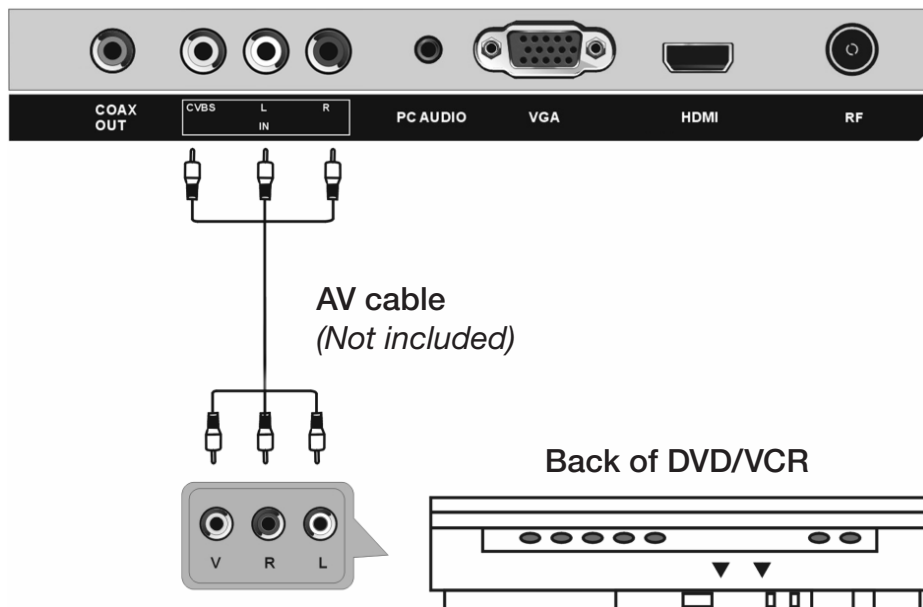


1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

BASIC CONNECTION (cont.)


PC/VGA CONNECTION:

Use VGA cable and Audio cable to connect the unit with TV or PC, and use this product as a monitor.

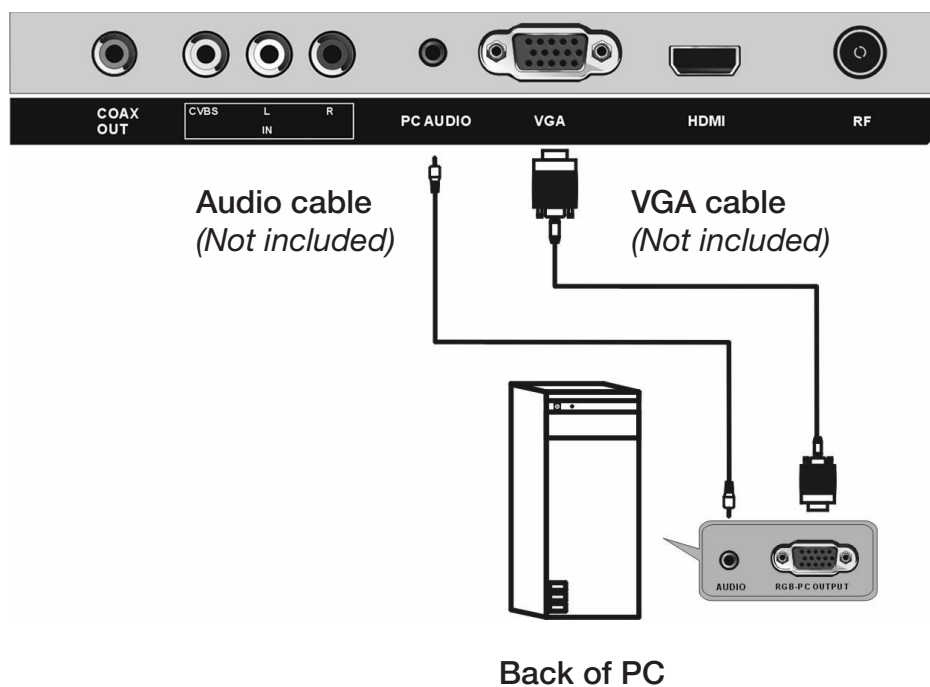

HDMI CONNECTION:

Use HDMI cable to connect the unit with other devices to receive high-definition multimedia signal.

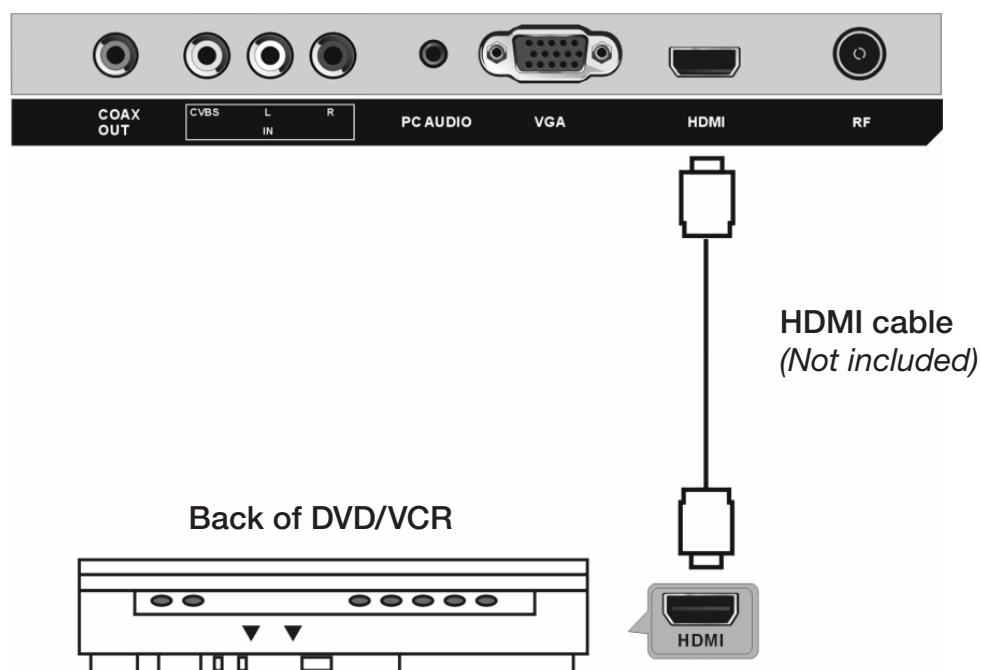

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au


BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

BASIC CONNECTION (cont.)

USB CONNECTION



EARPHONE CONNECTION

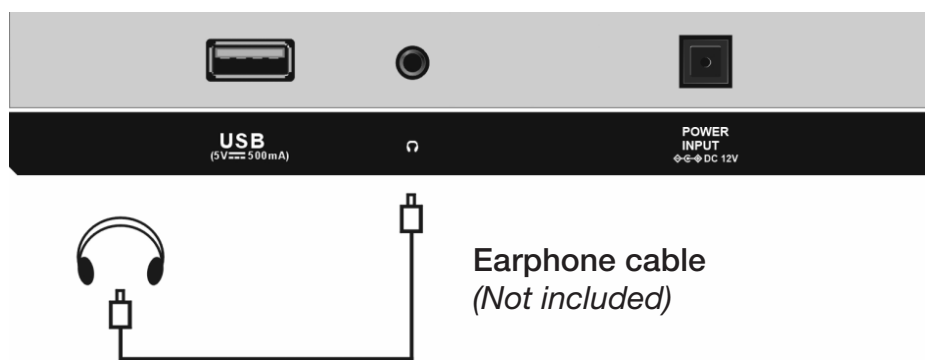

BASIC OPERATIONS - DVD PLAYER

- Ensure equipment and power plug has been connected properly and the unit is set in correct mode before operation.
- Press STANDBY button on the unit or remote control to power ON the unit (indicator will glow blue); press it again to power OFF (standby mode) the unit (indicator will glow red).
- Press SOURCE button on the unit or remote control to switch the unit to DVD mode.

BASIC PLAY:

Press the Power button on the TV or remote control, then press the SOURCE button to select DVD mode. If there is no disc in the DVD player the screen will show “NO DISC”. Insert Disc according to picture next to disc slot. Do not touch the playing surface. Hold the disc around the outside with your fingers and place the disc into the slot. The player will automatically draw the disc into the player. To eject the disc, press the EJECT button on the TV or the “▲” button on the remote control.

STOPPING PLAY:

Press ■ (STOP) button to PRE-STOP. Press ■ (STOP) button again to stop playing NOTE: When player is stopped, the player records the point where STOP was pressed (RESUME function). Press ▶|| button again, playback will resume from this point. When the tray is taken out or ■ (STOP) is pressed again, the RESUME function will be cleared.

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

BASIC OPERATIONS - DVD PLAYER (cont.)


SKIPPING AHEAD OR BACKWARD:

SKIPPING AHEAD

During playback, press ►► button to skip to the next chapter (DVD) or a track (Video CD/CD).

SKIPPING BACKWARD


During playback, press ◀◀ button to skip to the previous chapter (DVD) or track (Video CD/CD).

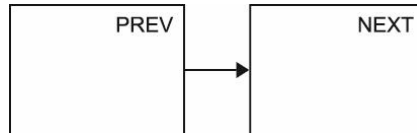

FAST FORWARD/FAST BACKWARD:


During playback, press ►► button or ◀◀ button to fast forward/backward.

Press ►|| button to resume normal play.

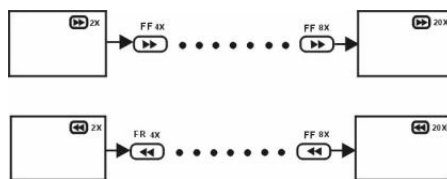

PAUSE/PLAY

During playback, press ►|| button to pause playing, press it again to resume normal playback.

 

MUSIC PLAYBACK:

- Insert the disc which contains music files and after a few seconds, the screen will show all the folders on the disc.
- Select the folder you want to play by navigation buttons and press the OK button to confirm.
- The files in this folder are displayed and select the desired song by navigation buttons, then press the ►|| or OK button to start playback.
- In file selecting page, press ►► or ◀◀ button to turn to next or previous file.
- Press REPEAT button on remote control to change play mode.
 - **Repeat Off:** play one file only.
 - **Repeat One:** repeat one file.
 - **Repeat Dir:** repeat the files in the folder.
 - **Repeat All:** repeat all the files.

NOTE: The available repeat modes may vary for different discs.



1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

BASIC OPERATIONS - DVD PLAYER (cont.)

MOVIE PLAYBACK:

- Insert the disc which contains movie files and after a few seconds, the screen will show all the folders on the disc.
- Select the folder you want to play by navigation buttons and press the OK button to confirm.
- The files in this folder are displayed and select the desired file by navigation buttons, then press the ►|| or OK button to start playback.
- During normal playing, press ►|| or ◀◀ button, the player will play the next or previous file.
- Press REPEAT button to change play mode.
 - **Repeat Off:** play one file only.
 - **Repeat One:** repeat one file.
 - **Repeat Dir:** repeat the files in the folder.
 - **Repeat All:** repeat all the files.

NOTE: The available repeat modes may vary for different discs.

- Press STOP ■ button to return to play list page.



JPEG PLAYBACK:

For JPEG picture CD, select the folder you want to play by the navigation buttons and press OK button to confirm. The files in this folder are displayed and select your pictures by using the up/down navigation buttons and press OK button to start playback. Thumbnail of picture will be displayed while you scrolling across the file name. Then press the ►|| or OK button to start playback.

NOTE: The time of loading and displaying a picture depends on its size. During playback, press the STOP ■ button to return to file selecting page.

- Press REPEAT button to change play mode.
 - **Repeat Off:** play one file only.
 - **Repeat One:** repeat one file.
 - **Repeat Dir:** repeat the files in the folder.
 - **Repeat All:** repeat all the files.

NOTE: The available repeat modes may vary for different discs.



SKIP TO NEXT/PREVIOUS PICTURE

Press ►|| button to skip to the next picture or ◀◀ button to skip to the previous picture. If no key is pressed for 3 seconds, it will skip to next picture automatically.

ROTATING PICTURES

Press RIGHT navigation button to rotate the picture clockwise. Press LEFT navigation button to rotate the picture counter-clockwise.

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

BASIC OPERATIONS - DVD PLAYER (cont.)

FLIPPING PICTURES

Press UP navigation button to flip the picture vertically. Press DOWN navigation button to flip the picture horizontally.

 
PICTURE SHRINK/ZOOM

Press ZOOM button repeatedly to enlarge or shrink picture to ZOOM 2, ZOOM 3, ZOOM 4, ZOOM 1/2, ZOOM 1/3, ZOOM 1/4, OFF.

NOTE: If the picture is enlarged, you may press navigation buttons to pan across other portions of the picture.

ENJOYING VIDEO CD WITH PLAYBACK CONTROL:

- When playing VCD 2.0 with PBC, the player will show the VCD version.
- Press D.MENU button on remote control repeatedly to set PBC ON or OFF.
- Press the D.MENU button to switch PBC ON/OFF mode.”
- Press number buttons to select corresponding track.
- Example: Track 9, press 0 and 9, several seconds later, it will automatically switch to track 9. Track 15, press -/-- and 5, several seconds later, it will automatically switch to track 15.
- Press ►► or ◀◀ button, the player will play the next or previous track.



VIEWING FROM DIFFERENT ANGLE (DVD ONLY):

Some DVDs may contain scenes which have been shot simultaneously from a number of different angles. For these discs, the same scene can be viewed from each of these different angles using the ANGLE button.

REPEAT PLAY:

Press REPEAT button during playback, it will repeat play one chapter or one title (for DVD disc), or repeat play track (for VCD/CD).

NOTE: Press the D.MENU button to switch PBC OFF mode (for VCD).

 
DVD DISC



REPEAT CHAPTER




REPEAT TITLE



REPEAT ALL

 VCD/CD DISC (In the PBC OFF mode)



REPEAT ONE



REPEAT DISC

A-B REPEAT PLAY

Repeating sections between two specific points (A-B repeat)

- Press A-B button during playing at the point where repeat play is to be started (A).
- Press A-B button at the point where repeat play is to be ended (B). Repeat play of the selection between points A and B starts.
- Press A-B button again to return to normal play.

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

BASIC OPERATIONS - DVD PLAYER (cont.)

GOTO:

Press GOTO button continuously to select the item you want to set and enter a time number, chapter number, track number, etc. Accordingly, the disc will be played from the selected point.

DISPLAY:


Press DISPLAY button to display the playing status of your disc.

CHANGE SUBTITLE LANGUAGE (DVD ONLY):

It is possible to change the subtitle language to a different language from the one selected at the initial settings. (This operation works only with discs on which multiple subtitle languages are recorded).

- Press SUBTITLE button during play, the screen will display the current language.
- Press SUBTITLE button again to change language or turn off.

NOTE: When no subtitles are recorded, pressing this button will not work.

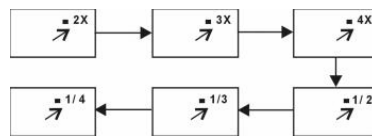

ZOOM PLAY:

This function allows you to enjoy a motion picture. Press ZOOM button when playing, the screen shows: Press navigation button to scroll across the enlarged picture.

CHANGING AUDIO SOUNDTRACK LANGUAGE (DVD ONLY):

It is possible to change the audio soundtrack language to a different language from the one selected at the initial settings (This operation works only with discs on which multiple audio soundtrack languages are recorded).

When playing a disc, press LANG button to select desired and available soundtrack language.

NOTE: When no soundtrack languages are recorded, pressing this button will not work

INITIAL SETTINGS:

Once the initial programming is entered it will be retained in memory until changed, the player can always be operated under the same conditions.

COMMON PROCEDURE FOR INITIAL SETTINGS

- Press D.SETUP button on remote control.
- Use the navigation buttons to select preferred item, and press OK button, each screen for setting the value is displayed. Then move the navigation buttons to set the item and press OK button to confirm the settings.
- Press D.SETUP button again to close setup menu.
- Use LEFT or RIGHT navigation button to switch to another main setup item. Then press RIGHT or OK button to enter submenu page; press LEFT button to return to previous menu page.

1. GENERAL

1.1 TV DISPLAY - It is for selecting TV output mode.

Available options:

- 4:3 PanScan
- 4:3 Letterbox
- 16:9

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

BASIC OPERATIONS - DVD PLAYER (cont.)

1.2 OSD LANGUAGE - It is used to choose your desired OSD language.

1.3 SCREEN SAVER - If no operation is carried out for 5 minutes, screen saver will display on the screen when SCREEN SAVER is ON.

1.4 LAST MEMORY - Enter another input source during DISC playback, and then back to DVD input source again, this unit will resume playback from the point where last playback was stopped, if LAST MEMORY is ON.




2. AUDIO

SPEAKER SETUP - It is used to select desired audio output mode.

Available options:

- STEREO
- MONO L/R
- MIX MONO

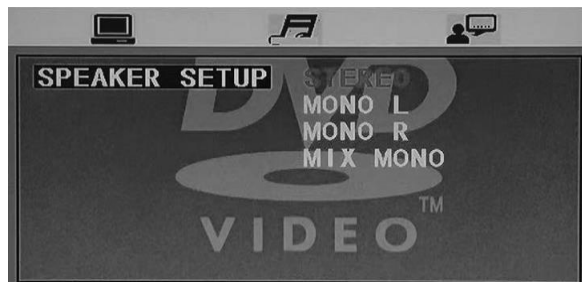

3. PREFERENCE


3.1 TV SYSTEM - Select desired TV system.

3.2 PASSWORD - Change the password. Input the password using number buttons on remote control.

NOTE: The factory default password is "0000", you can change it, but you should keep it safe. If you forget it, please use the universal password "4711".

3.3 PARENTAL - Exchange the location of "PARENTAL" and "PASSWORD"

3.4 DEFAULT - It is used to reset to factory settings.

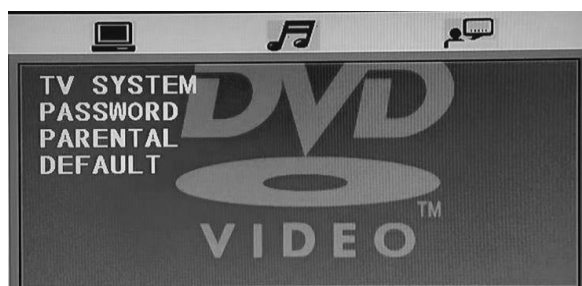

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

BASIC OPERATIONS - TV

NAVIGATION PRINCIPLES IN THE MENU:

- Press the MENU button on the remote control to display the main menu.
- Press ▲▼◀▶ to select different menus or settings.
- Press the OK button to enter the sub-menu.
- Press the MENU button to save the settings and return to the previous page.
- Press the EXIT button to exit the menu.

BASIC APPLICATIONS:

- Press the POWER button on remote control to turn on the power. Press this button again to put the TV on standby.
- Press the SOURCE button on remote control to switch between the different sources available.

SELECTING THE DESIRED PROGRAM:

- Press the CH + button to switch to the next channel.
- Press the CH – button to switch to the previous channel.
- Press the numeric buttons to directly select the desired channel. Press the SOURCE button on remote control to switch between the different sources available.

VOLUME CONTROL:

- Press the VOL+ or VOL- button to adjust the volume level.
- Press the MUTE button to mute the sound and press it again to restore it.

SELECTING THE SOURCE:

- Press the SOURCE button to display the list of available sources.
- Press UP/DOWN buttons to select the source and press the OK button to confirm.

VIDEO SIZE SETTING:

- Press the ASPECT button on the remote control repeatedly to select the VIDEO SIZE directly.

Available options:

- Auto
- 4:3
- 16:9
- Zoom1
- Zoom2

NOTE: The available video size may be different for different input sources.

MULTI-AUDIO SETTING:

- Press the AUDIO button on the remote control repeatedly to select the desired audio language.

NOTE: To enable this function, make sure that the channel you are viewing supports multi-audio languages.

INFORMATION DISPLAY:

- Press the DISPLAY button on the remote control to display information of current programs.

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

BASIC OPERATIONS - TV (cont.)


FIRST-TIME INSTALLATION:

1. TUNING SETUP

Connect to power source and turn on this TV, logo page will display on the screen.

Press UP/DOWN navigation buttons on remote control to select the language to be used for menus and message.

Press OK button on remote control to confirm selection.

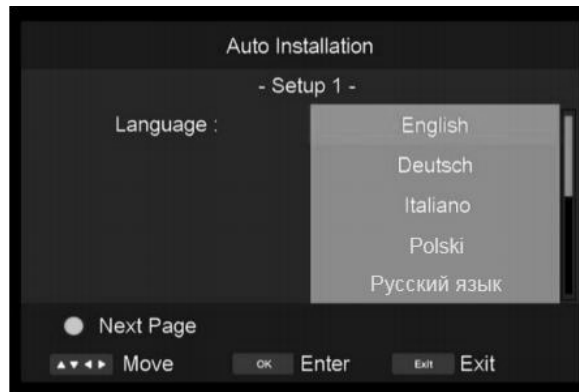

2. COUNTRY/REGION

Press UP/DOWN navigation buttons on remote control to select the country/region.


Press OK button on remote control to confirm selection.



3. ANTENNA TYPE

Press UP/DOWN navigation buttons on remote control to select Air/Cable.

Press OK button on remote control to confirm selection.

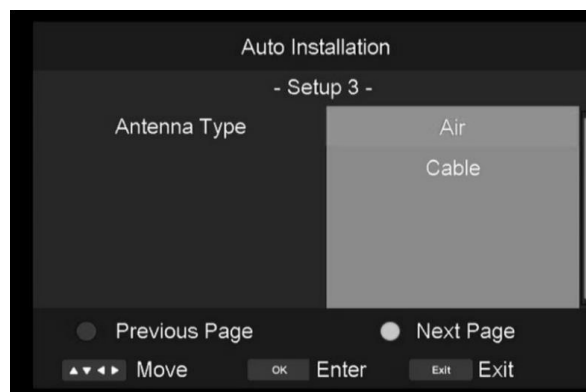


1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

BASIC OPERATIONS - TV (cont.)


4. AUTO SEARCH

Press UP/DOWN navigation buttons on remote control to select All, ATV, DTV.
Press OK button on remote control to confirm selection.

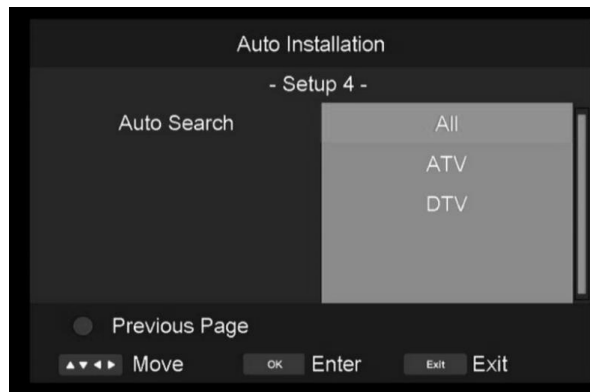

TV GUIDE (FOR TV MODE ONLY):

- Press the EPG button on the remote control to display the program guide.
- Press the UP/DOWN navigation button to select a preferred program.
- Press the LEFT/RIGHT navigation button to switch between the left column and right column.
- Press RED button on remote control to switch between Daily and Weekly programme.
- Press GREEN button on remote control to select desired Remind mode, when the cursor is on the right column.
- Press YELLOW button on remote control to display program guide of previous day.
- Press BLUE button on remote control to display program guide of next day.

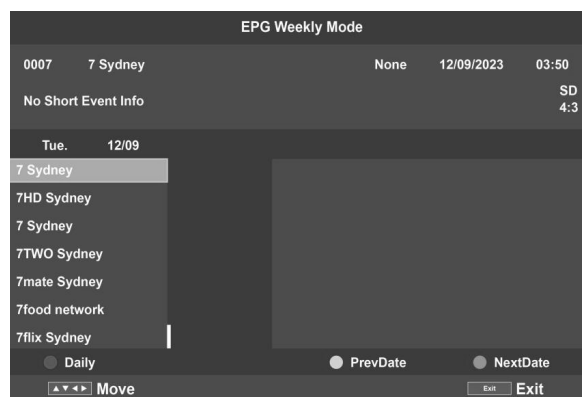

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

BASIC OPERATIONS - TV (cont.)


FAVOURITE LIST:

- When viewing an available channel, press FAV button on remote control to enter Favourite List menu page.
- Press UP or DOWN navigation button to select preferred channel.
- Press OK button to confirm selection.



QUICK SELECT:

- Press OK button on remote control to enter Channel List page directly.
- Press UP or DOWN navigation button to select desired channel and press OK button to watch it.
- Press OK button to confirm selection.

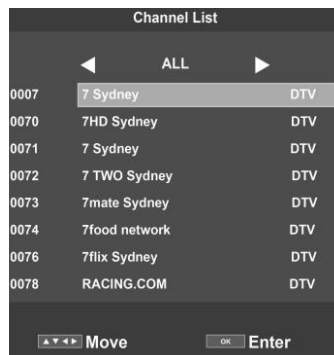

TELETEXT:

- Press the TEXT button on the remote control to display the available teletext information and press it repeatedly to stop playing the teletext.

TV/RADIO (FOR TV MODE ONLY):

- Press the TV/RADIO button on the remote control to switch the unit between TV and radio mode.

SUBTITLE:

- Press the SUBTITLE button on the remote control to select a desired subtitle.

NOTE: To enable this function, make sure that the channel you are viewing supports multi-subtitles.

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

BASIC OPERATIONS - TV (cont.)

RECORDER (FOR TV MODE ONLY):

- Insert your USB memory device into USB slot first.
- When watching digital programs, press ● (REC) button on remote control to call out a reminding message ; select “Yes” and press OK button on to start recording.
- Press ■ button on remote control to call out a reminding message; select “Yes” and press OK button to stop recording.



SETTING THE RECORDING DURATION TIME

- Press ● (REC) button on remote control to call out a reminding message; select “Yes” and press OK button on to start recording.
- Press ● (REC) button again to call out Rec Duration Time and set your desired recording.




TIME-SHIFT (FOR TV MODE ONLY):

- Insert your USB memory device into USB slot first.
- When watching digital programs, press ►|| button to call out reminding message; select “Yes” and press OK button to enable time-shift function.
- Press ■ button on remote control to call out a reminding message; select “Yes” and press OK button to stop time shift.

MEDIA PLAYBACK:

- Insert a USB memory device into USB slot.
- Press SOURCE button on the unit or remote control to switch this unit to USB mode.
- Press the LEFT/RIGHT navigation button to move the cursor.
- Press EXIT button on remote control to return to previous menu page.

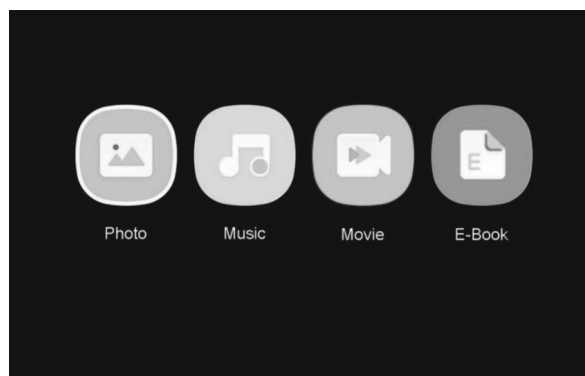

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

BASIC OPERATIONS - TV (cont.)

1. PHOTO

Press the LEFT/RIGHT navigation button to select “Photo” in the main menu and press the OK button to enter it.

Use the navigation buttons to select the desired folder or file.

To delete files, press the RED button on remote control to call out reminding message and select “Yes” to delete files.

Press navigation button to select a file that you want and press the ►|| button to start playback.

Press ■ button to stop playback.

Press the OK button to call out the tool bar below. Use the navigation buttons to select a desired option and press OK to confirm it.

Press the EXIT button to dismiss the tool bar.



2. MUSIC

Press the LEFT/RIGHT navigation button to select “Music” in the main menu and press the OK button to enter it.


Use navigation buttons to select a desired folder or file.

To delete files, press the RED button on remote control to call out reminding message and select “Yes” to delete files.

Press navigation button to select a file that you want and press the ►|| button to start playback.

Press the ►|| button to start playback.

Press the EXIT button to return.

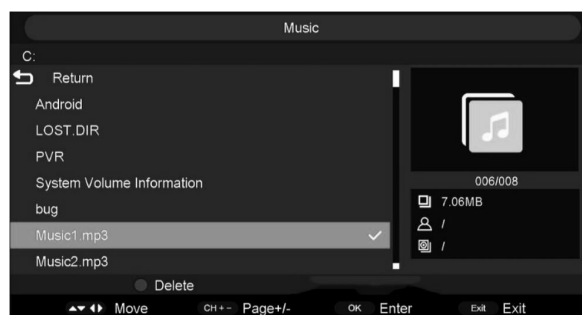

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

BASIC OPERATIONS - TV (cont.)

3. MOVIE

Press the LEFT/RIGHT navigation button to select “Movie” in the main menu and press the OK button to enter the selection.


Use the navigation buttons to select a desired folder or file.

To delete files, press the RED button on remote control to call out reminding message and select “Yes” to delete files.

Press navigation button to select a file that you want and press the ►|| button to start playback.

Press the OK button to call out the tool bar below. Use the navigation buttons to select a desired option and press OK to confirm it.

Press the EXIT button to return.

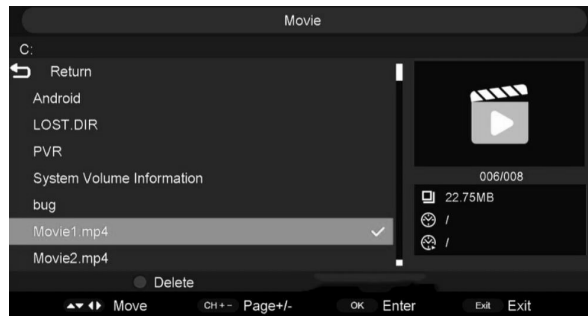


4. E-BOOK

Press the LEFT/RIGHT navigation button to select “E-Book” in the main menu and press the OK button to enter the selection.

Use navigation buttons to select a desired folder or file.

To delete files, press the RED button on remote control to call out reminding message and select “Yes” to delete files.

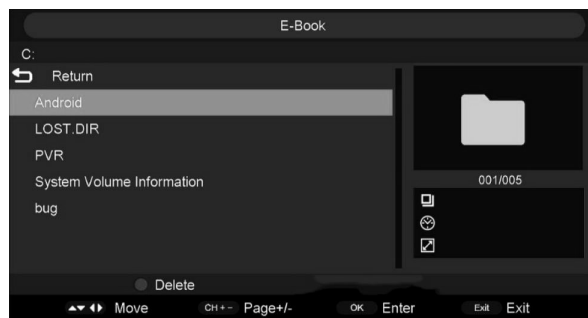

Press navigation button to select a file that you want and press the button to start playback.

Press Red button to Add/delete the bookmark.

Press Green button to enter the desired page directly.

Press Yellow button to list the pages with bookmark.


Press Blue button to show the playlist.

Press the EXIT button to return.

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

BASIC OPERATIONS - TV (cont.)

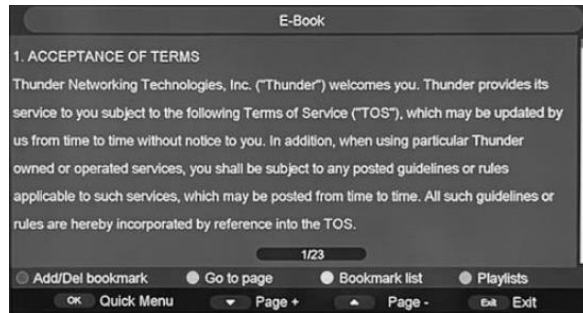

5. REMOTE CONTROL OPERATIONS WHEN PLAYING MULTIMEDIA FILES:

Press the ►|| button on the remote control to play or pause playing.

Press the ■ button on the remote control to stop playing.

Press the ◀◀ button on the remote control to move fast backward.

Press the ►► button on the remote control to move fast forward.

Press the ◀◀ button on the remote control to play the previous file.


Press the ►► button on the remote control to play the next file.

NOTE: To play your multimedia files, make sure you have selected the correct icon in the main menu of MEDIA PLAYBACK. That is to say, you can only play Photo files in PHOTO mode, Music files in MUSIC mode, and so on.

MAIN MENU

1. PICTURE

- Press MENU button on remote control to display the main menu.
- Press LEFT/RIGHT button to select PICTURE in the main menu, then press OK button to enter.
- Press UP/DOWN button to select the option that you want to adjust in the PICTURE menu.
- Press LEFT/RIGHT button to adjust.
- After finishing your adjustment, press MENU button to return to the previous menu.

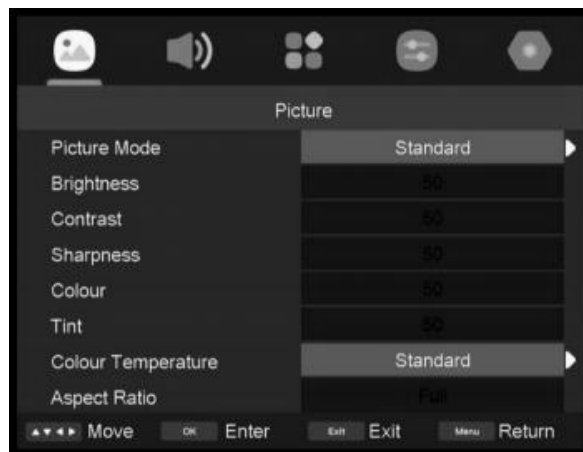

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

MAIN MENU (cont.)

1.1 PICTURE MODE

Press UP/DOWN button to select Picture Mode, then press OK button to select.

Options:

- Standard
- Dynamic
- Movie
- User

1.2 BRIGHTNESS/CONTRAST/SHARPNESS/COLOUR/TINT

Press UP/DOWN button to select option, then press LEFT/RIGHT button to adjust.

BRIGHTNESS - Adjust the visual perception output of the entire picture, it will affect the brightness of the picture.

CONTRAST - Adjust the highlight intensity of the picture, but the shadow of the picture is invariable.

SHARPNESS - Adjust the peaking in the details of the picture.

COLOUR - Color adjustment of picture.

NOTE: Brightness, Contrast, Sharpness and Colour are adjustable only when Picture Mode is "User". Tint is adjustable only for NTS C system.

1.3 COLOUR TEMPERATURE

Press UP/DOWN button to select Colour Temperature. This item is to change the overall color cast of the picture.

Options:

- Standard
- Cool
- Warm

STANDARD - Produces a vivid image.

COOL - Produces a gentle blue hued image.

WARM - Produces a red hued image.

1.4 ASPECT RATIO

Press UP/DOWN button to select Aspect Ratio. This item is used to adjust the video size.

Press RIGHT button to select Auto, 4:3, 16:9, Zoom1, Zoom2.

1.5 NOISE REDUCTION

Press UP/DOWN button to select Noise Reduction. This item is used to improve the quality of the picture.

Press RIGHT button to select High/Middle/Low/Off.

1.6 BACKLIGHT

Press UP/DOWN button to select Backlight. This item is to adjust image backlight.


1.7 HDMI MODE

Screen Mode (Only available on HDMI source.)

MAIN MENU (cont.)

2. SOUND

- Press MENU button to display the main menu.
- Press LEFT/RIGHT button select SOUND in the main menu, then press OK button to enter.

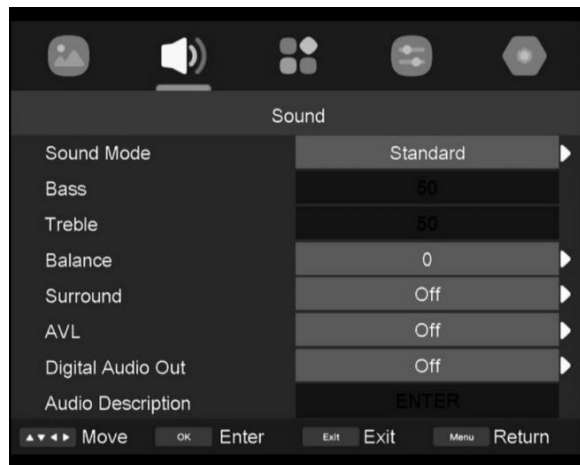

2.1 SOUND MODE

Press the UP/DOWN button to select Sound Mode, then press OK button to select.

Options:

- Standard
- Movie
- Music
- Speech
- User

STANDARD - Produces a balanced sound in all environments.

MOVIE - Enhance treble and bass for a rich sound experience.

MUSIC - Increase bass again for better bass.

SPEECH - Reduce treble and bass gain to accentuate vocal effects.

USER - Select to customize sound settings.

2.2 BASS/TREBLE

Press UP/DOWN button to select option, then press LEFT/RIGHT button to adjust.

BASS - Adjust the bass effect. Increased or decreases lower pitched sounds.

TREBLE - Adjust the treble effect. Increases or decreases high pitched sounds.

NOTE: Bass and Treble are adjustable only when Sound Mode is "User".

2.3 BALANCE

Press UP/DOWN button to select Balance.

Press LEFT/ DOWN button to adjust the value (50~50)

2.4 SURROUND

Press UP/DOWN button to select Surround.

Press LEFT/DOWN button to select On or Off.

2.5 AVL

Press UP/DOWN button to select AVL and press RIGHT to select On/Off. This item is used to reduces sudden volume changes automatically.

2.6 DIGITAL AUDIO OUTPUT

Press UP/DOWN button to select Digital Audio Out, then press RIGHT button to select Off/Auto/PCM.

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

MAIN MENU (cont.)


2.7 DIGITAL AUDIO OUTPUT

Press UP/DOWN button to select Audio Description, then press RIGHT button to enter subpage. For Visual Impaired users, this function can assist them to know a certain scene or action through the narration.

NOTE: Audio Description function works only when you are viewing programs that contain related narration information.

3. CHANNEL MENU

- Press MENU button to display the main menu.
- Press LEFT/RIGHT button select Channel in the main menu, then press OK button to enter.

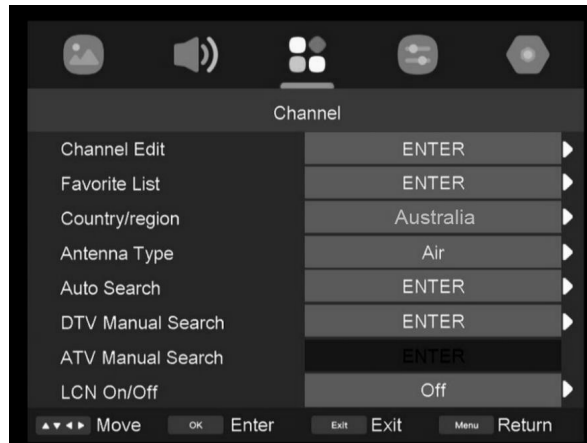

3.1 CHANNEL EDIT

Press UP/DOWN button to select Channel Edit, then press RIGHT button to enter sub menu.

3.2 FAVOURITE LIST

Press UP/DOWN button to select Favorite List, then press RIGHT button to enter sub menu.

3.3 COUNTRY/REGION

Press UP/DOWN button to select Country/region, then press RIGHT button to select.

3.4 ANTENNA TYPE

Press UP/DOWN button to select Antenna Type, then press RIGHT button to select.

Options:

- Air
- Cable

3.5 AUTO SEARCH

Press UP/DOWN button to select Auto Search, then press RIGHT button to enter sub menu.

3.6 DTV MANUAL SEARCH

Press UP/RIGHT button to select DTV Manual Search, then press RIGHT button to enter sub menu.

3.7 ATV MANUAL SEARCH

Press UP/DOWN button to select ATV Manual Search, then press RIGHT button to enter sub menu.

3.8 LCN

Press UP/DOWN button to select LCN, then Press RIGHT button to select LCN: On/Off.

Turn on the LCN for sorting and grouping programs.

3.9 SIGNAL INFORMATION

Press UP/DOWN button to select Signal Information, then Press RIGHT button to enter sub menu.


1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

MAIN MENU (cont.)

4. FEATURE MENU

- Press MENU button to display the main menu.
- Press LEFT/RIGHT button select Feature in the main menu, then press OK button to enter.

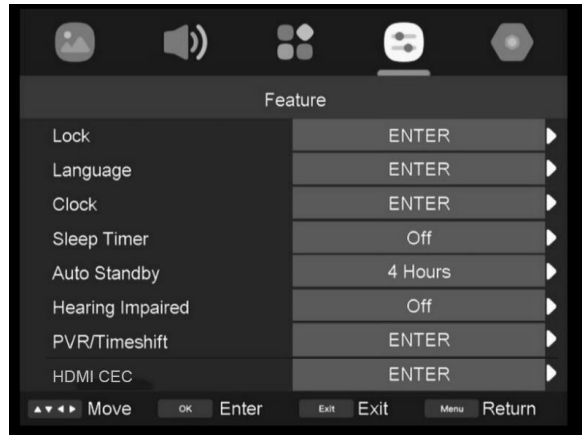

4.1 LOCK

Press UP/DOWN button to select Lock, then press RIGHT button to enter subpage.

NOTE: The factory default password is “0000”, you can change it, but you should keep it safe. If you forget it, please use the universal password “4711”.

4.2 LANGUAGE

Press UP/DOWN button to select Language, then press RIGHT button to enter subpage to select preferred OSD language.

4.3 CLOCK

Press UP/DOWN button to select Clock, then press RIGHT button to enter subpage.

4.4 SLEEP TIMER

Press UP/DOWN button to select Sleep Timer, then press RIGHT button to enter to select Off / 10mins / 20mins / 30mins / 60mins / 90mins / 120mins / 180 mins / 240mins.

4.5 AUTO STANDBY

Press UP/DOWN button to select Auto Standby, then press RIGHT button to enter to select Off / 4 Hours / 6 Hours / 8 Hours.

4.6 HEARING IMPAIRED

Press UP/DOWN button to select Hearing Impaired, then press RIGHT button to enter to select On or Off.

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au


BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

MAIN MENU (cont.)

4.7 PVR/TIMESHIFT

Press UP/DOWN button to select PVR/Timeshift, then press RIGHT button to enter to enter sub menu.


- Partition Select
- Auto Timeshift
- Timeshift Buffer
- Schedule
- List
- Record List
- Recorder Start

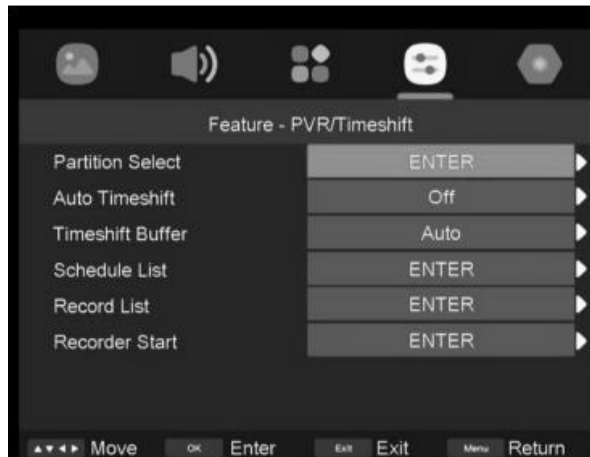

4.8 HDMI CEC

Press UP/DOWN button to select HDMI CEC, then press RIGHT button to enter to enter sub menu.

- CEC Control
- TV Auto Power ON
- Device Auto Power Off
- Speaker Preference
- HDMI ARC
- Device List

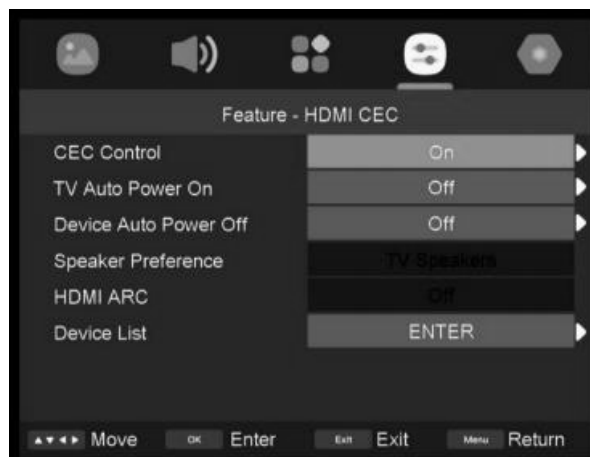

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

MAIN MENU (cont.)

5. SETUP MENU

- Press MENU button to display the main menu.
- Press LEFT/RIGHT button select Setup in the main menu, then press OK button to enter.



5.1 OSD TIMER

- Press UP/DOWN button to select OSD Timer, then press RIGHT button to enter to select 5 Seconds/10 Seconds/15 Seconds/20 Seconds/25 Seconds/30 Seconds/Never.

5.2 PC SETUP (UNDER PC MODE)

- Press UP/DOWN button to select PC Setup, then press RIGHT button to enter the sub menu.
- This item is used to adjust OSD position.

5.3 BLUE SCREEN

- Press UP/DOWN button to select Blue Screen, then press RIGHT button to enter to select On or Off.
- The screen background will turn blue at very weak or no signal condition, if Blue Screen in On.

5.4 STORE MODE

- Press UP/DOWN button to select Store Mode, then press RIGHT button to enter to select On or Off.

5.5 RESET TV SETTING

- Press UP/DOWN button to select Reset TV Setting, then press RIGHT button to enter sub menu.
- This item is used to reset to factory default settings.

MAINTENANCE


- Be sure to press STANDBY button to set the player to the standby mode and disconnect the power plug before maintaining the player.
- If the surface is extremely dirty, wipe clean with a cloth which has been dipped in a weak soap water solution and wrung out thoroughly, and then wipe again with a dry cloth.
- Never use alcohol, benzene, thinner, cleaning fluid or other chemicals. And do not use compressed air to remove dust.
- Wipe the player with a dry, soft cloth IN CASE there are scratches on the display panel the warranty is void.

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

WALL MOUNTING


- Contact a professional for assistance when wall mounting your TV. We are not responsible for any damage to the product or injury to yourself if you mount the TV on your own.
- Do not wall mount the TV while TV is turned on. It may cause personal injury due to electric shock.
- Use standard BM4*10mm screws (4 pieces, not included) to mount this TV.

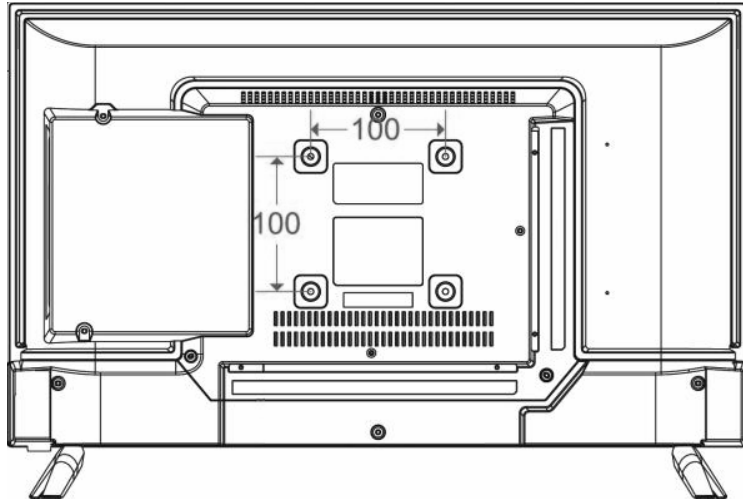

Back of TV


STAND INSTALLATION

Your TV may be packaged with the Stand and the Cabinet separated. Before enjoying this TV, please carry out the Stand Installation according to the instructions below.

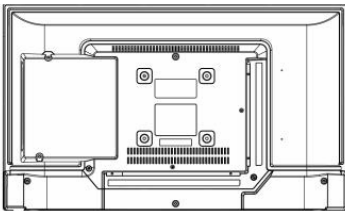


STEP 1

Place the TV faced down on a soft cloth or cushion to prevent the panel from being damaged.

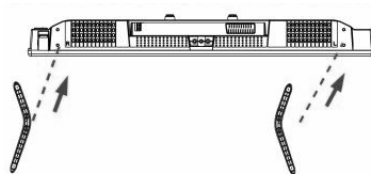

STEP 2

Align the Stand with TV bottom and then force the end of stand until the TV is fully seated on the stand.

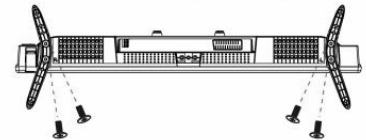

STEP 3

Tighten the included screws with a screwdriver.

NOTES:

- Unplug the power plug first when installing or removing the TV Stand.
- To avoid any damage to this TV, contact one or more people for assistance when installing or removing the TV stand.

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

SPECIFICATIONS

DISPLAY DEVICE	24" LED TV with DVD Player
RESOLUTION	1366 × 768px
DISPLAY COLOURS	16.7M
CONTRAST RATIO	3000:1
ASPECT RATIO	16:9
LIFE TIME	30,000hrs
USB MULTIMEDIA PLAYBACK FORMAT	MOVIE: AVI, MPEG, MKV, FLV, VOB
	MUSIC: MP3
	PHOTO: JPG/JPEG
POWER SOURCE	DC 12V
POWER CONSUMPTION	Max. 36W
OPERATION TEMPERATURE	-5°C–45°C
DIMENSIONS (LxWxH)	553 × 166 × 370mm
WEIGHT	2.47kg

Specifications are subject to change without notice.

TROUBLESHOOTING

Check the following points before assuming malfunctions of this unit:

SYMPTOM - GENERAL	REMEDY
No power	Insert the power plug securely into the power outlet.
No picture	Ensure that the equipment is connected properly.
No sound / distorted sound	<ul style="list-style-type: none"> • Ensure that the equipment is connected properly. • Ensure that the input setting for the TV and stereo system are correct. • Adjust the master volume to a suitable volume by pressing VOL+/VOL button.
No operations can be performed with the remote-control	<ul style="list-style-type: none"> • Check the batteries are installed with the correct polarities. • The batteries are exhausted: Replace them with new ones. • Point remote control at the remote-control sensor and operate it again. • Operate the remote-control unit at a distance of no more than 6m from the remote control sensor. • Remove the obstacles between the remote-control and remote-control sensor.
No key operation (by the main unit and/or the remote control) is effective	Disconnect the power plug and then reconnect it. (The player may not be operating properly due to lightning, static electricity or some other factors.)
SYMPTOM - TV MODE	REMEDY
No or poor picture	<ul style="list-style-type: none"> • Adjust antenna or use an external antenna. • Relocate the unit near a window (if inside a building). • Move units away from this product that causes interference. • Do Auto Tuning again.
No or poor sound	<ul style="list-style-type: none"> • Check the audio settings. • Press MUTE button on remote control to cancel mute function. • Unplug the headphone.
Noise or other interference	Electronic equipment near the unit is causing interface. Relocate the unit or move the equipment.

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

WARRANTY STATEMENT

Aussie Traveller Pty Ltd ACN 642 775 460 (**Aussie Traveller**) offers the following warranty in relation to the products it supplies directly or through an authorised manufacturer, dealer or approved service repair agent (**Product**).

Australian Consumer Law

The benefits of this warranty are in addition to any rights and remedies imposed by Australian State and Federal legislation that cannot be excluded. Nothing in this warranty is to be interpreted as excluding, restricting or modifying any State or Federal legislation applicable to the supply of goods and services which cannot be excluded, restricted or modified.

If you are a consumer as defined in the Australian Consumer Law: *Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.*

Warranty

Aussie Traveller warrants that, subject to the exclusions and limitations below, all parts of the manufacture and assembly of the Product will be free from defects in materials and workmanship (**Warranty**) for a period of 12 months from the date of purchase as follows:

1. This Warranty is activated at the time of purchase by the final retail customer (being the owner of the Product).
2. In the event the Product is purchased by a manufacturer, dealer or approved service repair agent, this Warranty will commence at the time the final retail customer makes payment for the Product to the wholesale purchaser.
3. If the Product is purchased directly from Aussie Traveller for use by final retail customer and not to be on sold in any way, the Warranty will commence at the time of the original purchase.

Warranty Period

This Warranty cannot be assigned or transferred to a subsequent owner of the Product.

The purchaser or final retail customer should inspect the Product immediately when received or at vehicle handover, to ensure that it appears free from any damage or defect, and matches the description provided.

If after accepting the Product, a defect appears in the manufacture or assembly of the Product before the end of the Warranty Period and Aussie Traveller finds the Product to be defective in materials or workmanship, Aussie Traveller will, in its sole discretion, either:

- a. replace, repair or refund the Product or the defective part of the Product free of charge; or
- b. cause the Product or the defective part of the Product to be replaced or repaired by a qualified repairer free of charge.

In arranging Warranty inspection, service and repair, Aussie Traveller will seek to provide the details of an approved service agent within your geographic area. Should one not be available, or if the Product is in use in travel, Aussie Traveller reserves the right to seek to arrange a repair or replacement at the next available location on the route of travel.

Aussie Traveller reserves the right to replace defective parts of the Product with parts and components of similar quality, grade and composition where an identical part or component is not available.

Products presented for repair may be replaced by refurbished goods of the same type rather than being repaired. Refurbished parts may be used to repair the Product.

Aussie Traveller Awning Products

This Warranty covers specified defects in materials or workmanship for Awning Products as follows:

1. The vinyl fabric is warranted against:
 - a. holes caused by mildew (mildew will form on dust and dirt and stain fabric if fabric is not kept clean).
 - b. excessive cracking, peeling, hardening or loss of strength while used under normal conditions.
 - c. excessive fading (a slight colour change may occur due to ultraviolet rays).
2. All hardware components including the roller are warranted not to bend or break under normal use (excluding high winds, water pooling and accidents).

Making a Warranty Claim

If a defect covered by this Warranty appears, the Customer must first contact Aussie Traveller within 7 days of first becoming aware of the defect. Aussie Traveller will assist the Customer to rectify and resolve any Product issue that may arise.

When making a claim under this Warranty, Aussie Traveller requires that the following information be provided before any further action will be taken.

1. Original Invoice (Document or Number);
2. Make and model of the Product;
3. Make and model of the vehicle (if Product fitted);
4. Vehicle build date (if Product fitted);
5. Vehicle chassis number;
6. Description of damage and/or repair required;
7. Photos of the damage and/or repair; and
8. Appropriate documentation (such as historical and maintenance records).

Aussie Traveller reserves the right to request more information or images should what is provided not be sufficient to make an assessment for the Warranty claim.

The Product must be made available to Aussie Traveller or its authorised repair agent for inspection and testing. If such inspection and testing find no defect in the Product, the final retail customer must pay Aussie Traveller's usual costs of service work and testing.

The final retail customer must bear the cost of the transport of the Product to and from Aussie Traveller or the authorised repair agent, and all insurance of the Product.

Exclusions

This Warranty will not apply where:

- the Product has been repaired, altered or modified by someone other than Aussie Traveller, or without the written consent of Aussie Traveller or an authorised repair agent;
- the alleged defect in the Product is within acceptable industry tolerances and variances;
- Aussie Traveller cannot establish any fault in the Product after testing and inspection;
- the Product has been used other than for the purpose for which it was designed;
- the alleged defect in the Product has arisen due to the final retail customer's failure to properly use and maintain the Product in accordance with any of Aussie Traveller's instructions, recommendations and specifications (including applicable maintenance schedules);
- the alleged defect in the Product has arisen due to the final retail customer's request to customise the Product;
- the Product has been subject to abnormal conditions, including environment, temperature, high or excessive wind, water, fire, humidity, pressure, stress or similar;
- the alleged defect has arisen due to abuse, misuse, neglect or accident;
- unauthorised parts or accessories have been used on or in relation to the Product;
- the Product has been overloaded or involved in an accident;
- the alleged damage or defect has been caused by normal wear and tear;
- the alleged damage to fabric has been caused by storm, wind or rain, or stretching of fabric caused by water pooling on fabric;
- breakage or bending of hardware components has been caused by storm, wind or rain, or water pooling on fabric.

Replacement Warranty Item

If, under Warranty, a Product is replaced or repaired by Aussie Traveller or an Aussie Traveller agent, unless provided in writing to indicate otherwise, the replacement Product will carry the **remaining** Warranty terms and conditions, including length of time, of the original purchased Product.

Change of Mind

Aussie Traveller understands that at times, final retail customers may change their mind. Choose carefully as return and credit requests for items purchased by mistake or "change of mind" reasons may not be approved. Aussie Traveller will not accept Product returns under these circumstances unless by written approval by an authorized Aussie Traveller representative. If approved, an administration and restocking fee may apply.

Limitations

Aussie Traveller makes no express warranties or representations other than set out in this Warranty.

The repair or replacement of the Product or part of the Product is the absolute limit of Aussie Traveller's liability under this express Warranty.

Contact

Australia Wide: 1300 663 868

Melbourne Office

235 Barry Road
Campbellfield, Melbourne, 3061
Ph: +61 3 9357 6565
enquiries@aussietraveller.com.au

Brisbane Head Office, Factory & Showroom

11-15 Oasis Court
Clontarf, Brisbane, 4019
Ph: +61 7 3284 3284
enquiries@aussietraveller.com.au

To receive a copy of the Aussie Traveller Warranty Terms & Conditions or information regarding specific Aussie Traveller products, please contact Aussie Traveller Head Office on (07) 3284 3284 or email enquiries@aussietraveller.com.au.