

DC Door Operating Instructions Left Hand Hinge

Operate Left Hand Hinge Door from Outside

1. **To Unlock** - Insert key into lock cylinder (see Diagram 3) and turn approximately 33 degrees anti-clockwise. Turn-key back to original position and then the key can be removed
2. **To Open** – Rotate outer handle (see Diagram 3) anti-clockwise approximately 45 degrees and then pull the handle to open the door, outer handle will return to normal position.
3. **To Separate Security Door from Outer Door** – After the door is open, rotate release lever anti-clockwise (see Diagram 4) and this will allow the two (2) doors to separate (to rejoin simply close together firmly).
4. **To close door** – Rejoin security door and outer door by closing together firmly. Close door into frame. Ensure the center lock tongue engages the center striker plate
IMPORTANT: At this point the door is simply closed and can be opened by rotating handle(s) outside or inside.

BEFORE TRAVELLING THIS DOOR NEEDS TO BE LOCKED


NB: The outer door can be joined before or after the security door is closed/locked. In either case ensure that both top and bottom striker catches are activated to prevent the outer door opening when travelling.

5. **Lock Door** – Close as per step 4. Rotate outer handle approximately 45 degrees (see Diagram 3) clockwise to pull top and bottom striker bolt to the bottom of the striker. Insert key into lock cylinder (see Diagram 3) and turn approximately 33 degrees clockwise. Key will return back to original position itself and then can be removed. Door is now locked. (The outer handle cannot be rotated in an anti-clockwise direction)
NB: Door will not lock with key if the top and bottom striker bolts are not pulled to the bottom of the striker.

Operate Left-Hand Hinge Door from Inside

1. **To Unlock** – Turn deadlock catch (see Diagram 4) clockwise and then rotate inner handle approximately 45 degrees (see Diagram 4) clockwise to unlock/open door.
2. **To Lock** – Close door as in step 4. Rotate handle approximately 45 degrees (see Diagram 4) anti-clockwise to pull top and bottom lock bolts to the bottom of the striker. Rotate deadlock catch (see Diagram 4) anti-clockwise to lock. (The inner handle cannot be rotated in clockwise direction)

Diagram 1

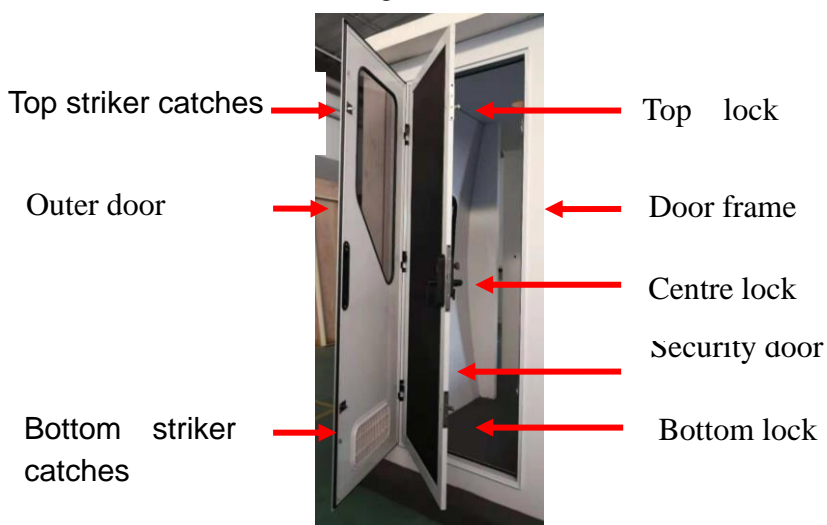

Left Hand Hinge Door

Diagram 2




Outside Left Hand Door


Diagram 3




Diagram 4

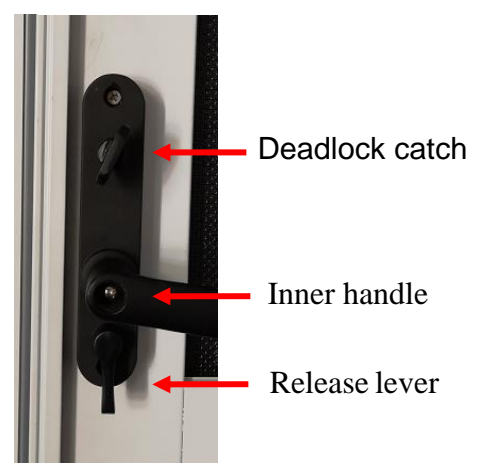

Outside view of left hand lock

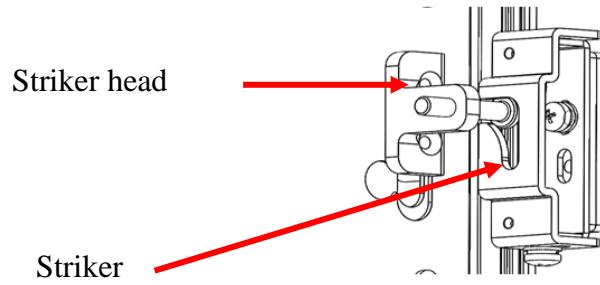

Inside view of left hand lock

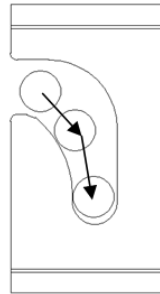

DC Door Operating Instructions Right Hand Hinge

Operate right Hand Hinge Door from Outside

1. **To Unlock** - Insert key into lock cylinder (see Diagram 3) and turn approximately 33 degrees clockwise. The key will return back to original position itself and then the key can be removed
2. **To Open** – Rotate outer handle (see Diagram 3) clockwise approximately 45 degrees and then pull the handle to open the door, outer handle will return to normal position.
3. **To Separate Security Door from Outer Door** – After the door is open, rotate release lever clockwise (see Diagram 4) and this will allow the two (2) doors to separate (to rejoin simply close together firmly).
4. **To close door** – Rejoin security door and outer door by closing together firmly. Close door into frame. Ensure the centre lock tongue engages the centre striker plate.

IMPORTANT: At this point the door is simply closed and can be opened by rotating handle(s) outside or inside.

BEFORE TRAVELLING THE DOOR MUST BE LOCKED.

NB: The outer door can be joined before or after the security door is closed/locked. In either case ensure that both top and bottom striker catches are activated to prevent the outer door opening when travelling.


5. **Lock Door** – Close as per step 4. Rotate outer handle approximately 45 degrees. (see Diagram 3) anti-clockwise to pull top and bottom striker bolt to the bottom of the striker. Insert key into lock cylinder (see Diagram 3) and turn approximately 33 degrees anti-clockwise. The key will return back to original position itself and then can be removed. Door is now locked. (The outer handle cannot be rotated in a clockwise direction)

NB: Door will not lock with key if the top and bottom striker bolt is not pulled to the bottom of the striker.

Operate Right Hand Hinge Door from Inside

1. **To Unlock** – Turn deadlock catch (see Diagram 4) anti-clockwise and then rotate inner handle approximately 45 degrees (see Diagram 4) anti-clockwise to unlock/open door.
2. **To Lock** – Close door as in step 4. Rotate handle approximately 45 degrees (see Diagram 4) clockwise to pull top and bottom lock bolts to the bottom of the striker. Rotate dead lock catch (see Diagram 4) clockwise to lock. (The inner handle cannot be rotated in anti-clockwise direction)

Diagram 1

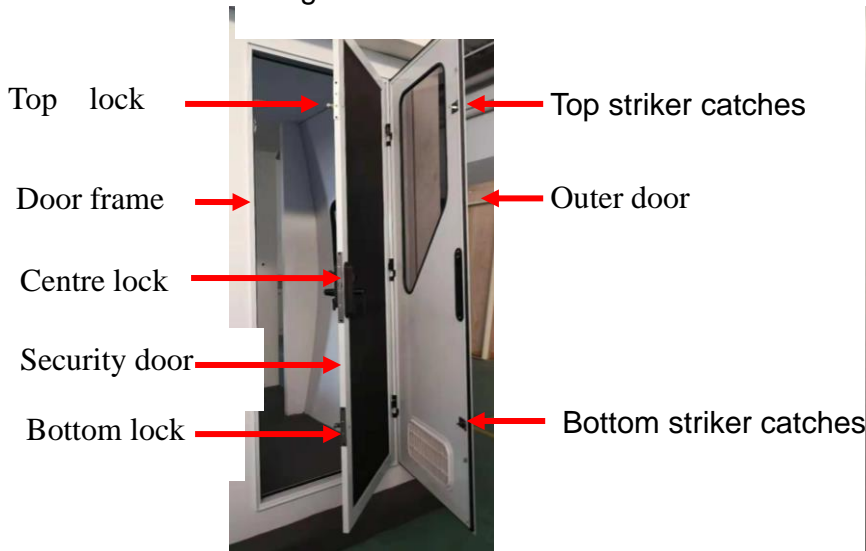

Right Hand Hinge Door

Diagram 2



Outside Right Hand Door

Diagram 3



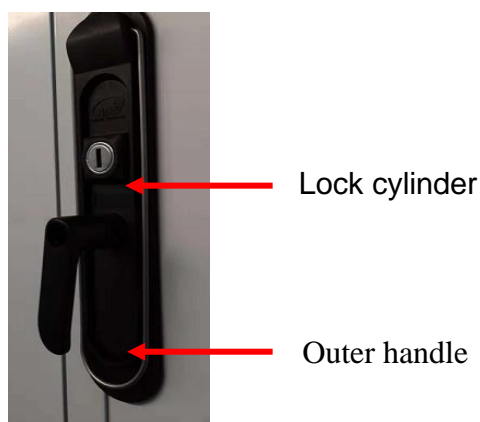


Diagram 4

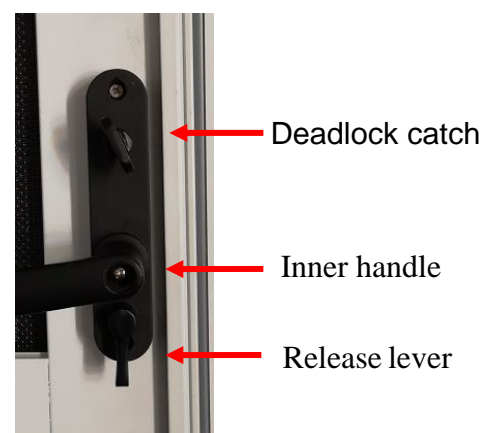

Outside view of right hand lock

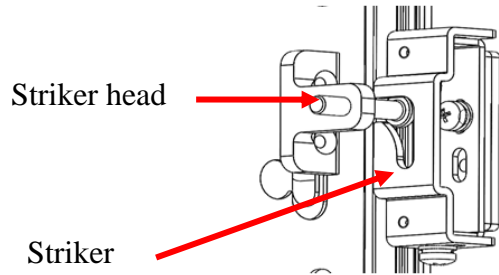

Inside view of right hand lock

