




WALL MOUNTED WASHING MACHINE

USER INSTALLATION MANUAL

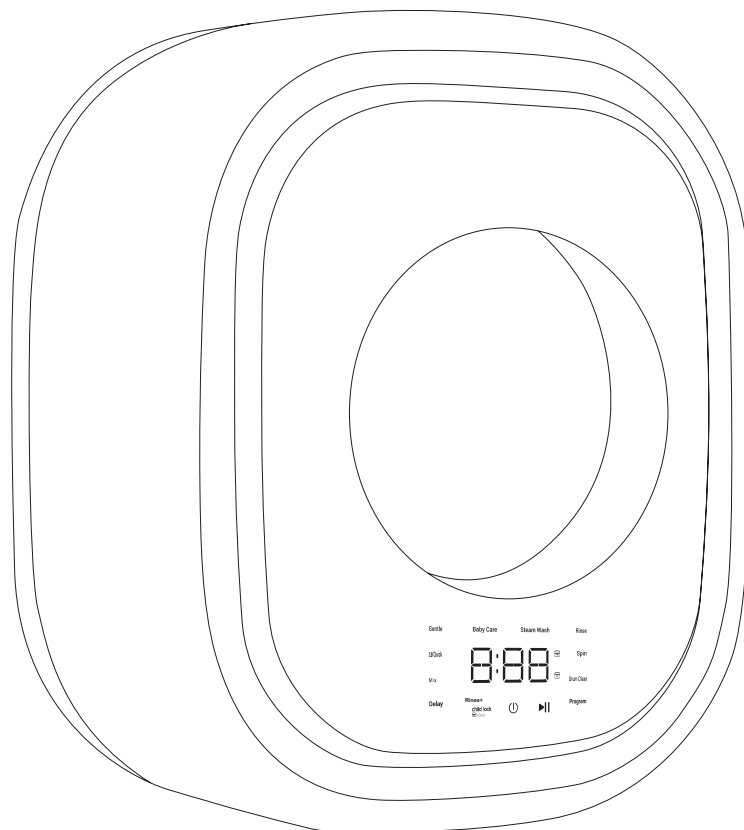

READ CAREFULLY BEFORE USING
RETAIN MANUAL FOR FUTURE REFERENCE



Read this installation instruction thoroughly.
 Incorrect installation or operation may void any warranty.
 Incorrect use or operation may cause serious injury.

PRODUCT INTRODUCTION

The Aussie Traveller Wall Mounted Washing Machine is a great space-saver to provide the convenience of your own washing machine in your caravan or RV. Featuring intelligent frequency conversion, high temperature cleaning, drainage protection during winter and a maximum load of 2.5kg.

PART NUMBER: 51000100001000

INCLUDES:

INSTRUCTION BOOKLET	WATER INLET	DRAIN-PIPE	INSTALLATION GUIDE	WATER SUPPLY CONNECTOR	EXPANSION BOLT (4 ↑)	RUBBER MAT (4 ↑)

CONTENTS

IMPORTANT SAFEGUARDS	2
PARTS DESCRIPTION	3
INSTALLATION	3
ATTENTION BEFORE USE	5
BEFORE WASHING INSTRUCTIONS	6
CONTROL PANEL	7
MAINTENANCE	8
TROUBLE SHOOTING GUIDE	10
NAME AND CONTENT OF PRODUCTS HAZARDOUS SUBSTANCE	11
DECLARATION	12
WARRANTY STATEMENT	13

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

IMPORTANT SAFEGUARDS


1. Please use a 3-PIN power socket with good grounding, 230V ~ and above 10A. Do not use an extension cord.
2. Please use the plug to plug and unplug the power cord. Do not pull on cord to unplug. Do not use damaged power cord. If there is dirt or moisture on the power cord plug, wipe clean before plugging in.
3. Do not plug or unplug the power plug with wet hands.
4. After use, it is recommended to unplug the power plug for maintenance and cleaning. If this is not accessible it is recommended to turn off the power at the circuit board.
5. Do not place the washing machine near a fire or heat source, or put lit cigarettes, candles and volatile materials on the washing machine.
6. Do not spill water directly on the panel of the washing machine.
7. Please do not place the washing machine in a place with excessive moisture.
8. Fix the drain pipe before use and make sure that the outlet is not blocked.
9. When washing at high temperature, the door glass may become hot. Do not touch the door glass, especially children.
10. When the door needs to be opened during high-temperature washing, please wait until the temperature drops to a safe temperature and the door lock is unlocked automatically before opening the door.
11. Make sure to discard all packaging material correctly. Keep away from children.
12. Children should be supervised to ensure that they do not play with the appliance. Cleaning and use maintenance shall not be made by children without supervision. Children of less than 3 years should be kept away unless continuously supervised.
13. Keep the door closed when the washing machine is not in use to prevent children from entering the washing or spinning drum.
14. Do not put heavy objects on the washing machine. Do not use washing machine for storage purposes.
15. Do not let non-professionals repair or modify the washing machine. Voiding warranty will result.
16. Do not wash waterproof clothes such as raincoats, down products, sleeping bags etc.
17. Only machine-washable clothes can be washed. If in doubt, please follow the washing guide logo on the clothes.
18. Do not wash clothes stained with kerosene, gasoline, solvent and other inflammables
19. Do not operate the washing machine if there is a gas leak.
20. Check the water level in the barrel before opening the door. If the water level is high, do not open the door to avoid unnecessary damage or loss caused by the water overflow.
21. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
22. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
23. This appliance is intended to be used in household and similar applications only. Not intended for commercial use.
24. If the supply cord is damaged, it must be replaced by the manufacturer, its service agents or similarly qualified persons in order to avoid hazard, and void warranty.
25. New hose-sets supplied with the appliance are to be used. Old hose-sets should not be reused.
26. Do not attempt to put hands or objects under or around machine whilst in operation.

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

PARTS DESCRIPTION


When installing on a wall, refer to the installation guide supplied with purchase. If installation guide is not available, please contact your seller prior to attempting installation.

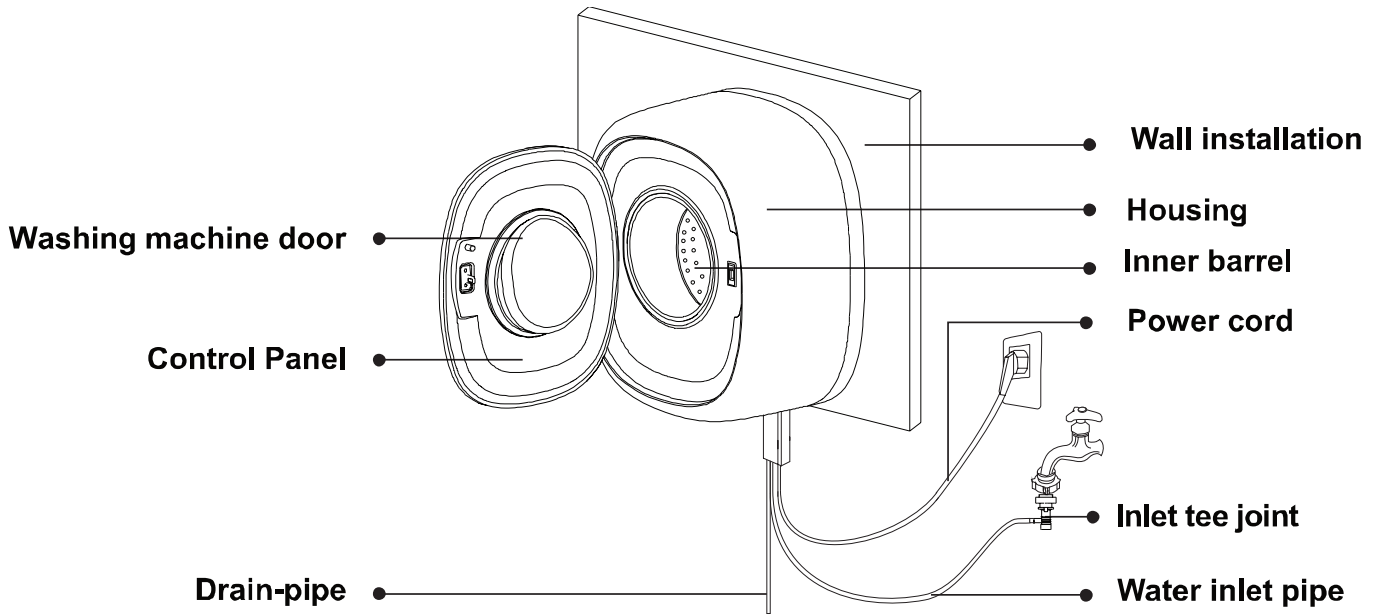

INSTALLATION


CONNECTION BETWEEN WATER INLET TEE JOINT AND FAUCET:

1. Hold the connector in one hand and press the snap ring in the other hand to pull down to separate the connector from the tee joint.

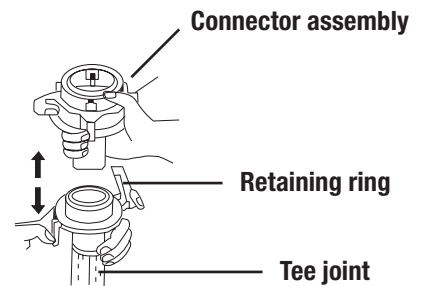


2. Loosen the four fixing screws on the connector and rotate the tightener so that there is sufficient distance between the tightener and the connector (the height of 3 threads) for screw installation.

NOTE: If the pipe diameter of the faucet is too thick, the plastic guide sleeve inside can be removed.

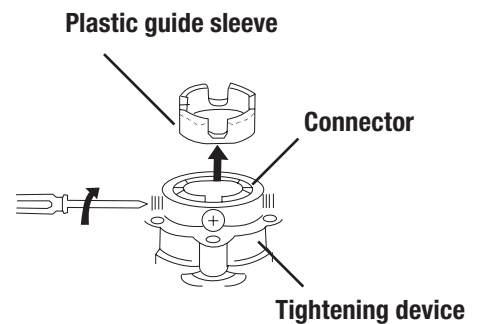

3. Evenly adjust the four screws of the connector so that the two screws close to the wall first fully contact the outside of the faucet. Screws near the wall can be screwed in a little in advance.

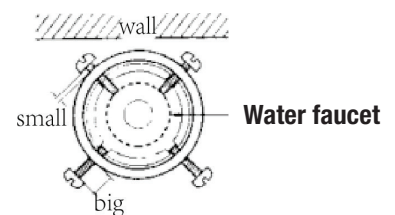


1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au


BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

INSTALLATION (cont.)


4. Press the connector against the faucet port to make its internal gasket fully contact with the faucet (please note that the gasket cannot be fully taken out). Please select standard faucet. The faucet mouth must be flat. If it is uneven, please flatten it.

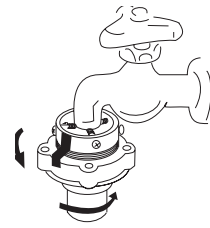


5. As shown in the figure, rotate the two screws on the opposite side of the wall to make them contact with the faucet, and then tighten them with a screwdriver.

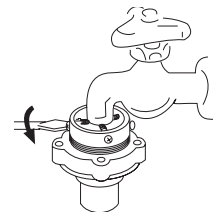


6. Rotate the tightener until the tightener is tightened (water leakage will occur if it is not tightened). After rotation, the gap between the tightener and the connector is less than 3mm.

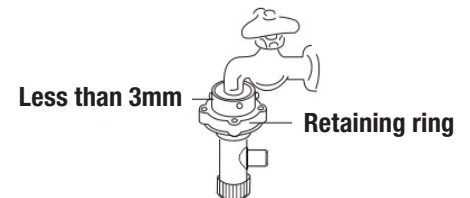

7. When removing the water inlet pipe: press down the retaining ring of the water inlet pipe.

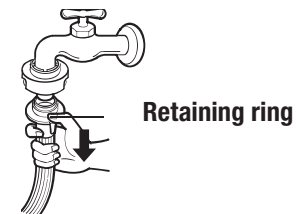

8. When installing the water inlet pipe: fasten the back of the water inlet pipe and loosen the retaining ring.

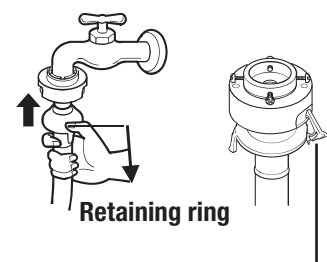

Ensure that the buckle is located on the connector.

COLD TAP ONLY REQUIRED

There is a heating element in the machine for hot water washes.

Check faucet connection by turning on water prior to using the machine.

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

ATTENTIONS BEFORE USE

1. WASHING GUIDE IDENTIFICATION







Check the washing guide logo on the laundry, the fabric with laundry on the logo and its suitable washing method.

2. WASHING

In order to get the best washing results, wash only the same kind of cloths in the same washing cycle. For different clothes, the required water temperature, speed and washing procedures are also different. Dark clothes should be washed seperatelyt from light and white clothes. Dyed clothes and cotton clothes should be washed seperately. Otherwise, it may cause white clothes to change colour. If possible do not wash dirty clothes and cleaner clothes at the same time.

The degree of contamination (serious, medium and slight) should be washed according to the degree of contamination.

Colour (white, light, dark), white clothes should be washed seperately from coloured clothes.

 <p>Check whether or not clothes are machine-washable.</p>	 <p>For clothes whose buttons or accessories are easy to be damaged during washing, please wash inside out.</p>	 <p>Remove dust and silt from clothes before washing.</p>
 <p>Take out objects such as keys, hairpins, pins and coins from pockets.</p>	 <p>Put delicates into a laundry bag before washing.</p>	 <p>Wash clothes with oil stains or clothes that are easy to fade seperately.</p>

RECOMMENDED CAPACITY

Rated weight - 2.5kg dry clothes.

CLOTHES	WEIGHTS	MIX	18' QUICK	GENTLE	BABY CARE	STEAM WASH
Cotton shirt	150g	•	•			
Pair of socks	50g	•	•			
Underwear set	50g	•	•	•		
Towel	150g	•	•	•		
Kitchen towel	25g	•	•		•	•
Baby clothes	150g	•	•		•	•
Diaper (nappies)	50g				•	•
Dress shirt	200g	•	•			
Swimsuit	100g			•		
Sleepwear/pyjamas	400g				•	•
Knitwear	350g			•		
Handkerchief	10g	•	•			
Stockings	80g			•		
Pants	600g	•	•			

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061


BEFORE WASHING INSTRUCTIONS

CAUTION


Before you use this machine, please make sure that the machine has been properly installed according to the installation instructions.

For the first time, it is recommended that you complete a 'tub cleaning' or other high-temperature washing procedure without clothes.


1. PREPARATION BEFORE WASHING

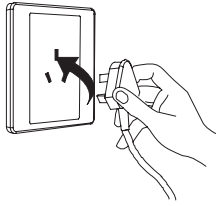

Plug in the power cord

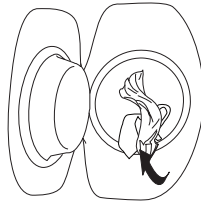

Put in clothes

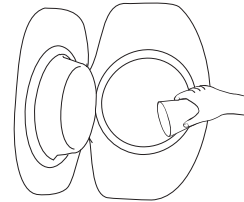

Add detergent

**LOW FOAM LIQUID OR
POWDER DETERGENT
RECOMMENDED**

2. START THE LAUNDRY



Power ON



Select program



Start up

PROGRAM	MAX LOAD	CLOTHES TYPE
Mix	Rated	Cotton fabrics / synthetic fiber fabrics
18' Quick	≤ 1.5kg	Cotton fabrics / synthetic fiber fabrics
Gentle	≤ 1.5kg	Cotton fabrics / synthetic fiber fabrics
Baby Care	Rated	Infant cotton fabrics
Steam Wash	Rated	Infant cotton fabrics
Rinse	Rated	Cotton fabrics / synthetic fiber fabrics
Spin	Rated	Cotton fabrics / synthetic fiber fabrics
Drum Clean	—	Washing machine cleaning and degerming

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

BEFORE WASHING INSTRUCTIONS (cont.)

3. LAUNDRY PROCEDURE INTRODUCTION

1. During operation of some programs, the actual display time may change due to the weight of clothes, which is not a washing machine fault.
2. The time required will change when the water pressure, drainage conditions, type of cloths, clothing weight and water temperature change.
3. The weight of clothes and the type of detergent may lead to the reduction of spinning speed. If the spinning speed is too low, poor rinsing may occur. Please increase the rinsing times.
4. Power on again after power failure, and the washing machine will continue to operate at the time node before power failure.

CONTROL PANEL



1. PROGRAM BUTTON

Select the appropriate program according to the type and stain degree of laundry

2. START/PAUSE BUTTON

Press this button to start working. During operation, press this button to stop temporarily, and then press this button to continue operation and execute the setting program. Press the button for 2 seconds to temporarily open the door, so that clothes can be added in the middle of the way.

CAUTION: When the washing machine is running at a high temperature or the water level is higher than the bucket mouth, the midway filling function does not respond.

3. POWER BUTTON

Press this button to turn on the power supply. After the program ends, press the 'POWER' button to turn off the power supply.

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

CONTROL PANEL (cont.)

4. RINSE BUTTON (including Child Lock)

In order to prevent children from operating or opening the door, this button can set the child lock function. After setting the child lock function, other buttons do not work except for the power button. After the program is started, press and hold the 'RINSE' button for more than 3 seconds to turn on or off the child lock function.

5. DELAY BUTTON

The delay time refers to the time from the delay is set to the start of the washing cycle. The delay time can be set from 3 hours to 24 hours in advance.

MAINTENANCE

After long-term use, the washing machine should be maintained in time. Good maintenance habits will prolong the service life of the washing machine. Before carrying out maintenance work, please unplug the power plug to prevent danger.

HOUSING

After each use, please wipe with a soft, clean cloth. For more serious marks, please wipe down with mild soapy water and dry.

Do not pour directly onto the washing machine.

Do not use detergent, gasoline, alcohol or any other chemicals to wipe the housing.

DOOR SEALING RING



After each use, please wipe away dirt and any debris with a towel. If there are any foreign matters in the groove of the door sealing ring, be sure to remove.

 

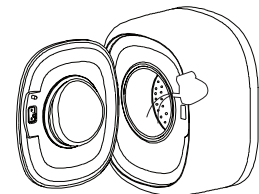
Clean the drain filter.

CAUTION: There will be water in the drain outlet. Please make sure there is a bucket or other suitable container under the drain outlet cover before opening.

WHEN THE WASHING MACHINE IS FROZEN COLD

1. Wrap the faucet and connector assembly with a hot towel.
2. Remove the water inlet hose and soak it in hot water at about 50°C.
3. Pour 2–3 litres of hot water at about 50°C into the drum.
4. Reconnect the water inlet pipe, turn on the faucet, start the washing machine, and check whether the water inlet and drainage are normal.

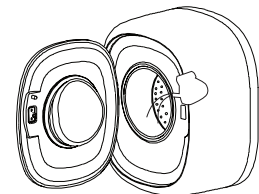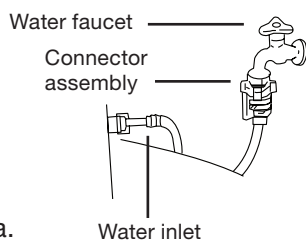

- a.  Water inlet
- b.  Remove the water inlet hose and soak it in hot water.
- c.  Pour 2–3 litres of hot water at about 50°C into the drum.

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

MAINTENANCE (cont.)

CLEANING THE BARREL

After the washing machine has been used for a period of time, there may be dirt in the washing machine cylinder. The purpose of cleaning the inner and outer barrel can be achieved by using the tub cleaning program.

NOTE: Do not put clothes and detergents into the barrel in the tub cleaning mode.


CLEANING OF THE CONNECTOR ASSEMBLY

1. Remove the water inlet hose on the connector assembly side.
2. Unscrew the tensioner in the direction of the arrow.
3. Flush the inside of the tensioner with water.
4. Reinstall the cleaned tensioner and water inlet hose.


CLEAN THE DRAIN FILTER

Because there will be water in the drain outlet, please make sure there is a bucket or other suitable container to catch drained water.


Before disassembling the filter, please make sure that the water stored in the washing machine has been cooled to avoid scalding.

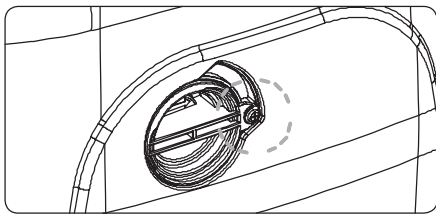

1. Unscrew the screws at the marked position with a screwdriver.

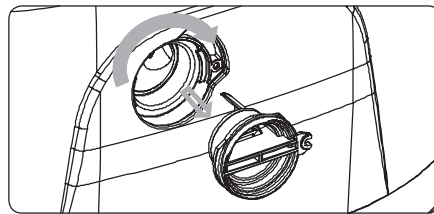

2. Turn the filter cover clockwise and pull it out.

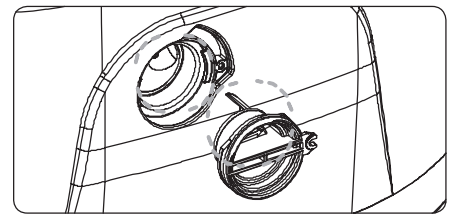

3. Clean the foreign matter and reinstall the filter cover.

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

TROUBLESHOOTING GUIDE

PROBLEM	CAUSE	SOLUTION
Cannot Start	<ol style="list-style-type: none"> 1. Press the 'POWER' button or the 'START/PAUSE' button. 2. Is the power cord unplugged? 3. Is there a power failure? 4. Is the leakage protector disconnected? 	<ol style="list-style-type: none"> 1. Press the 'POWER' button or the 'START/PAUSE' button. 2. Connect the power cord plug. 3. Please wait. 4. Turn on the leakage protector.
Poor drainage	<ol style="list-style-type: none"> 1. Is the washing machine installed properly? 2. Have you washed a single, smaller garment? 3. Is the drain filter clear? 	<ol style="list-style-type: none"> 1. Install the washing machine on a horizontal and flat ground. 2. Add a few similar items of clothing. 3. Refer to page 9 of user installation manual.
Water inlet fault displays 'E1'	<ol style="list-style-type: none"> 1. Is the tap turned off? 2. Is there no water supply or low water pressure? 3. Is the water inlet pipe frozen? 4. Is the inlet pipe and inlet valve blocked? 	<ol style="list-style-type: none"> 1. Turn on tap. 2. Please wait. 3. Thaw the inlet pipe with hot water. 4. Take out the water inlet pipe and thoroughly clean the filter screen in the water inlet valve.
Drainage failure displays 'E3'	<ol style="list-style-type: none"> 1. Is the height of the drain too high? 2. Is the drain frozen? 3. Is the drain blocked by foreign matter? 	<ol style="list-style-type: none"> 1. Please place the drain pipe to ensure that the height is less than 1m. 2. Thaw the drain pipe with hot water. 3. Remove foreign matters and clean the drain pipe.
Door failure displays 'E2'	Confirm whether the washing machine is started when the door is not closed?	Close the door firmly.
No heating displays 'E6'	Turn off the faucet and unplug the power plug. Please contact professional maintenance personnel.	
Keep water injecting displays 'E4'	Turn off the faucet and unplug the power plug. Please contact professional maintenance personnel.	
Too much bubbles	Do you use special low foam detergent for drum washing machine?	It is recommended to add an appropriate amount of detergent.
In case of other faults, please contact professional maintenance personnel.		

NOTE: The following conditions are not faults.

PROBLEM	CAUSE
The door won't open	The program is running.
Smell or odour	Due to the use of rubber parts, there will be a rubber smell at the beginning. Run the cleaning cycle.
Less water for washing/rinsing	The front loading washing machine only needs a small amount of water to wash.
Midway water inflow	If the water level drops, the water will be replenished automatically.
Drainage during washing	Is there too much or multiple bubble detergent. Use a low foam detergent.
Remaining time change	If the clothes are very wet during spinning, the spin time will be extended accordingly in order to remove most of the water. If the water pressure is too low, the water inlet fill time will take longer.
Abnormal sound during spinning	Is the power cord in contact with the box? Have the transportation fixing bolts been removed? Are there any hairpins, coins or other items falling into the drum.
Machine not draining	Check the connection of the drain hose. Ensure drain hose is clear of impediments. If the drain hose is connected to the sink or the basin pipe or overflow, ensure the plug is OPEN. In an RV or caravan, ensure sullage hose is connected to the machine drain hose.

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

NAME AND CONTENT OF PRODUCTS HAZARDOUS SUBSTANCE

PART NAME	HAZARDOUS SUBSTANCES					
	Pb	Hg	Cd	Cr6	PBB	PBDE
Door lock	X	O	O	O	O	O
Computer board	X	O	O	O	O	O
Power cord	O	O	O	O	O	O
Bolt & nuts	O	O	O	O	O	O
Water level sensor	O	O	O	O	O	O
Draining valve	O	O	O	O	O	O
Motor	X	O	O	O	O	O
Belt & belt pulley	O	O	O	O	O	O
Door assembly	O	O	O	O	O	O
Top cover assembly	O	O	O	O	O	O
Control panel assembly	O	O	O	O	O	O
Housing assembly	O	O	O	O	O	O
Inner barrel	O	O	O	O	O	O
Base	O	O	O	O	O	O
Detergent box	O	O	O	O	O	O
Washing inner & outer barrels	O	O	O		O	O

NOTES:

1. This form is prepared in accordance with SJ/T 11364.
2. 'O' Indicates that the content of the hazardous substance in all homogeneous materials of the component is below the limit specified in GB/T26572.
3. 'X' It means that the content of the hazardous substance in at least one homogeneous material of the component exceeds the limit requirements specified in GB/T26572, but it is within the scope of the application exception list of restricted substances in the compliance management catalogue.

CORRECT DISPOSAL OF THIS PRODUCT



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.

To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

DECLARATION

PARAMETER	CAUSE
Model name	3000-0301AU
Rated voltage	220-240V~,50Hz
Capacity	2.5kg wash
Rated washing power	50W
Rated spin power	125W
Rated heating power	1550W
Water consumption	43 litres, standard wash
Water pressure	0.05–0.75Mpa
Overall dimensions	558 × 658 × 320mm
Certificate of conformity	AS/NZS 60335.2.7:2020 ASNZS 60335.1: 2020 Inc A1
Approval marks	RCM SAA-221131-EA

The Eco 40-60 programme is able to clean normally soiled cotton laundry declared to be washable at 40°C or 60°C together in the same cycle, and that this programme is used to assess the compliance with the EU Ecodesign legislation.

The more stars the more energy efficient

ENERGY RATING

A joint government and industry program
MOBROV 3000-0301AU
Load capacity 2.5kg

Energy consumption
Warm wash
157
kWh per year
using mix program seven times
per week in each case

When tested in accordance with AS/NZS 2040.2
Actual energy use and running costs will depend on how you use the appliance.
Cold washing performance has not
been measured and is not guaranteed.

For more information, refer to
www.energyrating.gov.au

The more stars the more water efficient

WATER RATING

www.waterrating.gov.au

43 litres per wash
Load capacity 2.5kg

In accordance with AS/NZS 6400

MOBROV Model 3000-0301AU
Using the Mix program



1300 663 868 | enquiries@aussietraveller.com.au | aussietraveller.com.au

BRISBANE SHOWROOM: 11-15 Oasis Court, Clontarf QLD 4019 | MELBOURNE SHOWROOM: 235 Barry Road, Campbellfield VIC 3061

WARRANTY STATEMENT

Aussie Traveller Pty Ltd ACN 642 775 460 (**Aussie Traveller**) offers the following warranty in relation to the products it supplies directly or through an authorised manufacturer, dealer or approved service repair agent (**Product**).

Australian Consumer Law

The benefits of this warranty are in addition to any rights and remedies imposed by Australian State and Federal legislation that cannot be excluded. Nothing in this warranty is to be interpreted as excluding, restricting or modifying any State or Federal legislation applicable to the supply of goods and services which cannot be excluded, restricted or modified.

If you are a consumer as defined in the Australian Consumer Law: *Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.*

Warranty

Aussie Traveller warrants that, subject to the exclusions and limitations below, all parts of the manufacture and assembly of the Product will be free from defects in materials and workmanship (**Warranty**) for a period of 12 months from the date of purchase as follows:

1. This Warranty is activated at the time of purchase by the final retail customer (being the owner of the Product).
2. In the event the Product is purchased by a manufacturer, dealer or approved service repair agent, this Warranty will commence at the time the final retail customer makes payment for the Product to the wholesale purchaser.
3. If the Product is purchased directly from Aussie Traveller for use by final retail customer and not to be on sold in any way, the Warranty will commence at the time of the original purchase.

Warranty Period

This Warranty cannot be assigned or transferred to a subsequent owner of the Product.

The purchaser or final retail customer should inspect the Product immediately when received or at vehicle handover, to ensure that it appears free from any damage or defect, and matches the description provided.

If after accepting the Product, a defect appears in the manufacture or assembly of the Product before the end of the Warranty Period and Aussie Traveller finds the Product to be defective in materials or workmanship, Aussie Traveller will, in its sole discretion, either:

- a. replace, repair or refund the Product or the defective part of the Product free of charge; or
- b. cause the Product or the defective part of the Product to be replaced or repaired by a qualified repairer free of charge.

In arranging Warranty inspection, service and repair, Aussie Traveller will seek to provide the details of an approved service agent within your geographic area. Should one not be available, or if the Product is in use in travel, Aussie Traveller reserves the right to seek to arrange a repair or replacement at the next available location on the route of travel.

Aussie Traveller reserves the right to replace defective parts of the Product with parts and components of similar quality, grade and composition where an identical part or component is not available.

Products presented for repair may be replaced by refurbished goods of the same type rather than being repaired. Refurbished parts may be used to repair the Product.

Aussie Traveller Awning Products

This Warranty covers specified defects in materials or workmanship for Awning Products as follows:

1. The vinyl fabric is warranted against:
 - a. holes caused by mildew (mildew will form on dust and dirt and stain fabric if fabric is not kept clean).
 - b. excessive cracking, peeling, hardening or loss of strength while used under normal conditions.
 - c. excessive fading (a slight colour change may occur due to ultraviolet rays).
2. All hardware components including the roller are warranted not to bend or break under normal use (excluding high winds, water pooling and accidents).

Making a Warranty Claim

If a defect covered by this Warranty appears, the Customer must first contact Aussie Traveller within 7 days of first becoming aware of the defect. Aussie Traveller will assist the Customer to rectify and resolve any Product issue that may arise.

When making a claim under this Warranty, Aussie Traveller requires that the following information be provided before any further action will be taken.

1. Original Invoice (Document or Number);
2. Make and model of the Product;
3. Make and model of the vehicle (if Product fitted);

4. Vehicle build date (if Product fitted);
5. Vehicle chassis number;
6. Description of damage and/or repair required;
7. Photos of the damage and/or repair; and
8. Appropriate documentation (such as historical and maintenance records).

Aussie Traveller reserves the right to request more information or images should what is provided not be sufficient to make an assessment for the Warranty claim.

The Product must be made available to Aussie Traveller or its authorised repair agent for inspection and testing. If such inspection and testing find no defect in the Product, the final retail customer must pay Aussie Traveller's usual costs of service work and testing.

The final retail customer must bear the cost of the transport of the Product to and from Aussie Traveller or the authorised repair agent, and all insurance of the Product.

Exclusions

This Warranty will not apply where:

- the Product has been repaired, altered or modified by someone other than Aussie Traveller, or without the written consent of Aussie Traveller or an authorised repair agent;
- the alleged defect in the Product is within acceptable industry tolerances and variances;
- Aussie Traveller cannot establish any fault in the Product after testing and inspection;
- the Product has been used other than for the purpose for which it was designed;
- the alleged defect in the Product has arisen due to the final retail customer's failure to properly use and maintain the Product in accordance with any of Aussie Traveller's instructions, recommendations and specifications (including applicable maintenance schedules);
- the alleged defect in the Product has arisen due to the final retail customer's request to customise the Product;
- the Product has been subject to abnormal conditions, including environment, temperature, high or excessive wind, water, fire, humidity, pressure, stress or similar;
- the alleged defect has arisen due to abuse, misuse, neglect or accident;
- unauthorised parts or accessories have been used on or in relation to the Product;
- the Product has been overloaded or involved in an accident;
- the alleged damage or defect has been caused by normal wear and tear;
- the alleged damage to fabric has been caused by storm, wind or rain, or stretching of fabric caused by water pooling on fabric;
- breakage or bending of hardware components has been caused by storm, wind or rain, or water pooling on fabric.

Replacement Warranty Item

If, under Warranty, a Product is replaced or repaired by Aussie Traveller or an Aussie Traveller agent, unless provided in writing to indicate otherwise, the replacement Product will carry the **remaining** Warranty terms and conditions, including length of time, of the original purchased Product.

Change of Mind

Aussie Traveller understands that at times, final retail customers may change their mind. Choose carefully as return and credit requests for items purchased by mistake or "change of mind" reasons may not be approved. Aussie Traveller will not accept Product returns under these circumstances unless by written approval by an authorized Aussie Traveller representative. If approved, an administration and restocking fee may apply.

Limitations

Aussie Traveller makes no express warranties or representations other than set out in this Warranty.

The repair or replacement of the Product or part of the Product is the absolute limit of Aussie Traveller's liability under this express Warranty.

Contact

Australia Wide: 1300 663 868

Melbourne Office

235 Barry Road
Campbellfield, Melbourne, 3061
Ph: +61 3 9357 6565
enquiries@aussietraveller.com.au

Brisbane Head Office, Factory & Showroom

11-15 Oasis Court
Clontarf, Brisbane, 4019
Ph: +61 7 3284 3284
enquiries@aussietraveller.com.au

To receive a copy of the Aussie Traveller Warranty Terms & Conditions or information regarding specific Aussie Traveller products, please contact Aussie Traveller Head Office on (07) 3284 3284 or email enquiries@aussietraveller.com.au.