

Instructions for use of product

- 1. Press the on/off button for low wind speed.
- 2. Press on/off button second time for medium wind speed.
- 3. Press on/off button third time for high wind speed.
- 4. Press on/off button fourth time to turn off.

Charging status:

- 1. Connect type-C cable to the fan socket.
- 2. Red light will be on during the charging.
- 3. Red light will turn off when fully charged.
- 4. White light will be on when the fan is turned on.

Packing List

- 1 x Cool Chill Foldable Neck Fan
- 1 x Type-C charging cable
- 1 x Manual

Attention

- 1. This product is not a toy. Children should use this product under the supervision of adults.
- 2. Please do not use the fan in humid weather or environment in order to avoid the damage or malfunction of the product.
- 3. Please charge the fan in standard DC 5V voltage and pull out the cable in time after the completion of charging.
- Please do not put the fan near flammables during charging.
- 5. Please stop the use immediately when the fan gets too hot or out of shape or when the liquid of battery is leaking.

- 6. Please keep this product in 0-40 centigrade environment.
- 7. Do not hit or smash the product. Constant hitting may lead to damage to the product.
- Please do not dismantle, change or repair the product by yourself.
 If the product cannot be charged, try to change the charging cable or change the charger.
- 10. When using a charger for power supply, please purchase or use the charger that has obtained certifications and meet the standard.

СЕГС конз 🗘 🗵