

COOL/≡≡≡  
**CHILL**

ECO AIR COOLER

## INSTRUCTION MANUAL



**AIR COOLER**

**AC120V 60HZ**

**MODEL: BL-228DLR**

READ THIS MANUAL THOROUGHLY BEFORE USING AND  
SAVE IT FOR FUTURE REFERENCE.



## **IMPORTANT SAFEGUARDS**

1. Make sure that voltage and circuit frequency corresponds to the voltage stated on the appliance rating label.
2. Before using, please check, that the power cord or plug work properly. A damaged power cord or plug must be replaced by the manufacturer or a qualified person to avoid hazard.
3. Do not cover the outlet and inlet of air cooler.
4. Do not let, that the wind inlet be too close to the wall, curtain etc. Otherwise it will be blocking the air flow and affect the wind effect.
5. Do not cover the outlet. You have to choose the socket which it is up to more than 10A current. Do not connect the other appliance to the same socket.
6. Do not place the air cooler on a sloped surface.
7. Please do not use air cooler outdoors, next to the bath, shower, or pool.
8. When the air cooler is on the cool function, the level of the water tank must be less than "MAX" and more than "MIN".
9. After filling the water tank, do not tilt the device from side to side or shake.
10. Do not pull the power plug with wet hands to avoid the risk of electric shock.
11. When the air cooler is working, inserting your hands or other body parts inside the appliance it is strictly prohibited.
12. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they remain under supervision or follow instructions given by a person responsible for their safety.
13. Children should be supervised to ensure that they do not play with the appliance.
14. Turn off the power to the appliance before unplugging from the electrical outlet. Do not pull the power cord. This may result in fire, electric shock or other injuries.
15. Pull the plug away from the socket when you do not use it.
16. Please do not put anything on the air cooler.

## **Safety warning**

1. Unplug the appliance during filling and cleaning.
2. If the supply cord is damaged, it must be replaced by the manufacturer or similarly qualified people in order to avoid a hazard.
3. When the appliance is not in use, switch it off and unplug it.

**PARTS LIST**

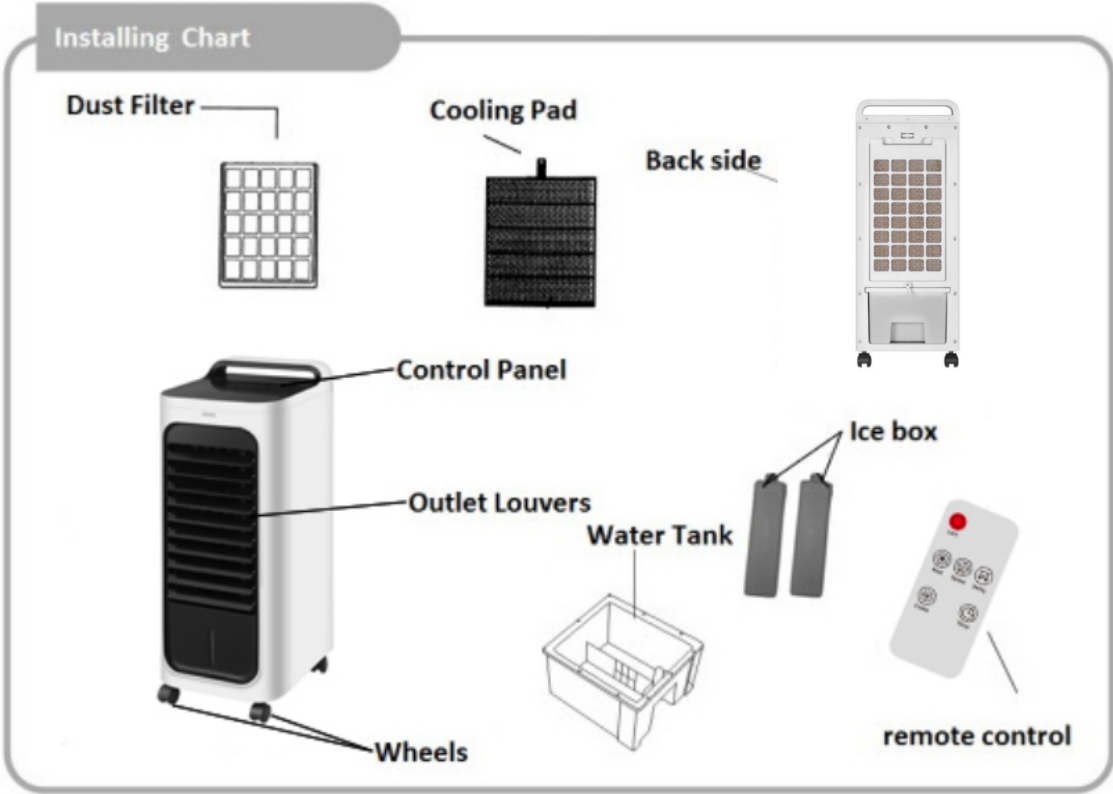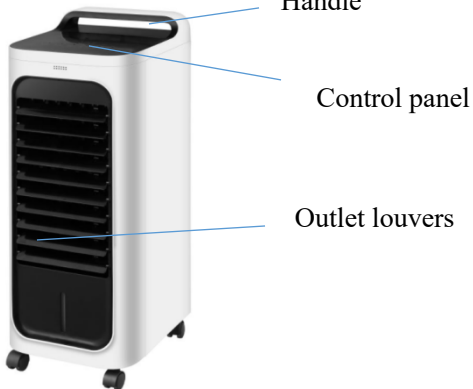

**CONTROL PANEL**



Cooler

Swing

Timer

Speed

Wind

ON/OFF

### 1. **ON/OFF button**

Press the ON/OFF button and the product will start/stop working.

### 2. **SPEED” button**

By pressing the speed button once when the air cooler is working, you will activate the low wind speed.

Press the button the second time when the air cooler is working, you will activate the medium wind speed.

Press the button for a third time when the air cooler is working, you will activate the highest wind speed.

### 3. **TIMER button**

Press the “Timer” button to set the fan running time between 1-7 hours, which switches the unit to standby after the preset time. Each time the button is pressed, the hours will increase by one- and the-time indicator will light up on the screen. To cancel the timer, simply press the button until the indicator is off.

### 4. **COOLER button**

To activate the cooling cycle, press the cooler button and you will see a “snowflake” symbol.

### 5. **SWING button**

Press the swing button when the air cooler is working, you will see a swing symbol on the display screen.

### 6. **Wind:** Press the ‘Wind’ button to choose the wind type. Each time this button is pressed, an indicator will light on the display screen to indicate the type of wind.

There are 3 types of winds to choose: Ordinary—Natural—Sleep

## **Wi-Fi APP control Operation:**

1. Search ‘Tuyasmart’ or ‘smartlife’ on App store, download it install it.
2. Plug the cooler in and press the ON/OFF button for 3 seconds, the WIFI symbol on the display will flash rapidly.
3. Make sure your mobile has connected with WIFI, open App, and press ‘add device’ and then choose the ‘air cooler’ from the device list.
4. Press ‘confirm’ and the indicator will rapidly blink and then the app will turn to another page.
5. Input your WIFI password and press ‘OK ‘, the App will connect with the device automatically.
6. Now you can control the device in your App for all the functions on the air cooler.
7. Please note: The device can only connect with one mobile at a time. If you need to use the air cooler with another mobile, you need to remove the device from your App first and then you can connect to another mobile.

## **HOW TO FILL WATER TANK**

Pull out the water tank from the bottom of the air cooler back and fill water 1/3 of the water tank.

- Pay attention to the water level indicator while fill water.
- The water level of the water tank must be less than "MAX".
- The water level of the water tank must be more than "MIN".
- Ice boxes (or ices) are put into water tank when you want the air to get the colder wind.


## HOW TO USE ICE BOXES

The ice boxes can make the temperature of the water in the water tank less than it of the surrounding.

- Fill the ice boxes with water and place in the freezer.
- After ice boxes are frozen successfully, take ice boxes out the freezer.
- Pull the water tank out and place the frozen ice boxes into the water tank.

Tip: Always keep one ice box in the freezer. Alternate them when the other one in the water tank is thawed.

## CLEANING

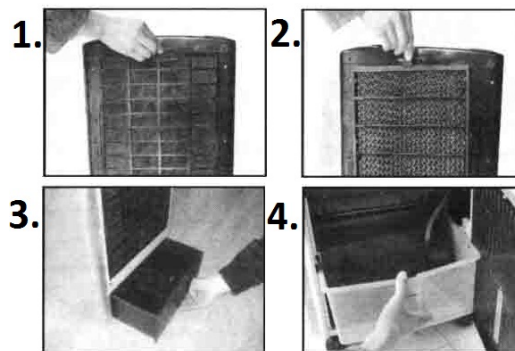

### 1. Clean air filter

Remove the hose from the water tank. Remove the 2 Phillips screws at the top of the filter and pull the holder of air filter by hand. While the air filter is out, clean the air filter with a neutral cleaner and soft brush.

### 2. Clean the wet curtain paper

With the air filter out, clean the wet curtain paper on the other side with water and soft brush with cleaner. Now you can place the filter back into the air cooler.

### Important!

**To avoid leaking, the wet curtain paper filter must be installed correctly.**

### 3. Clean water tank

Remove the hose from the water tank and take the water tank out and wash the residue in the water tank with a towel and a neutral cleaner. Then rinse the water tank with water and place the tank back in the air cooler and reattach the hose.

### 4. Clean the housing

Wipe off the housing with a neutral cleaner and soft cloth.

### Important!

**Before cleaning the appliance always turn off and unplug the appliance.**

## TECHNICAL SPECIFICATION

Power: 80w  
Voltage: 120V  
Frequency: 60 Hz



In accordance with the provisions of the Act of 29 July 2005 on waste electrical and electronic equipment, it is forbidden to disposal wasted equipment marked with crossed out wheelie bin symbol.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

In order to obtain information on where and how environmentally safe recycling of this product, household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycle