



### INTRODUCTION


Welcome to the Wings Portable Device Generation with the all new **Wings Center Stage 400**. We hope you are as excited as us to feel and flaunt your latest Sound gear. But before you dive right in, we strongly recommend going through this user manual thoroughly as it contains important technical information to ensure you have a seamless audio experience with us. Once you are done reading the manual. We are sure you will be all set to.

### FEEL IT! FLAUNT IT!


### WHAT'S IN THE BOX



1x User Manual  
1x Warranty Card  
1x AUX Cable

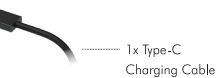

### PRODUCT LAYOUT

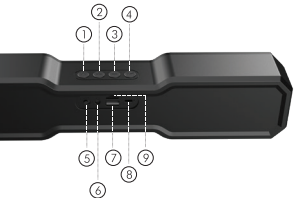

1. Mode "M" Button
2. "+" Button
3. "-" Button
4. Play/Pause Button
5. Power ON/OFF Switch
6. AUX input
7. USB Port
8. Type-C Charging Port
9. Micro SD Card Slot

### HOW TO PAIR

Please make sure that the device is fully powered before using the product.

**Step 1:** Switch ON the device by switching the power ON/ OFF switch.

**Step 2:** You will hear a prompt. By default, the device will automatically enter the Bluetooth pairing mode.

**Step 3:** Switch ON the Bluetooth on your pairing device and Search for "Center Stage 400" in the Bluetooth menu.

**Step 4:** Select "Center Stage 400" from the list of found devices.

**Step 5:** After successful pairing, you will hear a prompt indicating that the device is paired successfully.

**Note:** When the Soundbar is not connected to any device in Bluetooth Mode, then the Soundbar will turn off automatically after 10 minutes.

### MUSIC CONTROLS

**Stream music from SD card or USB flash drive:**

**Step 1:** Turn ON the device.

**Step 2:** Insert the micro-SD card or USB drive, preloaded with songs, into the device's SD card slot or USB flash drive slot; correspondingly, you will hear a voice prompt for "USB mode" or "micro-SD card mode", respectively.

**Step 3:** The device will automatically start playing songs from the micro SD Card or USB flash.

**Listening to FM radio**

**Step 1:** Turn ON the device.

**Step 2:** Insert the Type-C end of the charging cable into the charging port, and leave the other end open. The charging cable serves as an FM antenna while in FM Radio mode.

**Step 3:** Short press key "M" to toggle to FM radio mode, and you will hear the voice prompt "The Radio Mode."

- To Auto-Scan the stations, long press the (Play/pause) key for 2-3 seconds.
- It will take a few minutes to search all the stations. Once all the stations are scanned, they automatically register in the device.

### CHARGING THE DEVICE

**Low Battery**

When the battery is low, the Center Stage 400 will give a low battery ringtone, and after some time, the device will turn off automatically.

**Charging up**

Plug the Type-C end of the charging cable into the charging port. Plug the other end into a USB port of your computer or any charger (the Charger should not be more than 5V capacity). The charging LED will illuminate, The red light indicates that the device is being charged. Once the device is fully charged, the LED light will turn OFF.

### TWS CONNECTION

TWS mode enables two **Center Stage 400** to connect in stereo.

**Step 1:** Turn both the Center Stage 400 ON together.

**Step 2:** Long press the "M" button on two devices, and you will hear a ringtone. This confirms that the devices are connected successfully in TWS mode.

**Step 3:** Search for "Center Stage 400" on your mobile phone and pair it with this device. Enjoy your music.

**Step 3:** If you don't need TWS mode, please long-press the "M" button. You will hear a ringtone. The devices are now not connected in TWS mode.



### BUTTON FUNCTION

Music Mode	Function	Operations
Playing Music	Increase Volume	Short Press + Key
	Decrease Volume	Short Press - Key
	Pause	Short Press  Key
	Play	Short Press  Key
	Previous Track	Long Press - Key
	Next Track	Long Press + Key

### CALLING FUNCTION

Hands-Free Mode	Function	Operations
Incoming Call	Answer incoming call	Short Press  Key
	Reject incoming call	Double Press  Key
	End the call	Short Press  Key
On the Call	Increase volume	Short Press + Key
	Decrease volume	Short Press - Key
Standby mode and connected to a device	Redial last number	Short Press  Key Twice

### TROUBLESHOOTING

**1.** Some terminal music players are without an automatic switching play function. In this case, a 'pop' noise may be heard between songs.

**2.** If you cannot wirelessly connect to your mobile device. Try removing the Speaker from your mobile device's saved devices and re-connect as instructed above.

**3.** The sound performance may also be affected when there is a weak connection between the mobile device and the speaker. To improve connection, bring the mobile device closer to the speaker or remove any obstacles between the two devices.

**4.** The sound performance may also be affected if the speaker's battery power level is low. Please make sure the speaker is fully charged to improve this issue.

**Note:**

- Charge the speaker fully before first use.
- The charging time depends on the battery's existing charged levels and the USB adaptor's specifications.
- The LED indicator turns off automatically (during charging) when the battery is fully charged.
- The speaker's usage time depends on the charge in the battery, mode, volume level, etc.

### TECHNICAL SPECIFICATIONS

PARAMETERS	VALUES
Bluetooth Version:	V5.0
Effective Distance:	Up to 10 meters
Output Power:	2*8Watts (16 watt)
Unit size:	2.25"*2
Power input:	2DC 5V/1A
Play Time:	5 Hours
Built-in rechargeable battery:	2500mAh
Micro SD(TF)card/USB flash drive:	Supports up to 32GB
Multiple functions:	Wireless play/ FM radio/ USB flash drive/ Handsfree calling/ Micro TF card

\*T&C Apply

### SAFETY AND MAINTENANCE

Please read below suggestions in order to help prolong the product lifespan and clearly understand the warranty clauses:

- Keep the product dry, do not put it in humid conditions to avoid short circuit
- Do not expose it to the peak sun or high heat for extended period as this will shorten the lifespan of electronic components, damage battery and deform some plastic parts
- Do not put it in cold circumstances to avoid damage to PCB
- Do not attempt to dismantle the product, as it may be unsafe especially for non-professionals.
- Do not use Chemical products or detergent. Oily liquids to clean the item
- Do not scratch the surface with sharp items to avoid damaging the case and appearance.

**Note:** Any damage to the product that is not manufacturing a defect will lead to the warranty being rendered null and void; therefore, please take utmost care of your product.