



 
## INTRODUCTION

Wings is India's fastest growing audio, smart watches and accessories brand catering to the youth. Wings was recognised as the most **Prestigious Rising Brand Of Asia 2021-2022** by **BARC Asia** in the gaming lifestyle accessories category.

Wings is on a mission to create a pop culture led brand that the youth is proud to own and **Nodwin, a subsidiary of Nazara Technologies**, has a strategic investment in alignment with the long term vision.

But before you dive right in, we strongly recommend going through this user manual thoroughly as it contains important technical information to ensure you have a seamless audio experience with us. After you're done with reading the manual, get ready to go to the next level with Wings !

## WHAT'S IN THE BOX



- 2N Pairs of Extra Ear Tips(S&L)
- 1N User Manual
- 1N Warranty Card
- 1N Type-C Charging Cable

## PRODUCT LAYOUT



1. LED Indicator of Charging Case
2. Type-C Charging Port
3. Microphone 1
4. Touch Control
5. LED Indicator of Earbuds
6. Microphone 2

## HOW TO PAIR

 
Please make sure that the device is fully powered before using it.

**Step 1:** Make sure your case is charged up. Open the lid of the case and take out the earbuds. The earbuds will turn ON and automatically enter the pairing mode, and the Left earbud LED will flash quickly.

**Step 2:** Tap "Flobuds 400" from the smartphone's Bluetooth menu. There is a ring prompt after a successful connection. This indicates that the earbuds are successfully connected to your device.

**Step 3:** Congratulations! You are now connected and can start playing media.

**Note:** If you do not connect to any device within 180 seconds of entering pairing mode, then both earbuds will automatically turn OFF. Please put the earbuds back into the case and repeat the pairing process.



## TOUCH CONTROLS

BASIC FUNCTION	LEFT EARBUD	RIGHT EARBUD	TOUCH CONTROLS
Volume Increase		●	Single Tap on the right earbud's touch sensor
Volume Decrease	●		Single Tap on the left earbud's touch sensor
Play/Pause Music		●●	Double Tap on any earbud's touch sensor
Next Track		●●●	Triple Tap on the right earbud's touch sensor
Previous Track	●●●		Triple Tap on the left earbud's touch sensor
Voice Assistant	2 sec		Long Press for 2 seconds on the left earbud's touch sensor
Game Mode ON/OFF		2 sec	Long Press for 2 seconds on the right earbud's touch sensor

● - Tap    ——— - Long Press

## CALL CONTROLS

CALLING FUNCTION	LEFT EARBUD	RIGHT EARBUD	TOUCH CONTROLS
Answer incoming Call		●●	Double Tap on any earbud's touch sensor
Hang up calls		●●	While on call, Double Tap on any earbud's touch sensor
Reject calls		2 sec	Long Press for 2 seconds on any earbud's touch sensor

● - Tap    ——— - Long Press

## CHARGING THE CASE

**Note:** Please only use a 5V/1A adapter to charge the case as higher voltage adapters can damage the battery of the case and earbuds.

## TOUCH CONTROLS

BASIC FUNCTION	LEFT EARBUD	RIGHT EARBUD	TOUCH CONTROLS
Volume Increase		●	Single Tap on the right earbud's touch sensor
Volume Decrease	●		Single Tap on the left earbud's touch sensor
Play/Pause Music		●●	Double Tap on any earbud's touch sensor
Next Track		●●●	Triple Tap on the right earbud's touch sensor
Previous Track	●●●		Triple Tap on the left earbud's touch sensor
Voice Assistant	2 sec		Long Press for 2 seconds on the left earbud's touch sensor
Game Mode ON/OFF		2 sec	Long Press for 2 seconds on the right earbud's touch sensor

● - Tap    ——— - Long Press

## CHARGING THE CASE

**Note:** Please only use a 5V/1A adapter to charge the case as higher voltage adapters can damage the battery of the case and earbuds.

## CALL CONTROLS

CALLING FUNCTION	LEFT EARBUD	RIGHT EARBUD	TOUCH CONTROLS
Answer incoming Call		●●	Double Tap on any earbud's touch sensor
Hang up calls		●●	While on call, Double Tap on any earbud's touch sensor
Reject calls		2 sec	Long Press for 2 seconds on any earbud's touch sensor

● - Tap    ——— - Long Press

## CHARGING THE CASE

**Note:** Please only use a 5V/1A adapter to charge the case as higher voltage adapters can damage the battery of the case and earbuds.

## CALL CONTROLS

CALLING FUNCTION	LEFT EARBUD	RIGHT EARBUD	TOUCH CONTROLS
Answer incoming Call		●●	Double Tap on any earbud's touch sensor
Hang up calls		●●	While on call, Double Tap on any earbud's touch sensor
Reject calls		2 sec	Long Press for 2 seconds on any earbud's touch sensor

● - Tap    ——— - Long Press

## CHARGING THE CASE

**Note:** Please only use a 5V/1A adapter to charge the case as higher voltage adapters can damage the battery of the case and earbuds.

## RESETTING THE DEVICE

Please follow the below steps when you see two "Flobuds 400" in your Bluetooth device menu on your mobile, or you can hear music through only one earbud. This means the left and right earbuds have not auto-paired with each other:

**Step 1:** Disconnect the earbuds and remove " Flobuds 400 " from your mobile list of paired devices.

**Step 2:**

**Step 3:** Put them back into the charging case, and "Flobuds 400" is ready to use. They will automatically switch on and pair instantly as well.

The reset process is complete, and you can hear music through both the earbuds.

**Note:** Any damage to the product that is not a manufacturing defect will render the warranty null and void. Therefore, please take utmost care of your product.

\*T&C Apply

\*T&C Apply

## TECHNICAL SPECIFICATIONS

PARAMETERS	VALUES
Bluetooth Version	V5.3
Effective Distance	15m
Impedance	32Ω
Product Weight	40g
Speaker Size	13mm
Total Play Time	Upto 50 Hours
Earbuds Play Time	Upto 10 Hours
Talk Time	Upto 45 Hours
Standby Time	Upto 300 Hours
Complete Charging Time	1.5 Hours
Earbuds Charging Time	1 Hours
Rated Input	5V/1A
Frequency	20Hz-20KHz
Water And Sweat Resistant	IPX5
Charging Port	Type-C

\*T&C Apply

## SAFETY AND MAINTENANCE

Please read the below suggestions to help prolong the product lifespan and clearly understand the warranty clauses:

- Please keep the product dry, do not put it in humid conditions to avoid a short circuit.
- Do not expose it to the peak sun or high heat for extended periods, as this will shorten the lifespan of electronic components, damage the battery, and deform some plastic parts.
- Please do not put it in cold circumstances to avoid damage to the PCB board.
- Please do not attempt to dismantle the product, as it may be unsafe, especially for non-professionals.
- Do not use chemical products, detergents, or oily liquids to clean the item.
- Do not scratch the surface with sharp items to avoid damaging the case and appearance.
- Do not charge the product for more than 5 hours to avoid loss in battery life.
- Avoid hearing music at maximum volume for long periods as this can affect your hearing and is not advisable.

**Note:** Any damage to the product that is not a manufacturing defect will render the warranty null and void. Therefore, please take utmost care of your product.

\*T&C Apply