

WINGS HYPEBUDS 100

Truly Wireless Earbuds



USER MANUAL



INTRODUCTION

Wings is India's fastest growing audio, smart watches and accessories brand catering to the youth. Wings was recognized as the most **Prestigious Rising Brand Of Asia 2021-2022 by BARC Asia** in the gaming lifestyle accessories category.

Wings is on a mission to create a pop culture led brand that the youth is proud to own and **Nodwin, a subsidiary of Nazara Technologies**, has a strategic investment in alignment with the long term vision.

But before you dive right in, we strongly recommend going through this user manual thoroughly as it contains important technical information to ensure you have a seamless audio experience with us. After you're done with reading the manual, get ready to go to the next level with Wings!

2

WHAT'S IN THE BOX



1N Pair of TWS Earbuds



1N Charging Case

1N Type-C Charging Cable

1N User Manual

1N Warranty Card

2N Pairs of extra ear caps (Small & Large)

3

PRODUCT LAYOUT

Touch Control



Earbud LED Indicator & Microphone



Type C Charging Port



Digital Battery Display

4

HOW TO PAIR

Step 1: Make sure your case is charged up. Open the lid of the case and take out the earbuds. The earbuds will turn ON and automatically enter the pairing mode, and the Left earbud LED will flash quickly.

Step 2: Tap "Hypebuds 100" from the smartphone's Bluetooth menu. There is a ring prompt after a successful connection. This indicates that the earbuds are successfully connected to your device.

Step 3: Congratulations! You are now connected and can start playing media.

Note: If you do not connect to any device within 180 seconds of entering pairing mode, then both earbuds will automatically turn OFF. Please put the earbuds back into the case and repeat the pairing process.

5

TOUCH CONTROLS

Basic Functions	Left Earbud	Right Earbud	Touch Controls
Volume Increase		•	Single Tap on the right earbud's touch sensor
Volume Decrease	•		Single Tap on the left earbud's touch sensor
Play/ Pause Music		••	Double Tap on the any earbud's touch sensor
Next Track		•••	Triple Tap on the right earbud's touch sensor
Previous Track	•••		Triple Tap on the left earbud's touch sensor
Voice Assistant	<u>2 sec</u>		Long Press for 2 seconds on the left earbud's touch sensor
Game Mode ON/OFF		<u>2 sec</u>	Long Press for 2 seconds on the right earbud's touch sensor

6

CALL CONTROLS

Calling Functions	Left Earbud	Right Earbud	Touch Controls
Answering Incoming call		••	Double Tap on the any earbud's touch sensor
Hang up ongoing call		••	While on call, Double Tap on any earbud's touch sensor
Reject incoming call		<u>2 sec</u>	Long Press for 2 seconds on any earbud's touch sensor

CHARGING THE CASE

Note: Please only use a 5V/1A adapter to charge the case as higher voltage adapters can damage the battery of the case and earbuds.

Case Low Battery: When the case battery is less than 20%, the outer Case LED will flash 3 times every 30 seconds. Also, When the case battery is 0, the display panel will show 0%.

Charging the Case: The case display will show the battery percentage, and the case display will start to blink when charging. Also, the Case outer LED light will start blinking indicating that the Case is getting charged.

7

CHARGING THE EARBUDS

Fully Charged: The Case display will show 100% once the charging is completed. Also, the case outer LED light will turn on static.

Earbuds Low Battery: - Earbuds will play a jingle, when the buds are low on power.

Earbuds Charging: When earbuds are placed inside the charging case, the LED light on the earbuds will turn ON indicating that the earbuds are being charged.

Earbuds Completely Charged: When the earbuds are completely charged, the LED Light on the earbuds will go OFF.



8

RESETTING THE DEVICE

Please follow the below steps when you see two "Hypebuds 100" in your Bluetooth device menu on your mobile, or you can hear music through only one earbud. This means the left and right earbuds have not auto-paired with each other:

Step 1: Disconnect the earbuds and remove " Hypebuds 100" from your mobile list of paired devices.

Step 2: Tap 5 times quickly to clear the pairing data on either of the earbuds.

The LED light on both earbuds will blink 3 times simultaneously to show that the process is completed.

Step 3: Put them back into the charging case, and "Hypebuds 100" is ready to use. They will automatically switch on and pair instantly as well.

9

TECHNICAL SPECIFICATIONS

PARAMETERS	VALUES
Bluetooth Version:	V5.3
Effective Distance:	15M
Impedance:	32 Ohm
Product Weight:	40g
Speaker Size:	13mm
Total Play Time:	Upto 50 Hours
Earbuds Play Time:	Upto 10 Hours
Talk Time:	Upto 45 Hours
Standby Time:	Upto 300 Hours
Complete Charging Time:	1.5 Hours
Earbuds Charging Time:	1 Hour
Rated Input:	5V/1A
Frequency:	20Hz~20KHz
Water and Sweat Resistant:	IPX5
Charging Port :	Type-C

*T&C Apply

10

SAFETY AND MAINTENANCE

Please read the below suggestions to help prolong the product lifespan and clearly understand the warranty clauses:

- Please keep the product dry, do not put it in humid conditions to avoid a short circuit.
- Do not expose it to the peak sun or high heat for extended periods, as this will shorten the lifespan of electronic components, damage the battery and deform some plastic parts.
- Please do not put it in cold circumstances to avoid damage to the PCB board.
- Please do not attempt to dismantle the product, as it may be unsafe, especially for non-professionals.
- Do not use chemical products, detergents, or oily liquids to clean the item.
- Do not scratch the surface with sharp items to avoid damaging the case and appearance.
- Do not charge the product for more than 5 hours to avoid loss in battery life.
- Avoid hearing music at maximum volume for long periods as this can affect your hearing and is not advisable

Note: Any damage to the product that is not a manufacturing defect will render the warranty null and void. Therefore, please take utmost care of your product.

11