



PHANTOM 1100

 
Introduction

Welcome to the Wings True Wireless Generation with the all new Phantom 1100. We hope you are as excited as us to feel and flaunt your latest soundwear.

But before you dive right in, we strongly recommend going through this user manual thoroughly as it contains important technical information to ensure you have a seamless audio experience with us. Once you are done reading the manual, we are sure you will be all set to

**FEEL IT!
FLAUNT IT!**

Product Layout



1. Bluetooth Indicator Light
2. Game Mode LED Light
3. Game Mode Switch
4. "-" key
5. Charging interface TYPE-C USB
6. Play/pause multi-function key
7. "+" key
8. Microphone

How To Pair

- Step 1: Keep the distance between the earphone and mobile phone (or other devices that needs to be connected) within 1 meter. The closer, the better.
- Step 2: Press and hold the Multifunction button for 5 sec A voice prompt will confirm that the neckband is ON and has entered the pairing mode. The Bluetooth indicator light will also flash indicating the same.
- Step 3: Initiate Bluetooth function of mobile phone (or other device that needs to be connected). Then earphone-pairing name "Phantom 1100" will appear on your phone.
- Step 4: Select "Phantom 1100" and the earphone will automatically connect with your mobile phone.
- Step 5: Switch on the Bluetooth search function in your mobile phone or other devices need to be connected. Then the earphone will automatically reconnect with the mobile phone which has connected last time.

NOTE: Generally, there are 120 seconds at maximum to pair earphone with your mobile phone, or the Bluetooth Pairing mode will stop when the lights go out. Please retry steps 1 to 4 to pair again if your operation doesn't work.

Button Control Usage

- Power ON:** Press and hold the Multifunction button for 5 sec A voice prompt will confirm that the neckband is ON and has entered the pairing mode.
- Play/Pause the music:** Single press the multifunction button to play/pause the music.
- Volume Up/Down:** Press the "+" button to turn volume up. Press the "-" button to turn volume down.
- Music Skip:** Press and hold "+" button to skip to next track. Press and hold "-" button to skip to previous track.
- Dual Pairing:** To connect "Phantom 1100" to two devices simultaneously please go through the below steps.
Step1: connect the earphone to one of the devices. Then switch both the earphone and the device off.
Step2: Now connect the earphone to the second device, and again switch the first device on. The earphone will get connected to both devices. If not then, connect the first device manually once again to activate dual pairing.
- Voice Assistant:** Press and hold multifunction button for 2 sec to activate voice assistant.
- Game Mode:** Press Mode button once to switch to gaming mode. A voice prompt will confirm the same. Press the mode button again to switch to music mode.

Call Control

- Answer incoming call:** When there is an incoming call, the earphone will issue a voice message, press the Multifunction button once to answer the call, or use your mobile phone to answer it.
- Reject a call:** When there is an incoming call, the earphone will issue a voice message, long press the Multifunction button for 2 sec to reject the call, or use your mobile phone to reject the call
- Hang up a call:** Press the Multifunction button once or use your mobile to hang up your call.
- Last call redialing:** Double press the Multifunction button to redial your last call.

Charging Function

- Charging the Earbuds:** Before connecting Type-C charger, make sure the headset has been switched OFF.
- Charging Cable:** Plug USB cable into Type-C charging port of earphone; plug the other side of USB cable into the USB charger or other charging device. Charging will start and the red light remains bright on the earphone.
- Completely Charged:** Once the neckband is completely charged, the blue light will go always ON.

Technical Specifications

- Bluetooth Version: V5.2
- Profile Support: HSP, HFP, A2DP, AVRCP
- Talk Time: upto 55 hours
- Music Play Time: upto 60 hours
- Charging Time: 2 hours
- Charging Voltage: DC 5V/1A
- Frequency Range: 2.402G – 2.480G
- Ambient Temperature: -20 C/+60 C
- Transmission Distance: 15m
- Driver Unit: 12 mm
- Frequency Response: 20Hz-20000 Hz

Safety And Maintenance

- Please read below suggestions in order to helping prolong the product lifespan and clearly understand the warranty clauses.
- Keep the product dry, do not put it in humid conditions to avoid short circuit.
 - Do not expose it to the peak sun or high heat for extended period of time as this will short lifespan of electronic components, damage battery and deform some plastic parts.
 - Do not put it in cold circumstances to avoid damage to PCB board.
 - Do not attempt to dismantle the product, as it maybe unsafe especially non-professionals.
 - Do not use chemical products, detergent, oily liquids to clean the item.
 - Do not scratch the surface with sharp items to avoid damaging the case and appearance.
 - Do not charge the case for more then 5 hours to avoid loss in battery life.
 - Avoid hearing music at maximum volume for long periods of time as this can affect your hearing and is not advisable.
- Note:** Any damage to the product that is not manufacturing defect will lead to warranty being rendered null and void. Therefore, please take utmost care for your product.

Whats's In The Box

- 1x Neckband
- 1x Warranty Card
- 4x Extra Ear tips
- 1x User Manual
- 1x Type-C Charging Cable

