

WINGS
Phantom 450
USER MANUAL

INTRODUCTION :-

Wings is India's fastest growing audio, smart watches and accessories brand catering to the youth. Wings was recognized as the most Prestigious Rising Brand Of Asia 2021-2022 by BARC Asia in the gaming lifestyle accessories category.


Wings is on a mission to create a pop culture led brand that the youth is proud to own and Nodwin, a subsidiary of Nazara Technologies, has a strategic investment in alignment with the long-term vision.

But before you dive right in, we strongly recommend going through this user manual thoroughly as it contains important technical information to ensure you have a seamless audio experience with us. After you're done with reading the manual, get ready to go to the next level with Wings !

Packing contents:

- 1N Pair of TWS Earbuds
- 1N Charging Case
- 1N Type-C Charging Cable
- 1N User Manual
- 1N Warranty Card
- 2N Pairs of extra ear caps (Small & Large)

Product Layout:

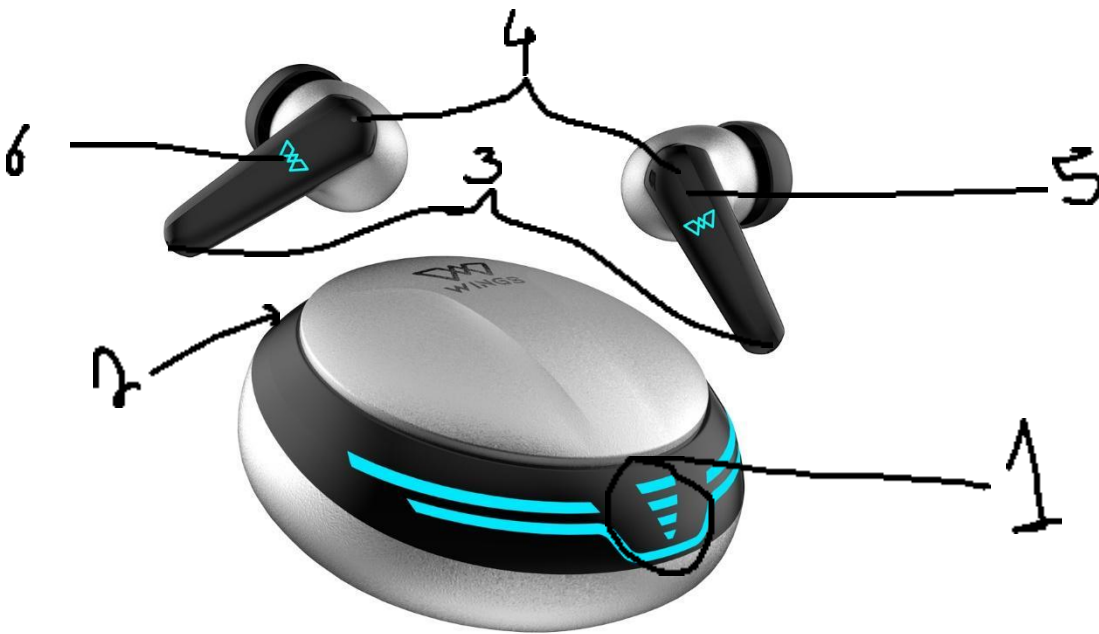

1. Charging LED of Charging Case
2. Type C Charging Port
3. Microphone 1
4. Microphone 2
5. Touch Control
6. LED Indicator of Earbuds

HOW TO PAIR: -









Step 1: Make sure your charging case is powered up. Slide the lid of the charging case. The earbuds will turn ON automatically and enter the pairing mode. The left earbud LED will flash quickly.

Step 2: Tap “**Phantom 450**” from the smartphone’s Bluetooth menu. The LED light will stop blinking after a successful connection. This indicates earbuds are successfully connected to your device.







Step 3: Congratulations! You are now connected and can start playing media.

Note: If you do not connect to any device within 180 seconds of entering pairing mode, then both earbuds will automatically turn OFF. Please put the earbuds back into the case and repeat the pairing process.

Touch Control:

Basic Function	Left Earbuds	Right Earbuds	Touch controls
Volume Increase			Single Tap on the right earbud's touch sensor
Volume Decrease			Single Tap on the left earbud's touch sensor
Play/Pause Songs			Double Tap on the any earbud's touch sensor
Next Track			Triple Tap on the right earbud's touch sensor
Previous Track			Triple Tap on the left earbud's touch sensor
Voice Assistant			Long Press for 2 seconds on the left earbud's touch sensor
Game Mode ON/OFF			Long Press for 2 seconds on the right earbud's touch sensor

Call Controls: -

Calling Functions	Left Earbud	Right Earbud	Touch Control
Answer Incoming Call			Double Tap on any earbud's touch sensor
Hang up calls			While on call, Double Tap on any earbud's touch sensor
Reject calls			Long Press for 2 seconds on any earbud's touch sensor

CHARGING THE CASE

Note: Please only use a 5V/1A adapter to charge the case as higher voltage adapters can destroy the battery of the case and earbuds.

Charging the Case: The case's ice-blue lights will blink while charging the case.

Fully Charged: The charging case's ice-blue lights will glow static until the charger is removed.

CHARGING THE EARBUDS

Earbuds Low Battery: - Earbuds will play a jingle when the buds are low on power.

Earbuds Charging: When earbuds are placed inside the charging case and close the lid of the charging case, the ice blue LED light of the charging case will turn ON

indicating that the earbuds are being charged.

Earbuds Completely Charged: When the earbuds are completely charged, the ice blue LED light on the charging case will go OFF.

Resetting The Device: -

Please follow the below steps when you see two "**Phantom 450**" in your Bluetooth device menu on your mobile, or you can hear music through only one earbud. This means the left and right earbuds have not auto-paired with each other:

Step 1: Disconnect the earbuds and remove "**Phantom 450**" from your mobile list of paired devices.

Step 2:

- Tap five times quickly to clear the pairing data on either of the earbuds
- The LED light on both earbuds will blink three times simultaneously to show the process is completed.

Step 3: Put them back into the charging case, and "**Phantom 450**" is ready to use. They will automatically switch on and pair instantly as well.

TECHNICAL SPECIFICATIONS

PARAMETERS	VALUES
Bluetooth Version:	V5.3
Effective Distance:	15M
Impedance:	32 Ohm
Product Weight:	49 gm
Speaker Size:	13mm
Total Play Time:	Upto 50 Hours
Earbuds Play Time:	Upto 10 Hours
Talk Time:	Upto 45 Hours
Standby Time:	Upto 300 Hours
Complete Charging Time:	1.5 Hours
Earbuds Charging Time:	1 Hours
Rated Input:	5V/1A
Frequency:	20Hz~20KHz
Water and Sweat Resistant:	IPX5
Charging Port:	Type C

SAFETY AND MAINTENANCE

Please read the below suggestions to help prolong the product lifespan and clearly understand the warranty clauses:

Please keep the product dry, do not put it in humid conditions to avoid a short circuit.

Do not expose it to the peak sun or high heat for extended periods, as this will shorten the lifespan of electronic components, damage the battery and deform some plastic parts.

Please do not put it in cold circumstances to avoid damage to the PCB board.

Please do not attempt to dismantle the product, as it may be unsafe, especially for non-professionals.

Do not use chemical products, detergents, or oily liquids to clean the item.

Do not scratch the surface with sharp items to avoid damaging the case and appearance.

Do not charge the product for more than 5 hours to avoid loss in battery life.

Avoid hearing music at maximum volume for long periods as this can affect your hearing and is not advisable.

Note: Any damage to the product that is not a manufacturing defect will render the warranty null and void. Therefore, please take utmost care of your product.