



# REVEL

True Wireless Earbuds



## USER MANUAL

### Introduction

Welcome to the Wings True Wireless Generation with the all new Wings Revel. We hope you are as excited as us to feel and flaunt your latest soundwear.

But before you dive right in, we strongly recommend going through this user manual thoroughly as it contains important technical information to ensure you have a seamless audio experience with us. Once you are done reading the manual, we are sure you will be all set to.

FEEL IT! FLAUNT IT!

②

### What's In The Box

- 2x Bluetooth Earphones
- 1x User Manual
- 1x Portable Charging Case
- 1x Type-C Charging Cable
- 4x Ear Cushions



③

### How To Pair

**Step 1:** Open the lid of the charging case and take out the earbuds.

**Step 2:** Both earbuds will auto-pair with each other. The left earbud is the master earbud. It will start flashing white and blue alternatively to indicate it has entered pairing mode.

**Step 3:** Turn on the Bluetooth on your mobile and pair with device name "Wings Revel-L".

**Step 4:** Congratulations! You are now connected and can start playing media.

*Note: In Dual mode, the left earbud is the master earbud and connects with your mobile. The right earbud is the slave earbud and connects with the left earbud.*

### Single Earbud Usage

**Step 1:** Take out any one earbud from the charging case.

**Step 2:** It will automatically power on and enter pairing mode with light flashing blue and white alternatively.

**Step 3:** Turn on the Bluetooth on your mobile and pair with device name "Wings Revel-L". or "Wings Revel-R" depending on which earbud you took out.

**Step 4:** Congratulations! You are now connected and can start playing media.

④

### Touch Controls Usage

**Play/Pause:** Double Touch the sensor on right earbud to play or pause music.

**Changing Songs:** Long Touch the sensor on right earbud for 2 seconds to go to next song. Long Touch the sensor on left earbud for 2 seconds to go to previous song.

**Adjusting Volume:** Triple Touch the sensor on right earbud to increase volume. Triple Touch the sensor on left earbud to decrease volume.

**Siri/Google Assistant:** Double Touch the sensor on left earbud to activate voice assistant.

*Note: Changing songs and adjust volume functions cannot be used in mono mode.*

### Call Controls

**Answer Incoming Call:** Single Touch the sensor on any earbud to answer incoming call.

**Reject Incoming Call:** Long Touch the sensor on any earbud for 2 seconds to reject incoming call.

**Hang Up After Call:** Single Touch the sensor on any earbud to end an active call.

⑤

### Charging Function

**Charging the Earbuds:** Place the earbuds back into the charging case. Please make sure to close the lid of the case after which earbuds will start charging.

**Charging the Case:** Take the Type-C charging cable. Plug in the Type-C end into the charging case and the other end into a plug point.

**Charging Level Indicator:** During charging, the 1<sup>st</sup>, 2<sup>nd</sup>, 3<sup>rd</sup> lights will be flashing to indicate battery level. When the case is fully charged, all 3 lights will remain lit. Total time to fully charge the case is about 2 hours.

*Note: Please do NOT use more than 5V output plug points to charge as it can cause damage to the case and will affect battery life.*

**Low Battery Warning:** When the battery level on the earbuds is low, you will hear a voice prompt "LOW BATTERY PLEASE CHARGE". Please place the earbuds back into the charging case to charge them immediately.

⑥

### Resetting The Device

Please follow the below steps when you see 2 "Wings Revel" in your bluetooth devices menu on your mobile or you can hear music through only 1 earbud. This means the left and right buds have not autopaired with the each other:

**Step 1:** Switch off you mobile bluetooth and remove "Wings Revel-L" and "Wings Revel-R" from the list of paired devices on your mobile.

**Step 2:** While the earbuds are charging in the charging case long press the sensor on both earbuds for 8 seconds.

**Step 3:** The lights will flash 3 times on both earbuds and then go off.

**Step 4:** Take out both earbuds and hold them close and switch on your mobile bluetooth. Now you will be able to see only one "Wings Revel-L". Click on the device to connect.

Reset process is now complete and will be able to hear music through both earbuds.

⑦

### Technical Specifications

- Bluetooth Version: V5.0
- Profile Support: HSP, HFP, A2DP, AVRCP
- Stand-by Time: 300 hours
- Talk Time: 7-8 hours
- Music Play Time: 7-8 hours
- Charging Time: 1.5 hours
- Charging Voltage: DC 5V
- Frequency Range: 2.402G - 2.480G
- Ambient Temperature: -20°C / +60°C
- Transmission Distance: 10m
- Earbuds Battery Capacity: 60mAh / 3.7V
- Charging Case Battery Capacity: 300mAh / 3.7V
- Driver Unit: 5.8 mm
- Sensitivity: 91dB +/- 3dB
- Impedance: 32Ω +/- 15%
- Frequency Response: 20Hz - 20000Hz

⑧

### Safety And Maintenance

Please read below suggestions in order to helping prolong the product lifespan and clearly understand the warranty clauses:

- Keep the product dry, do not put it in humid conditions to avoid short circuit.
- Do not expose it to the peak sun or high heat for extended period of time as this will short lifespan of electronic components, damage battery and deform some plastic parts.
- Do not put it in cold circumstance to avoid damage to PCB board.
- Do not attempt to dismantle the product, as it maybe unsafe especially non-professionals.
- Do not use chemical products, detergent, oily liquids to clean the item.
- Do not scratch the surface with sharp items to avoid damaging the case and appearance.
- Do not charge the case for more than 5 hours to avoid loss in battery life.
- Avoid hearing music at maximum volume for long periods of time as this can affect your hearing and is not advisable.

*Note: Any damage to the product that is not manufacturing defect will lead to warranty being rendered null and void. Therefore, please take utmost care of your product.*

⑨