

WINGS PHANTOM 250 GAMING EARBUDS

USER MANUAL



Introduction

Welcome to the Wings True Wireless Generation with the all new Phantom 250. We hope you are as excited as us to feel and flaunt your latest soundwear.

But before you dive right in, we strongly recommend going through this user manual thoroughly as it contains important technical information to ensure you have a seamless audio experience with us. Once you are done reading the manual, we are sure you will be all set to


FEEL IT! FLAUNT IT!

2

What's In The Box

2x Bluetooth Earbuds
1x Type-C Charging Cable
1x Portable Charging Case

1x User Manual
1x Warranty Card
4x Ear Tips

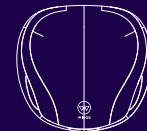

3

How To Pair

Step 1: Make sure your charging case is charged up. Simply open the lid of the charging case and take out the earbuds. The earbuds will turn ON and will automatically enter the pairing mode.

Step 2: Tap "Phantom 250" from the smartphone's Bluetooth menu. There is a voice prompt after successful connection. This indicates earbuds are successfully connected to your device.

Step 3: Congratulations! You are now connected and can start playing media.

Note : In case you do not connect to any device within 180 seconds of entering pairing mode, then both earbuds will be automatically power OFF. Please put the earbuds back into the case and repeat the process to pair.

4

Touch Control Usage

Play/Pause: Double Tap the sensor on any one earbud to pause music. Double Tap on any sensor again on any one earbud to resume playing music.

Changing Songs: Triple Tap on right earbud to go to next song. Triple Tap on left earbud to go to previous song.

Adjusting Volume: Single Tap on right earbud to increase volume. Single Tap on left earbud to decrease volume.

Siri/Google Assistant: Long press for 2 seconds on left earbud to activate voice assistant.

Gaming Mode: Long press for 2 seconds the right earbud to turn gaming mode ON, The earbuds will do breathing light effect .Long press for 2 sec the right earbud again to turn gaming mode OFF.

Call Controls

Answer Incoming Call: Double Tap the sensor on any earbud to answer incoming call.

Hang up Ongoing call: While on call, Double Tap the sensor on any earbud to hang up the call.

Reject Incoming Call: Long press on any earbud for 2 seconds to reject incoming call.

5

Charging The Case

Note: Please only use a 5V/1A adapter to charge the case as higher voltage adapters can destroy the battery of the case and earbuds.

Low Battery Indicator: When the charging case battery is Low, the case light will start flashing.

Fully Charged: When the case is completely charged, the case light will turn always ON.

Charging The Earbuds

Earbuds charging: When earbuds are placed inside the charging case, the lights on the earbuds will turn ON indicating that the earbuds are being charged.

Earbuds completely charged: When the earbuds are completely charged, the lights on the earbuds will go OFF.



Remove the protective layer from earbuds before charging the product

6

Resetting The Device

Please follow the below steps when you see 2 "Phantom 250" in your Bluetooth device menu on your mobile or you can hear music through only 1 earbud. This means the left and right earbuds have not auto paired with each other:

Step 1: Disconnect the earbuds and remove Phantom 250 from the list of paired devices on your mobile.

Step 2: Tap the sensor on either of the earbuds for 5 times quickly to clear the pairing data, the LED on both the earbuds will turn ON and then OFF after 3 seconds.

Step 3: Put them back into charging case and take out from the charging case, "Phantom 250" is ready to use on auto ON & auto pairing.

Reset process is now complete and you will be able to hear music through both earbuds.

7

Technical Specifications

- Bluetooth Version: V5.2
- Impedance: 32Ω
- Product Weight: 43g
- Speaker Size: 13mm
- Total Play Time: About 30 Hours
- Play Time In Single Charge: About 8 Hours
- Talk Time: About 25 Hours
- Standby Time: About 250 Hours
- Case Charging Time: 1.5 Hours
- Earbuds Charging Time: 1 Hour
- Rated Input: 5V/1A
- Frequency: 20Hz~20KHz

*Depends upon play volume

8

Safety And Maintainance

Please read below suggestions in order to helping prolong the product lifespan and clearly understand the warranty clauses:

- Keep the product dry, do not put it in humid conditions to avoid short circuit.
- Do not expose it to the peak sun or high heat for extended period of time as this will short lifespan of electronic components, damage battery and deform some plastic parts.
- Do not put it in cold circumstance to avoid damage to PCB board.
- Do not attempt to dismantle the product, as it maybe unsafe especially for non-professionals.
- Do not use chemical products, detergent, oily liquids to clean the item.
- Do not scratch the surface with sharp items to avoid damaging the case and appearance.
- Do not charge the case for more than 5 hours to avoid loss in battery life.
- Avoid hearing music at maximum volume for long periods of time as this can affect your hearing and is not advisable.

Note: Any damage to the product that is not manufacturing defect will lead to warranty being rendered null and void. Therefore, please take utmost care of your product.

9