

# WINGS UPBEAT 101

## USER MANUAL




### INTRODUCTION

#### Welcome to the Wings Portable Device Generation

With the all new Wings UpBeat 101, We hope you are as excited as us to feel and flaunt your latest Sound gear. But before you dive right in, we strongly recommend going through this user manual thoroughly as it contains important technical information to ensure you have a seamless audio experience with us. Once you are done reading the manual. We are sure you will be all set to.

#### FEEL IT! FLAUNT IT!

### WHAT'S IN THE BOX

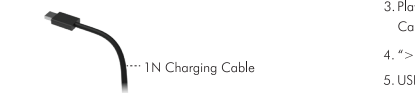

- 1N User manual
- 1N Warranty Card

### UPBEAT 101 LAYOUT



1. Power Button :- Long Press: Switch ON/ OFF the speaker. Double Press: TWS Connection
2. "<" Button: - Short Press: Volume Down Long Press: Previous Track
3. Play/Pause button: - Short Press: Pause/ Play/hands-free Calling
4. ">" Button: - Short Press: Volume Up. Long Press: Next Track
5. USB Drive slot
6. Micro SD Card Slot
7. Charging port
8. Status Light
9. Shoulder strap hooks
10. RGB LED Light

### HOW TO PAIR

**Step 1:** Switch ON the device by Long pressing the Power ON /OFF Button for 2 sec.

**Step 2:** You will hear a prompt. The status light will flash in blue, indicating that the device is powered ON and in pairing mode.

**Step 3:** Switch ON Bluetooth on your pairing device and search for "UpBeat 101" in the Bluetooth menu.

**Step 4:** Select "UpBeat 101" from the list of found devices.

**Step 5:** After successful pairing, you will hear a prompt indicating that the device is paired, and the Paring status Blue LED Will turn to always ON.

**Note:** When the Speaker is not connected to any device in Bluetooth Mode, then the Speaker will turn off automatically after 10min.

### SD CARD / USB MODE

#### Stream music from an SD card or USB flash drive

- Turn ON the device.
- Insert the SD card or USB flash drive preloaded with songs, into the SD card slot or USB flash drive slot of the device correspondingly, you will hear a voice prompt for "USB mode" or "TF card mode", respectively.
- Device would automatically start playing songs from the micro SD Card or USB flash.

#### TWS MODE ((•))

#### TWS mode enables Two Upbeat 101 to connect in stereo

- Turn ON the "UpBeat 101" that needs to be connected in TWS mode.
- Double Press the "Power" button on either device in Bluetooth mode, and you will hear a ringtone prompt. This confirms that the devices are connected successfully in TWS mode.
- Search for "UpBeat 101" on your mobile phone and pair it with this device.
- If you don't need TWS mode. Please Double press the "Power" button on either device. You will hear a ringtone. The devices are now disconnected in TWS mode.

### CHARGING THE DEVICE

When the device needs to be charged, plug the Micro USB end of the charging cable Into the charging port.

Plug the other end into a USB port or your computer or compatible power adapter (5V/1A; otherwise, it may cause damage to the device).

The Status Light will be ON constantly, indicating that the device is being charged. Once the device is fully charged, the status light will turn OFF.



### BUTTON FUNCTION

#### Playing Music

Music Mode	Function	Operation Buttons
Playing Music	Increase Volume	Short Press > key
Playing Music	Decrease Volume	Short Press < key
Playing Music	Pause	Short Press [ ] key
Playing Music	Play	Short Press [ ] key
Playing Music	Previous Track	Long Press < key
Playing Music	Next Track	Long Press > key

#### CALLING FUNCTION

Hands Free Mode	Function	Operation Buttons
Incoming Call	Answer IncomingCall	Short Press [ ] key
Incoming Call	Reject IncomingCall	Double Press [ ] key
Incoming Call	End the Call	Short Press [ ] key
Standby mode and connected to a device	Redial last number	Short Press [ ] key 2 times

### TECHNICAL SPECIFICATIONS

PARAMETERS	VALUES
Bluetooth Version:	5.1
Wireless distance:	Upto 10meters
Output power:	5Watt
Unit size:	11cm(L)*8cm(W)*8cm(B)
Power input:	DC 5V/1A
Charging time:	About 1.5 hours
Play time:	Upto 20 hours
Micro SD(TF)card/USB flash drive:	Supports up to 32GB
Multiple functions:	Wireless play/ USB flash drive/ Hands Free calling/ Micro TF card/RGB lights

### TROUBLESHOOTING

Some terminal music players are without an automatic switching play function. In this case, a 'pop' noise may be heard between songs.

If you cannot connect to your mobile device. Try removing the speaker from your mobile device's saved devices and re-connect as instructed above.

The sound performance may also be affected when there is a weak connection between the mobile device and the speaker. To improve connection, bring the mobile device closer to the speaker or remove any obstacles between the two devices.

The sound performance may also be affected if the speaker's battery power level is low. Please make sure the speaker is fully charged to improve this issue.

#### Note:

- Charge the speaker fully before first use.
- The charging time depends on the battery's existing charged levels and the USB adaptor's specifications.
- The LED indicator turns off automatically (during charging) when the battery is fully charged.
- The speaker's usage time depends on the charge in the battery, mode, volume level, etc.

### SAFETY AND MAINTENANCE

Please read the below suggestions to help prolong the product lifespan and clearly understand the warranty clauses:

- Keep the product dry, do not put it in humid conditions to avoid a short circuit.
- Do not expose it to the peak sun or high heat for extended period as this will shorten the lifespan of electronic components, damage battery and deform some plastic parts.
- Do not put it in cold circumstances to avoid damage to PCB board
- Do not attempt to dismantle the product, as it may be unsafe especially for non-professionals.
- Do not use Chemical products or detergent. Oily liquids to clean the item.
- Do not scratch the surface with sharp items to avoid damaging the case and appearance.

**Note:** Any damage to the product that is not a manufacturing defect will render the warranty null and void. Therefore, please take utmost care of your product.