

Adjusting the Size

1 You can adjust the size of your rollers skates for users with shoe sizes between 3-6.

Once the size is adjusted, tie the laces securely, making sure that they cannot be tripped over or caught in a wheel.

For extra fun, visibility and safety, the laces light up!



LIGHT UP LACES FOR
ADDED FUN & EXTRA VISIBILITY

2

On the rear of each roller skate is an adjustment lever. To adjust the size of the skate, start by pulling the lever down.

PULL DOWN
LEVER



3

To accommodate skaters with smaller shoe sizes, twist the lever in a clockwise motion. To increase the shoe size twist in a counterclockwise direction.

TWIST LEVER



4

Once your skates fit comfortably, push the adjustment lever back up to lock your preferred size in place.

PUSH UP
LEVER



NOTE: As you adjust the size, you will feel an internal toe covering shift.

Important Safety Precautions

BEFORE RIDING

1. READ ALL INSTRUCTIONS BEFORE USING YOUR ROLLER SKATES.
2. Your roller skates are designed to be used by children, ages 8 years old and up.
3. Do not ride in temperatures below 30°F.
4. Children should only use the roller skates with adult supervision.
5. Never immerse the roller skates in water.
6. Do not leave the roller skates in extremely high or low temperatures.
7. Make sure to wear a helmet, pads and other protective gear when riding your roller skates, making sure to comply with the laws of your local municipality.
8. Do not ride your roller skates with any loose clothing that can get caught in the wheels.
9. Make sure the size is suitably adjusted before you start skating. Your roller skates should have a snug yet comfortable fit.
10. Make sure all parts, specifically the wheels and axles are attached securely before you start to skate.
11. Do not use your roller skates if you notice any defects or irregularities. Contact the manufacturer or a certified technician immediately for support.

WHILE RIDING

1. When skating, make sure to always follow all traffic and safety rules based on the laws of your local municipality.
2. Do not skate while under the influence of any alcohol, medication or other substance which can cause impairment.
3. Do not attempt to do any tricks while skating. Furthermore, do not skate over rough terrain, icy roads, or uneven surfaces.
4. Ride carefully. Avoid stopping abruptly.
5. Practice riding in spacious areas at low speeds until you become more experienced and comfortable with higher speeds.
6. Do not allow your skates to be dragged by cars or bikes. Do not use your skates on escalators or in crowded areas.
7. Do not use your roller skates at night or in areas of low visibility.
8. Do not skate near stairs or bodies of water.

Maintenance and Care

- Clean your roller skates using a soft, dry cloth. If your roller skates need a deeper cleaning, you can use a cloth that has been lightly moistened with water. Never use harsh chemicals or detergents to clean your roller skates.
- Before using your roller skates, make sure that the wheels are dry. Furthermore, be sure that the wheels are undamaged and your laces are tied securely.
- When storing your roller skates, keep them in a cool, dry place. Avoid storing your roller skates in direct sunlight.
- When your roller skates are not in use, keep them out of reach of children or the infirm.
- Do not use your skates if you detect excessive wear and tear.

Sakar One Year Warranty

This warranty covers the original consumer purchaser only and is not transferable. This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered by Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:

Call 1-877-397-8200 or visit our website at www.sakar.com.

To receive warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaired.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.