 


Thank you for purchasing the Justice 4000mAh Slim Power Bank, item JUSPB01. Your device can act as a universal, portable and rechargeable power source. It can be used to charge most smartphones and USB devices. Please read this manual carefully FIRST in order to get the most out of your power bank.


A Quick Look

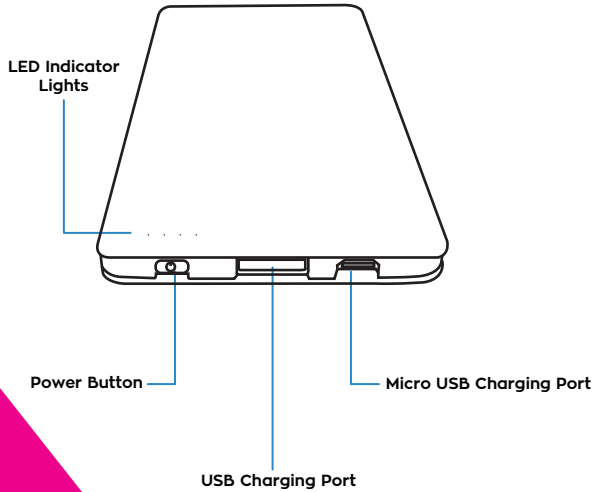


Charging Your Power Bank

Your power bank comes pre-charged and ready to use right out of the package. However, once its internal battery is drained, you will need to charge it in order to continue using it. Follow the steps below in order to charge your power bank.


1. The included Micro USB charging cable has a Micro USB plug and a USB-A plug.

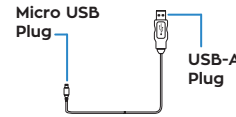


2. Press and hold the Power Button to power on your power bank. Insert the USB charging cable's Micro USB plug into the Micro USB charging port on your power bank.

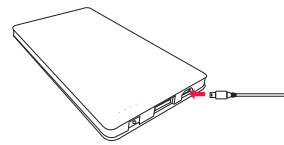

3. Insert the USB charging cable's USB-A plug into the USB port of a computer or suitable USB charging adapter.

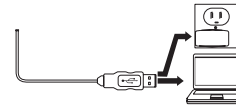

4. The LED Indicator Light turns blue and flashes while the power bank is charging. The light will remain blue and stop flashing when charging is complete. Unplug when charging is complete.

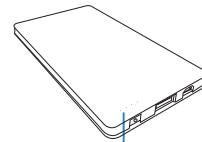

Important: The power bank's internal battery will become depleted over time if left idle. Periodically charge your power bank if it is left unused for extended periods.

Notes: For best results, make sure to plug into a USB port or USB charging adapter with an output of 5V/800mA or higher.

Charging Smartphones

 

You can use your power bank to charge smartphones or other USB devices. The internal battery of your power bank must be charged in order to do this. If it is not, please review the previous steps regarding charging your power bank. Follow the steps below in order to use your device to charge a smartphone.

1. Press and hold the Power Button to power on your power bank.

2. Insert one end of the smartphone's charging cable (not included) into the USB Charging Port on your power bank. Plug the other end into the charging port on your smartphone. Once plugged in, your power bank will begin charging your smartphone.

3. The LED indicator light will turn blue when your smartphone is receiving a charge from your power bank. The LED indicator light will turn off when your power bank's battery is drained completely. You can see the charging status on your phone's display screen. Unplug once your phone is fully charged.

NOTE: Do not charge the power bank and charge your phone or USB device at the same time. This will shorten the power bank's battery life.

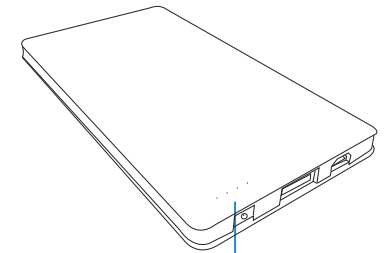



LED BATTERY
LIFE INDICATOR



PRE
CHARGED



IPHONE/ANDROID
COMPATIBLE



IPAD/TABLET
COMPATIBLE

Specifications


Battery Type: Lithium Ion Battery
Battery Capacity: 4000mAh
Power Input: DC 5V/1A
DC Output: DC 5V/1A
Charging Time: ~4 Hours*

*Charging time will vary depending on the USB power supply being used.

Important Safety Precautions

When using your power bank, basic safety precautions should always be followed, including the following:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR POWER BANK.
2. Never expose your power bank to high temperatures, extreme cold, high humidity or any moisture or water.
3. In order to avoid the risk of electric shock, never attempt to open your power bank or repair it without the assistance of certified professionals.
4. Your power bank is not to be used by children or the infirm without suitable adult supervision.
5. When your smartphone or USB device is fully charged, unplug it from your power bank.
6. Do not use your power bank at temperatures under 32°F (0°C) or over 104°F (40°C).
7. Do not drop your power bank, throw it, or subject it to strong impacts or physical trauma.
8. If you detect any abnormalities when using your power bank, contact the manufacturer for support. In addition, do not continue to use your power bank if you detect any leakage, smoke or fire.
9. If fluid from inside the battery gets in your eyes, do not rub your eyes. Wash your eyes with clean water and immediately contact a physician.
10. When charging, do not place your power bank on flammable materials such as rugs, carpets or bedding.
11. Do not charge the power bank and charge an electronic device at the same time. This will shorten the power bank's battery life.
12. Clean your power bank using a soft cloth or paper towel. Do not use harsh chemicals when cleaning your power pack, and never submerge your power pack in water.

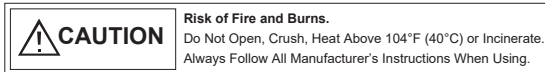

Maintenance and Care

- Before using your power bank, inspect the ports and plugs to make sure that they are clear of dust and debris before charging a device or inserting a Micro USB cable.
- Use a soft cloth to clean your power bank. Never use any harsh chemicals or detergents. Make sure your power bank is dry before using.
- When your power bank is not in use, it should be stored in a cool, dry place.
- Never tug or yank on a USB cable that is connected to your power bank. Connect and disconnect all cables as carefully as possible.
- Please recycle or dispose of your power bank properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your power bank for further information.

Sakar One Year Warranty

This warranty covers the original consumer purchaser only and is not transferable. This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered by Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:

Call 1-877-397-8200 or visit our website at www.sakar.com.

To receive warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaid.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

VIVITAR

© 2021 Sakar International
195 Carter Drive
Edison, NJ 08817
Support: 800 592 9541
www.vivitar.com