

EN REMOTE CONTROL ACCESSORY Quick Reference Guide

Ask for FM sensitivity scan level	1	Ask for Bluetooth password	3
Setup FM station sensitivity scan level: 1 or 2 or 3	1 2 3	Setup current mode as Ideal mode	
Store FM/DAB memory	9	Setup Auto Power ON for MASTER	
Delete FM/DAB memory	7	Setup Auto Power ON for Aux Line Output	
Delete all FM/DAB memories	4	Setup MASTER speaker output level: low	1
Update DAB available stations	8	Setup MASTER speaker output level: medium-low	2
Reset DAB available stations	0	Setup MASTER speaker output level: medium-high	3
FM Forced Mono	C	Setup MASTER speaker output level: max	4
Disconnect Bluetooth ID	5	Setup MASTER speaker output Mono	1
Ask for Bluetooth ID	2	Setup MASTER speaker output Stereo	2
		Version	3

FM/DAB next/prev station (long press)
 FM/DAB next/prev memory (short press)
 BT forwards/backwards song
 volume
 BT play/pause

long key press disconnects the Bluetooth Audio (A2DP)
 equalization
 ideal mode
 BT identifier (read)
 BT password (read)
 disconnect Bluetooth Audio (A2DP)

FM sensitivity
 remove all FM/DAB memories
 remove from FM/DAB memories list
 auto-power ON
 ON/OFF

manual dialing for direct keying FM (e.g. 96.4MHz)
 direct access to an FM memory (1-10)
 manual dialing for direct keying DAB service (e.g. the service number 46 in the list)

9	6	7	FM	4	6
4	FM				DAB