


### 1 PRESS AND TWIST

Apply gentle pressure on the sides of the plate and twist anti-clockwise until you feel 2 clicks and can lift the plate from the suction pad

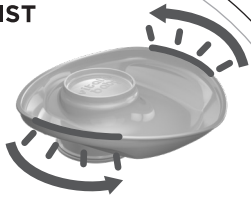

## REMOVING YOUR SUCTION PAD

### 2 UNLOCK AND LIFT

Flip the lever upwards and lift the suction pad from the surface. Tip: you may need to use your nail to lift the soft part to release the suction



## INSTRUCTIONS FOR CARE AND USE

### IMPORTANT! READ THIS INFORMATION BEFORE USE: For your baby's safety and health

### WARNING!

- Always use this product under adult supervision.
- Before first use, inspect the product. Throw away at the first sign of damage or weakness.
- Keep all components not in use out of the reach of children.
- Always check the food temperature before feeding.
- Do not microwave for more than 60 seconds or with oil rich foods, as this may damage the products. To avoid surface damage, do not use sharp utensils on/with this product. Some foods will stain this product. Food colours in the dishwasher may discolour the product.
- **NEVER place the suction pad in the microwave or dishwasher.**

This product conforms to BS EN 14372 standards.

## CLEANING & CARE

safe for:    
microwave dishwasher

Wash in warm soapy water, rinse in hot water and air dry before using for the first time and after each use. Vital Baby® power™ suction plate is top rack dishwasher safe and can be sterilised by all sterilising methods\*\*\*. They are all suitable for use in the microwave oven\*\*\* except for the power™ suction pad. Do not use abrasive or solvent based cleaning agents as this may cause damage. Store in a dry, covered container, out of direct sunlight when not in use.

Made in China to Vital Baby® specifications. Vital Innovations Limited, Hatfield, Herts, AL10 9EW, United Kingdom. Vital Baby® is a registered trademark. NOURISH™ and power™ are trademarks. Patent protected. Design Rights. © Vital Innovations Ltd 2019.

\*\* Suction pad may not perform on natural wood or textured synthetic wood, stone, textured or porous surfaces.

\*\*\*Suction pad is not suitable for microwave or dishwasher use.



[www.vitalbaby.com](http://www.vitalbaby.com)

### 1 PLACE



### 2 LOCK



## 4 SIMPLE STEPS


### 1 PLACE

Place the suction pad on your highchair tray or a smooth surface with the arrow facing your baby




### 3 DROP

Lower your suction plate on to the suction pad

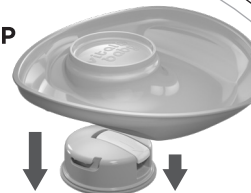


## USING YOUR SUCTION PLATE

### 3 DROP

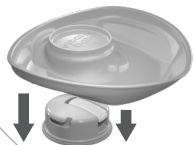

### 4 TWIST

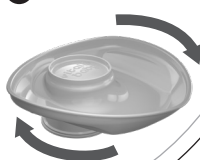


### 2 LOCK

Push down on the suction pad and flip the lever down to lock your suction pad securely in place\*\*



### 4 TWIST

Twist your suction plate clockwise until you feel it click twice

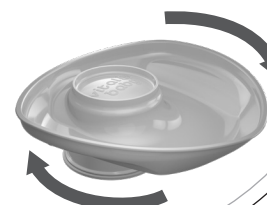

vital baby®

NOURISH™  
power™ suction plate

