




NOURISH™

scoop™ highchair

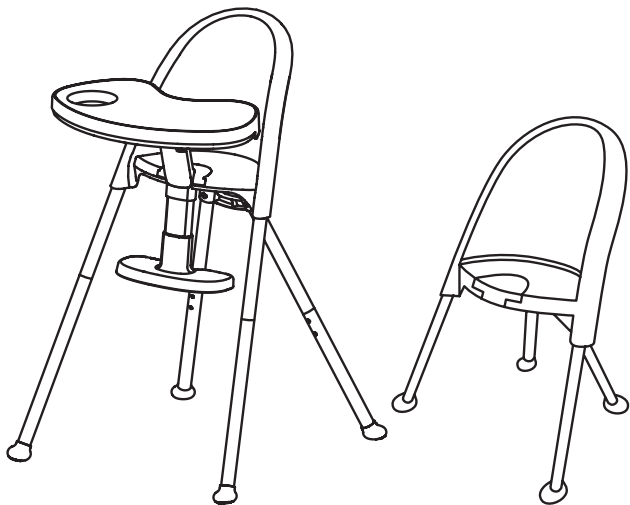

IMPORTANT, RETAIN FOR FUTURE REFERENCES: READ CAREFULLY BEFORE USE. FOR YOUR SAFETY AND HEALTH WARNING!

- Never leave the child unattended.
- Always use the safety harness.
- Falling hazard: Do not allow your child to climb on the product.
- Do not use the product unless all components are correctly fitted and adjusted.
- Do not use the product if any part is broken, torn or missing
- Be aware of the risk of open fires and other sources of strong heat in the vicinity of the product.
- Be aware of the risk of tipping when your child can push its feet against a table or any other structure.
- Do not use until the child can sit up unaided.
- Remove all packaging and keep all components out of the reach of children when not in use.
- This product is not a toy. Strap loops can cause strangulation. Never let children play with the chair or use it unsupervised.
- Keep children away when unfolding and folding the product to avoid injury
- This product as a highchair is intended for children able to sit up unaided and up to 3 years or a maximum weight of 15 kg.
- This product should only be used for the intended purpose for which it was designed, according to the instructions enclosed. Any other use is considered improper and therefore dangerous.
- Always hold the child securely when lifting them in or out of the chair. Make sure that the safety harness is fastened and the table is properly fixed in front of the child before you let go of them.
- Always adjust the safety harness and table snugly against the child to prevent them from climbing out of the product.
- Never attempt to move the product while the child is still in the chair.
- The product should be placed on a level, horizontal floor. To avoid the risk of the highchair tipping over, make sure that the chair's feet can slide on the floor.
- Do not place near open fires and other sources of strong heat.
- To avoid the risk of injury, ensure that the child is wearing - at a minimum - a nappy/diaper or trousers when sitting in the product
- Never push down on the table or tray - doing so risks injuring the knees of larger children



CLEANING AND CARE

- Before first and after each use, clean all parts with warm, soapy water or a mild detergent.
- Do not use bleach, abrasives, solvents, harsh chemicals or scourers to clean the product, this could cause damage to the product.
- Do not store or leave in direct sunlight or near a source of heat as this could damage the product.
- Table tray is suitable for the dishwasher (max 65°C)

TECHNICAL INFORMATION

- Name: Vital Baby® NOURISH™ scoop™ highchair
- SKU: 444282
- Net weight: 4.4kg
- Age: 6 months - 3 years
- Complies to EN14988

ATTENTION


ENSURE THE HIGHCHAIR TABLE UNIT IS SECURELY IN PLACE AT ALL TIMES.

SEE BELOW FOR REFERENCE.

Slide the table unit in to place in the chair (see figure 3). You will hear a “click” when this is securely in place.

WARNING: If you do not hear a “click”, the table unit is not secured properly.


FIGURE 3

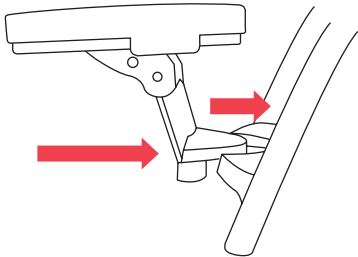

ASSEMBLY INSTRUCTIONS - HIGHCHAIR


Step 1

Insert the upper front legs (9) into the lower front legs (7), then insert the upper rear legs (10) into the lower rear legs (8). See figure 1. Make sure that the pins lock into place in the holes - you will hear a "click" when they are secure.

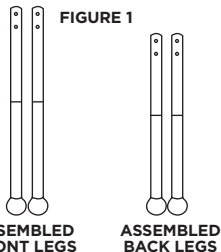


Step 2

Insert the assembled legs into the chair, ensuring that the straight front legs slot into holes "A" and "B" at the front of the chair, and that the slightly curved rear legs slot into holes "C" and "D". See figure 2. Make sure that the pins lock into place in the holes - you will hear a "click" when they are secure.

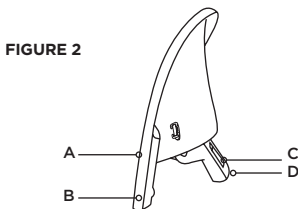


Step 3

Slide the table unit (3) in to place in the chair (see figure 3). You will hear a "click" when this is securely in place. Rotate the table to the eating position (see "ROTATING THE TABLE") and slot the table tray (4) into place.

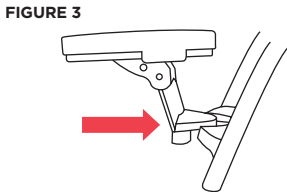

Step 4

Slot the footrest (5) into place in the pillar of the table. Make sure that the pin locks into place in the holes - you will hear a "click" when they are secure. See figure 4.

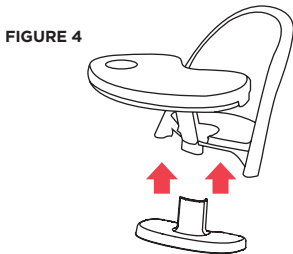

Step 5


Thread the harness through the slots in the chair cushion (2), ensuring that the cushion sits snug against the chair and no part of the harness is trapped behind the cushion.

TRANSITIONING FROM HIGHCHAIR TO TODDLER CHAIR

Step 1

Ensure the highchair is in the open position with the tray pulled and rotated forward – SEE “ROTATING THE TABLE” and “ADJUSTING THE TABLE”. Then remove the footrest. Do this by pushing the pin that’s secured into the highchair on the back of the pillar, while simultaneously pulling the footrest downwards. See figure 5.


FIGURE 5

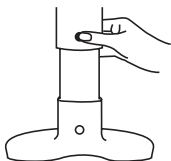

Step 2

Push the tray release button located on the underside of the chair (see figure 9) and slide the table unit out and away from the chair. Once the table has been removed, slot the chair cap (6) in to place in the chair - you will hear a “click” when it is secure. See figure 6.

FIGURE 6

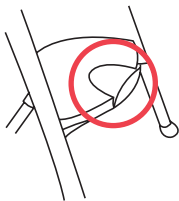

Step 3

De-thread the harness from the chair cushion and remove the cushion from the chair, before removing the harness straps from the chair.

Step 4


Remove the legs from the highchair and disassemble. Then, replace the lower front legs and lower rear legs into the highchair. The longer front legs should be inserted into slots “A” and “B” and the shorter back legs should be inserted into slots “C” and “D”. See figure 2.

ROTATING THE TABLE

The tray table can be rotated in to 3 different positions – open, eating and store. For how to store, see “STORING THE HIGHCHAIR”.

To rotate the table, push the buttons either side of the pillar underneath the table (see figure 7) while simultaneously rotating the table. You will hear a “click” when the table is securely in place.


FIGURE 7

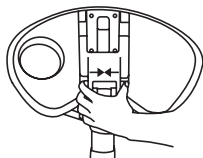

ADJUSTING THE TABLE

Push the button underneath the table (see figure 8), while simultaneously pulling or pushing the table in or out.


FIGURE 8

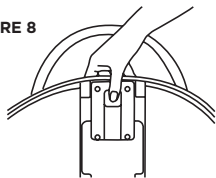

SECURING OR REMOVING THE TABLE

Push the button located on the underside of the chair (see figure 9) and slide the table unit out and away from the chair.

FIGURE 9

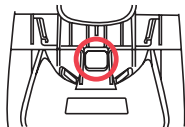

ADJUSTING THE FOOTREST

The foot rest has 2 different levels, adjustable by pushing the two buttons on the rear of the foot rest and sliding it up or down.

FIGURE 11

STORING THE HIGHCHAIR


To put the highchair in to the storage position, first pull the table out (see “ADJUSTING THE TABLE”). Then, rotate the table to the store position, before pulling the button on the rear leg bracket (see figure 10) and pushing the legs in toward the front legs. You will hear a “click” when they are securely in place. See figure 11.

FIGURE 10




COMPONENTS CHECKLIST


1

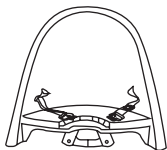

2

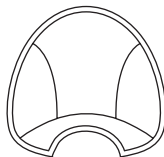


3

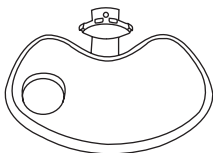



6



4

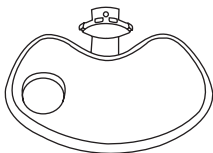

5

 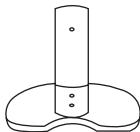

7



8



9



10

- | | | | |
|----|---------------|-----|---|
| 1. | chair | 6. | chair cap (for use with toddler chair only) |
| 2. | chair cushion | 7. | lower front legs |
| 3. | table | 8. | lower rear legs |
| 4. | table tray | 9. | upper front legs |
| 5. | footrest | 10. | upper rear legs |

www.vitalbaby.com

Made in China to Vital Baby® specifications. Vital Innovations Limited, Hatfield, Herts, AL10 9EW, United Kingdom. Vital Baby® is a registered trademark. NOURISH™ is a trademark. Design Rights. © Vital Innovations Ltd 2021