 
 


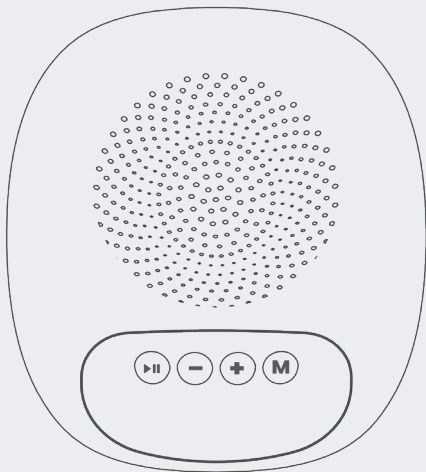

User Manual



Know your Speaker

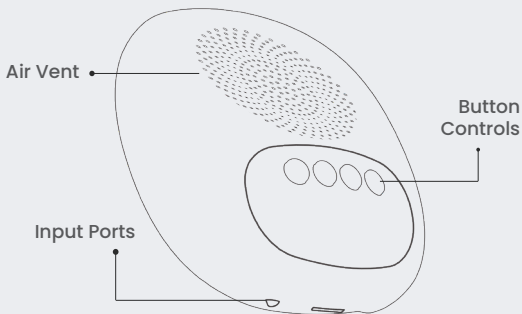

Whats In the Box?

Bluetooth Speaker

Type-C Cable

Warranty Card

Product specification

Bluetooth name – BassBox

Total rated output – 5W

 
Input Power – 5V 1A

Input source – Bluetooth, USB, SD Card

Product dimensions – 125x112x52mm

Speaker Panels

Top Panel

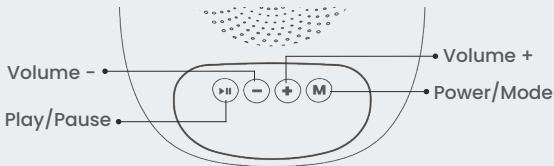

1. Power Button

Toggle button to Power On/Off the device.

2. ▶||

Short press: Play/Pause music

3. (-)

Short press to decrease the volume

Long press to go to previous song

4. (+)

Short press to increase the volume

Long press to go to next song

Speaker Side Panel:

1. USB Port
2. SD Card slot
3. Type-C charging port
4. Power On/Off switch

Operating Instructions

Once your speaker is fully charged, turn it on for connection.

Bluetooth Mode:

Turn on speaker and switch to Bluetooth mode (can be changed with Mode button on the front panel).

Search "Bassbox" on your mobile/connecting device and tap the Connect button.

USB mode:

Plug in a supported flash drive/USB (up to 32GB) into the USB port to automatically play media from USB drive.

Micro SD (TF) Card mode:

Insert a Micro SD card (up to 32GB) into the respective slot and the playback begins immediately.

(When inserting Micro SD Card, keep pins on downside)

TWS Mode:

Connect 2 Bassbox speakers at one time and use them as L and R channels.

1. Turn on both speakers & ensure they are in Bluetooth mode
2. Long press the " Play/Pause " button on one of the speakers
3. You should hear a voice prompt: "DIDI", this means that both speakers are connected successfully.

Note: The speakers will Auto connect when you power them on the next time.

Hands-free mode:

Click the " Play/Pause " button to answer/hang up the

call under Bluetooth Mode. Long press the "Play/Pause" button to reject the call. Double-click the "Play/Pause" button to redial the latest number.

FM Mode:

After turning on the speaker change to FM mode by pressing "M" button, now Long press the "Play/Pause" button for 2-3 second to enter the automatic FM channel search mode.

Note: To use FM mode, you need to plug in the USB charging cable on the speaker for antenna use.

Charing LED Indicator:

When charging: Glows Red

When fully charged: LED goes off

Bluetooth Pairing mode: Blue LED keeps blinking

Bluetooth Connected: Glows Blue

Troubleshooting:

1. If you cannot connect Bassbox wirelessly, unpair it and delete it from your connected devices' list and follow the connection guide to reconnect.

2. The sound performance may be affected when there is a weak connection between the signal device and the speaker. To improve connection, bring the connected device closer to the speaker or remove any obstacles between the two devices.

3. The sound performance may also be affected if the battery power level is low on the speaker. Please make sure the speaker is fully charged to improve this issue.

Note:

Charge the speaker fully before first use.

The charging time depends on the existing charged levels of the battery and the specifications of the USB adaptor.

The LED indicator turns off automatically (during charging) when the battery is fully charged.

The speaker's usage time depends on charge in the battery, mode, volume level, etc.

Important Safety Instructions

1. Do not expose the speaker to excessive heat or open flames, as this may cause the battery to explode.
2. Use only the provided charging cable or a certified replacement. Using an incompatible charger may result in damage or malfunction.
3. Avoid overcharging the device. Unplug the speaker once it is fully charged to prevent battery degradation.
4. Do not attempt to disassemble or modify the speaker, as this may lead to injury, fire, or damage to the product
5. Keep the speaker dry. Exposure to liquids may damage the internal components.
6. Be aware of your surroundings when using the speaker, especially in environments where safety may be compromised, such as while driving or walking.
7. Do not dispose of the speaker in household waste. Follow local regulations for the proper disposal of electronic devices.

8. Store the speaker in a cool, dry place when not in use. Extreme temperatures may affect battery life and performance.



WARNING:

To reduce the risk of electric shock, do not dismantle the product and do not expose the product to rain or moisture. No user-serviceable parts inside. Refer servicing to qualified personnel only.

1. Read the user manual before use. Keep all instructions for future reference
2. Always charge the product from a power source of the same voltage, frequency and rating as indicated on the rating label.
3. This product is intended for indoor, household use only.
4. To protect against electric shock: do not immerse unit in water or spray with liquids; do not place unit on windowsills or other places where it may be exposed to dripping or splashing of water; do not place vases or similar objects filled with liquids near the unit.
5. Do not use this product near water such as bathtubs, washbowls, swimming pools etc. where the likelihood of immersion or splashing occurs.

Keep the unit away from heat sources like radiators, heat registers, stoves or other products that produce heat. No open flame sources like candles should be placed on the unit.

7. Use only with attachments/accessories specified by the manufacturer. Use of attachments/accessories not recommended can be hazardous.
8. The speaker is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience, and knowledge unless they have been given supervision or instruction concerning use of the speaker by a person responsible for their safety.
9. Do not cover the unit during use. Do not impede ventilation by covering ventilation openings with cloths, curtains or similar items.
10. Do not operate the product with a damaged cord or port or if the product malfunctions or is dropped or damaged in any manner.
11. If the charging cord is damaged, it must be replaced.
12. For safety reasons, do not remove any covers or attempt to access the inside of the product.

13. Do not clean the unit with any harsh chemicals as this might damage the finish. Wipe clean with a dry cloth.
14. Do not expose the batteries to excessive heat, direct sunlight, fire or something similar.
15. Do not throw e-waste in your household rubbish. Dispose of it responsibly according to local regulations.

