


UFO

User Manual

B O U L T

Know your UFO

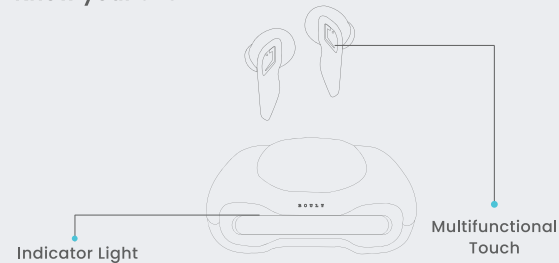

What's in the box ?

- Charging Case
- Earbuds
- Type C Charging Cable
- Extra pair of ear tips
- Warranty Card

Product specification

- Product Name – TWS Bluetooth Headset
- Model – Boult Audio AirBass
- Bluetooth Range – ~10m/33ft (without any obstacles)
- Earbuds Charging Time – 45 mins
- Frequency Range – 20Hz – 20KHz
- Technology – HFP/HSP/A2Dp/AVRCP
- Input – DC5V = 1A

How to use your UFO?

Touch Controls

The Touch Area (Multi-Functional Touch Panel) is located in the upper part of the earbuds handle.

Wearing Earbuds

The earbud marked with L is worn on the left ear and the earbud marked with R is worn on the right ear

Power ON/OFF:

Power ON: Auto: Open the charging case and take out the earbuds to Power ON. Manually: Tap and hold the multifunction button (MFB) for 3 seconds.

Power OFF: Auto: Place both the earbuds in the charging case, close the lid. Manually: Tap and hold the multifunction button (MFB) for 5 seconds.

Play/Pause

Tap the MFB once

Next Track

Double Tap the right MFB

Volume +

Triple Tap the right MFB

Answer the Call

Tap the MFB once

Pairing

Open the charging case, and take out the earbuds, the earbuds LEDs will start flashing automatically until paired with a device.

Activate Bluetooth on the device, turn on Bluetooth, search for pairing name "Boult Audio Airbass" and click on it.

Previous Track

Double Tap the left MFB

Voice Assistant

Long Press the MFB for 2s

Volume -

Triple Tap the left MFB

End Call/Reject

Double Tap the MFB

Game/Music Mode

Tap the MFB four times

Single Mode: When on dual mode, put one earbud into the charging case. Only take one earbud out of the charging case and connect it.

Bluetooth Lost: Turn off mobile phone's Bluetooth, earbuds will enter pairing mode and can pair with other devices. If the connection range is exceeded, the earbuds will enter back into connection mode. In case of no connection within 5 minutes, the earbuds will turn off.

Reset
If your earbuds fail to pair, or only one works, reset them.

Delete all "Boult Audio Airbass" Bluetooth records on the phone and turn off Bluetooth.

Put earbuds in the charging case and then take out to pairing modes, tap L&R 5 times simultaneously, hear "DU" prompt voice to clear all pairing.

Put earbuds back into the charging case.

Voice Prompts

You will hear 'power on' when the headset powers on.

You will hear 'power off' when the headset powers off.

You will hear 'connected' when the headset is paired.

You will hear 'low battery' when the headset is in low power status.

You will hear 'combat mode' when the headset is in gaming mode.

Maintenance Instructions

Warranty is valid/invalid only basis of the below criteria:

The product should be purchased through legal and formal channels to be applicable for warranty.

Damaging the product intentionally/unintentionally, or due to natural disasters, etc. is not covered in the warranty.

LED Functions

Opening the Case

The 4 Case LEDs will turn on, one-by-one and stop at the current case battery level
After 1 second, all the case and front LEDs will breathe for 6 times and turn off completely

Closing the Case

Front LEDs will breathe for 10 times and then turn off completely

Charging the Case

Front LEDs will blink continuously until charging is complete

When fully Charged

Front LEDs will glow continuously

When the buds are connected

Music Mode: Both earbuds' LEDs stay Off

Gaming mode: Both earbuds' LEDs will blink together



Scan & Download 'Boult Amp' App

Exquisite
Design



Pro+
Calling MIC

Touch Control



Saif's Choice

