


W50

User Manual



Know your W50

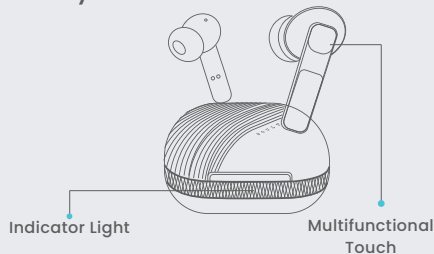

What's in the box ?

- Charging Case
- Earbuds
- Type C Charging Cable
- Extra pair of ear tips
- Warranty Card

Product specification

- Product Name – TWS Bluetooth Headset
- Model – Boult Audio AirBass
- Bluetooth Version – V5.3
- Speaker – 13mm
- Bluetooth Range – ~10m/33ft (without any obstacles)
- Earbuds Charging Time – 45 mins
- Frequency Range – 20Hz – 20KHz
- Technology – HFP/HSP/A2Dp/AVRCP
- Input – DC5V = 1A

How to use your W50 ?

Touch Controls

The Touch Area (Multi-Functional Touch Panel) is located in the upper part of the earbuds handle.

Wearing Earbuds

The earbud marked with L is worn on the left ear and the earbud marked with R is worn on the right ear

Power ON/OFF:

Power ON: Auto: Open the charging case and take out the earbuds to Power ON. Manually: Tap and hold the multifunction button (MFB) for 3 seconds.

Power OFF: Auto: Place both the earbuds in the charging case, close the lid. Manually: Tap and hold the multifunction button (MFB) for 5 seconds.

Play/Pause

Tap the MFB once

Previous Track

Double Tap the left MFB

Next Track

Double Tap the right MFB

Voice Assistant

Long Press the MFB for 2s

Volume +

Triple Tap the right MFB

Volume -

Triple Tap the left MFB

Answer the Call

Tap the MFB once

End Call/Reject

Double Tap the MFB

Game/Music Mode

Tap the MFB four times

Pairing

Open the charging case, and take out the earbuds, the earbuds LEDs will start flashing automatically until paired with a device.

Activate Bluetooth on the device, turn on Bluetooth, search for pairing name "Boult Audio Airbass" and click on it.

Single Mode: When on dual mode, put one earbud into the charging case. Only take one earbud out of the charging case and connect it.

Bluetooth Lost: Turn off mobile phone's Bluetooth, earbuds will enter pairing mode and can pair with other devices. If the connection range is exceeded, the earbuds will enter the back connection mode. No connection within 5 minutes, the earbuds will turn off.

Reset
If your earbuds fail to pair, or only one works, reset them.

Delete all "Boult Audio Airbass" Bluetooth records on the phone and turn off Bluetooth.

Put earbuds in the charging case and then take out to pairing modes, tap L&R 5 times simultaneously, hear "DU" prompt voice to clear all pairing.

Put earbuds back into the charging case.

Voice Prompts

You will hear 'power on' when the headset powers on.

You will hear 'power off' when the headset powers off.

You will hear 'connected' when the headset is paired.

You will hear 'low battery' when the headset is in low power status

You will hear gaming mode when headset is in Gaming mode

Maintenance Instructions

Warranty is valid/invalid only basis of the below criteria:

The product should be purchased through legal and formal channels to be applicable for warranty.

Damaging the product intentionally/unintentionally, or due to natural disasters, etc. is not covered in the warranty.

Exquisite
Design



Pro+
Calling MIC



Touch Control



IPX5 Water
Resistant



Saif's Choice