




# X30

## User Manual

B O U L T

### Know your X30

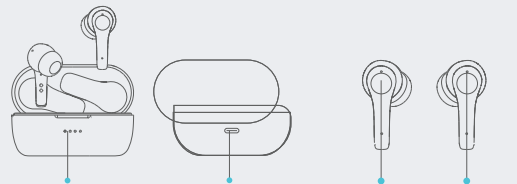

Indicator Light

Type - C  
Charging Port

Multifunctional  
Button

Indicator  
Light

### What's in the box ?

True wireless earbuds case  
2 earbuds  
Extra silicon tips  
USB Charging Cable  
User Manual  
Warranty card

### Product specification

Model Name - X30

Bluetooth version - Bluetooth V5.2

Supported mode - HFP/HSP/A2DP/AVRCP

Sensitivity - 103 dB+3dB

Signal distance - 10m (in an ideal environment without any large obstacles)

New Weight 40.6g

Charging time - Charge the charging case for 1.5 hours, and charge the earphone for about 1 hour

### Pairing Method

1. Lift the left and right earphones from the charging case to turn on the earphones, they will automatically enter the pairing mode and connect within 10 seconds.
2. Turn on your phone's Bluetooth device and search for the pairing name: Boulton Audio Airbass. Your device will be connected to the earphones.

### Charging Operation

1. Plug the Type-C charging cable into the Type-C charging port of the charging case.
2. Charging the earphone: Put the earphone into the charging case and they will start charging automatically. The green lights will keep blinking while charging, and when charging completes, the four green lights will glow together.

### Change Eartips

Please choose the ear tip's size according to the noise reduction effect and your comfort.

### Function

- Power On  
Take the earphone out of the charging case and it will power on automatically, or long-press the multi-function touch of either of the earbuds for 2 seconds.

- Power Off  
Put the earphones in the charging case and they will power off automatically, or long-press the multi-function touch of either of the earbuds for 5 seconds.
- Auto pairing  
If the earphones were previously paired to your device, they will automatically pair when turned on.
- Play/Pause  
While using the earphones, a single tap on the left/right earbud's multi-function touch to play/pause.
- Next/Previous  
Double-tap the left earphone's multi-function touch to play the previous track, and double-tap the right earphone's multi-function touch to play the next track.
- Answer A Call  
Single tap on the left/right earbud's multi-function touch to answer the incoming call.
- End A Call  
Double tap on the left/right earbud's multi-function touch to



end a call.

•Call Rejection

During an incoming call, double-click on either earbud's multi-function touch to reject the call.

•Voice Assistance

When earphones are connected, long press the left earphone's multi-function touch to trigger your voice assistant (Google/Siri).

•Volume+/-

Triple tap on the left earbud's multi-function touch to decrease the volume and triple tap on the right multi-function touch to increase the volume.

•Music Modes

Tap four times on the right earbud's multi-function touch to toggle 3 music modes - Rock/Bass Boost/Hi-Fi

•Gaming Mode

Tap four times on the left earbud's multi-function touch to toggle between Gaming mode (with lower latency) and Music mode (with better battery life)

45ms  
ultra-low  
latency



40  
Hours Playtime

ZEN™ Tech  
Quad Mic  
ENC



Voice  
Assistant

Bluetooth  
5.1

Fine-tune your  
entertainment



## Precautions

1. Please charge in a safe environment. When charging the charging case, please separate the charging case from the USB charging cable as soon as the charging indicator is off to avoid damage to the charging case caused by long-time charging.
2. When the music is playing, please adjust the volume to the appropriate level in order to avoid long-term damage to hearing due to high volume.
3. Try to avoid using the earphone where there is an interference source, otherwise, it may affect the earphone signal.
4. Try to avoid using the earphones in a corrosive environment, so as not to affect their functionality of the earphone.

## Tips

When you use the earphones to listen to music or talk, please adjust the volume accordingly to avoid damage to your hearing capacity.



Vicky's Choice