



X50

User Manual

BOULT


Know your X50



Indicator Light



Type - C
Charging Port

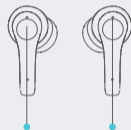

Multifunctional
Button



Indicator
Light

What's in the box ?

True wireless earbuds case
2 earbuds
Extra silicon tips
USB Charging Cable
User Manual
Warranty card

Product specification

Product Name - TWS Bluetooth Headset

Model - Boulton Audio X50

Material - ABS+PC

Bluetooth Transmission Range >10m

Bluetooth Version V5.1

New Weight 40.6g

Charging Case Capacity 550mAh

Earbuds Battery Capacity 40mAh

Input 5V/300mA

Transmission Frequency 2402 - 2485MHz

How to use your X50 ?

·Power On/Off

Power on: Press & hold on the left/right earbud for 2 seconds

Power off: Press & hold on the left/right earbud for 2 seconds

·Connect

The earbuds will automatically start pairing when you open the charging case, and will directly connect with your mobile

phone via Bluetooth with the name "Boulton Audio Airbass". In case It does not connect automatically, go to your bluetooth settings, search for the device name "Boulton Audio Airbass and then pair your device.

Play/Pause Music

Single tap on either earbud

Play previous song: Double tap on left earbud

Play the next song: Double tap on right earbud

Volume Controls

Triple tap on right earbud to increase volume

Triple tap on left earbud to decrease volume

Calling

Recive /Endcalls: Single Tap on either side of the earbuds.

Reject calls: Double Tap on either side of the earbuds.

Music Mode

Tap on the MFB in Right earbud Four times.

Gaming Mode

Tap on the MFB in Left earbud Four times.

Calling

Recive /Endcalls: Single Tap on either side of the earbuds.
Reject calls: Double Tap on either side of the earbuds.

Voice Assistance

Tap on the MFB in either earbud three times.

Low Battery Warning

When the battery of the earbuds runs low, there'll be a beep to remind you. The earbuds will automatically turn off when they run out of power.

Do's & Dont's

Do not use corrosive detergents to clean the product.

Store the product in a dry environment & charge the earbuds' case at least once a month.

Please raise the volume to the appropriate level while using the product. High volume may cause a risk of hearing loss.

Do not dismantle or use the product near fire or in high-temperature environment. If expansion occurs, discontinue using the product.

Maintenance Instructions

Warranty is valid/invalid only basis of the below criteria:

The product should be purchased through legal and formal channels to be applicable for warranty.

Damaging the product intentionally/unintentionally, or due to natural disasters, etc. is not covered in the warranty.

High Fidelity
Audio



Touch Control



Pro+
Calling MIC



Exquisite
Design

