 
 


Y1 Pro

 
BOULT

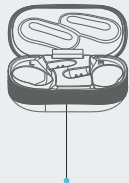

Indicator Light

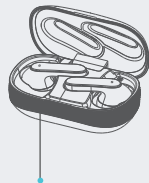

Textured Case

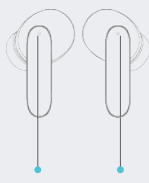

Multifunctional Touch

Indicator Light

What's in the box ?

- Charging Case
- Earbuds
- Type C Charging Cable
- Manual
- Extra pair of ear tips
- Warranty Card

Product specification

- Product Name – TWS Bluetooth Headset
- Model – Boult Audio AirBass
- Bluetooth Range – ~10m/33ft (without any obstacles)
- Earbuds Charging Time – 60 mins
- Frequency Range – 20Hz – 20KHz
- Technology – HFP/HSP/A2Dp/AVRCP
- Input – DC5V = 1A

How to use your Y1 Pro ?

Touch Controls

The Touch Area (Multi-Functional Touch Panel) is located in the upper part of the earbuds handle.

Wearing Earbuds

The earbud marked with L is worn on the left ear and the earbud marked with R is worn on the right ear.

Power ON/OFF:

Power ON:

Auto: Open the charging case and take out the earbuds to Power ON.

Manually: Tap and hold the multifunction button (MFB) for 3 seconds.

Power OFF

Auto: Place both the earbuds in the charging case, close the lid.

Manually: Hold MFB for 5 seconds.

Play/Pause

Tap the MFB once

Next Track

Double Tap the right MFB

Previous Track

Double Tap the left MFB

Volume +

Triple Tap the right MFB

Volume -

Triple Tap the left MFB

Voice Assistant

Long Press the MFB for 2s

Answer the Call

Tap the MFB once

End Call/Reject

Double Tap the MFB

Game/Music Mode

Tap the MFB four times



High Fidelity Acoustics

Pairing

Open the charging case, and take out the earbuds, the earbuds LEDs will start flashing automatically until paired with a device.

Activate Bluetooth on the device, turn on Bluetooth, search for pairing name "Boulton Audio Airbass" and click on it.

Single Mode: When on dual mode, put one earbud into the charging case. Only take one earbud out of the charging case and connect it.

Bluetooth Lost:

Turn off mobile phone's Bluetooth, earbuds will enter pairing mode and can pair with other devices.

If the connection range is exceeded, the earbuds will enter the back connection mode. No connection within 5 minutes, the earbuds will turn off.

Reset

1. If your earbuds fail to pair, or only one works, reset them. Delete all "Boulton Audio Airbass" Bluetooth records on the phone and turn off Bluetooth.
2. Put earbuds in the charging case and then take out to pairing modes, tap L&R 5 times simultaneously, hear "DU" prompt voice to clear all pairing.
3. Put earbuds back into the charging case.

Voice Prompts

- You will hear 'power on' when the headset powers on.
- You will hear 'power off' when the headset powers off.
- You will hear 'connected' when the headset is paired.
- You will hear 'low battery' when the headset is in low power status
- You will hear 'gaming mode' when the headset is in gaming mode.

Maintenance Instructions

Warranty is valid/invalid only basis of the below criteria:

The product should be purchased through legal and formal channels to be applicable for warranty.

Damaging the product intentionally/unintentionally, or due to natural disasters, etc. is not covered in the warranty.

Exquisite
Design



Pro+
Calling MIC

Touch
Control



Saif's Choice