 


Z40 Ultra

BOULT

Know your Z40 Ultra

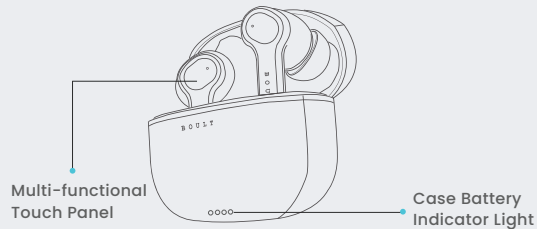

Sonic Core Dynamic™ – Hardware accelerated audio processing

- Accurate & superior Noise cancellation
- Low power consumption
- Intelligent voice recognition
- Exceptionally clear and detailed sound

Prism Voice PLC™ – AI powered lag free conversation

- Immersive gaming
- Enhanced call quality & seamless virtual VoIP meetings

Dual Stream DSP™ – Simultaneous dual instruction audio processing

- Swift and synchronous audio transfer
- Adaptive audio equalization

Whats In the Box?

- Charging Case
- Earbuds
- Type C Charging Cable
- Extra pair of ear tips
- Warranty Card
- How to turn ON ANC steps card

Product specification

Product Name – TWS Bluetooth Headset

Model – Boult Audio AirBass

Speaker – 10mm

Bluetooth Range – ~10m/33ft (without any obstacles)

Earbuds Charging Time – 90 mins

Frequency Range – 20Hz – 20KHz

Technology – HFP/HSP/A2Dp/AVRCP

Input – DC5V = 1A

How to use your Z40 Ultra?

Touch Controls

The Touch Area (Multi-Functional Touch Panel) is located in the upper part of the earbuds handle.

Wearing Earbuds

The earbud marked with L is worn on the left ear and the earbud marked with R is worn on the right ear

Power ON/OFF:

Power ON:

Auto: Open the charging case and take out the earbuds to Power ON.

Manually: Tap and hold the multifunction button (MFB) for 3 seconds.

Power OFF

Auto: Place both the earbuds in the charging case, close the lid.
Manually: Hold MFB for 5 seconds.

Noise Cancellation Modes: Press the right MFB for 2s to switch between ANC mode, Transparency mode or Normal mode

Play/Pause

Tap the MFB once

Next Track

Double Tap the right MFB

Previous Track

Double Tap the left MFB

Volume +

Triple Tap the right MFB

Volume -

Triple Tap the left MFB

Voice Assistant -

Press the left MFB for 2s

Answer the Call

Tap the MFB once

End Call/Reject

Double Tap the MFB

Game/Music Mode

Tap the Left MFB four times

EQ modes

Tap Right MFB four times

Active Noise Cancellation

Pairing

Open the charging case, and take out the earbuds, the earbuds LEDs will start flashing automatically until paired with a device.

Activate Bluetooth on the device, turn on Bluetooth, search for pairing name "Boult Audio Airbass" and click on it.

Single Mode: When on dual mode, put one earbud into the charging case. Only take one earbud out of the charging case and connect it.

Dual Device Connectivity:

- Connect the Z40 Ultra with your first device. Once your Z40 Ultra is paired with the first device, turn off the Bluetooth of your first device.
- Now turn on the Bluetooth of your second device and follow the same steps to connect to your Z40 Ultra Bluetooth earbuds.
- Once Z40 Ultra is connected to your new device, turn on the Bluetooth of the first device.
- You will hear a sound again "Your earphones are now connected" which means both your devices are now connected to the Z40 Ultra earbuds.
- You can now enjoy music and take calls from both your connected devices on your Z40 Ultra earbuds.

Bluetooth Lost:

Bluetooth Lost: Turn off mobile phone's Bluetooth, earbuds will enter pairing mode and can pair with other devices.

If the connection range is exceeded, the earbuds will enter back into connection mode. In case of no connection within 5 minutes, the earbuds will turn off.

Reset

If your earbuds fail to pair, or only one works, reset them.

- Delete all "Boult Audio Airbass" Bluetooth records on the phone and turn off Bluetooth.
- Put earbuds in the charging case and then take out to pairing modes, tap L&R 7 times simultaneously, hear "DU" prompt voice to clear all pairing.
- Put earbuds back into the charging case.

Voice Prompts

- You will hear 'power on' when the headset powers on.
- You will hear 'power off' when the headset powers off.
- You will hear 'connected' when the headset is paired.
- You will hear 'low battery' when the headset is in low power status
- You will hear 'gaming mode' when the headset is in gaming mode.

Maintenance Instructions

Warranty is valid/invalid only basis of the below criteria:

- The product should be purchased through legal and formal channels to be applicable for warranty.
- Damaging the product intentionally/unintentionally, or due to natural disasters, etc. is not covered in the warranty.

Super High Battery Life



Touch Control

