### CARE AND MAINTENANCE

### **Door Furniture**

At twelve (12) monthly intervals, the fixing screws securing the furniture to the door, both surface fix and through fix, should be checked and tightened as required. Loose fitting furniture which fails will not be covered under warranty.

All door furniture should only be wiped clean with a soft damp cloth. A non-abrasive mild household detergent may be used to remove ingrained grime.

### Mortice Lock

Care should be taken to ensure the internal components are kept free of dirt and filings during installation as this is the most common cause of malfunction and will not be covered under warranty.


### WARRANTY

Our goods come with guarantees that cannot be excluded under the local consumer law. You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The warranty does not cover any defect or damage which may be caused or partly caused if the goods are not properly maintained, installed or are not suitable to the specified application.

Refer to our website for our finish warranty.



# **Artus Smart Lock** INSTALLATION INSTRUCTIONS

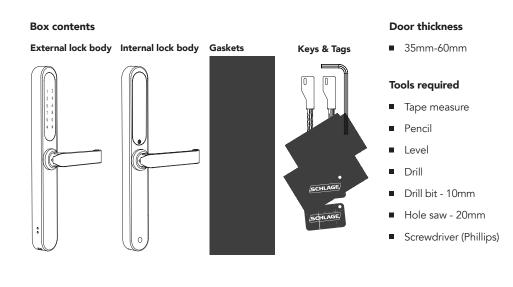

### Fixing Pack

Door thickness	Screw post	Screw	Spindle	Mortice Screw
35mm-45mm	M5*30mm x 2	M5*30mm x 1	7.8*7.8*60mm x 1	Aluminium Door: M5*10 mm x 4 Wooden Door: M4*20 mm x 5
		M5*50mm x 1		
46mm-60mm	M5*40mm x 2	M5*40mm x 1	7.8*7.8*80mm x 1	
		M5*60mm x 1		

Allegion (Australia) Pty Ltd Freephone 1800 098 094 Email auinfo@allegion.com www.allegion.com.au Allegion (New Zealand) Limited Freephone 0800 477 869 Email nzinfo@allegion.com www.allegion.co.nz




PDSC0031

04/2023

### 1. PREPARE THE DOOR

- A. Prepare the door hole preparation as per the Schlage Artus Smart Lock template.
- B. Mount lockbody into position.

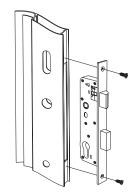

# 2. FASTEN POSTS

A. Attach the post to the lower stud on the back of the external unit.
B. Attach the second post to the fixing post screw, slide the screw head into the slot on the top of the back of the external unit. Loosely tighten post to screw to allow free moment.

## 5. ATTACH GASKETS

 
Attach and secure rubber gaskets to the internal and external units.




### 6. POSITION EXTERNAL UNIT TO THE DOOR

# holes. Adjust the top fixing post to align with top fixing hole.

# 9. INSTALL BATTERIES



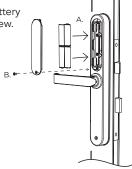

# 10. TEST LATCH OPERATION


With the door in the open position test lock operation;

- A. Rotate the external lever, ensure latch bolt <u>does not</u> retract (refer to step 4).
- B. Rotate the internal lever, ensure latch bolt <u>does</u> retract.

Test operation using code 123456#. (Ignore "add Bluetooth administrator" voice message when testing code).

### 3. HANDING (AS REQUIRED)

Insert hex key into the spindle hole, remove screw to loosen the lever. Rotate the lever 180° and tighten the screw to reattach the lever. Repeat for the internal unit.

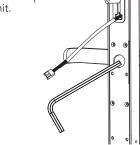

### 7. POSITION INTERNAL UNIT TO THE DOOR

Remove battery cover from internal unit. A. Connect cables ensuring excess cable is concealed inside the door. B. Line up spindle to the spindle hole in the body of the unit.


# 11. PAIR AND PROGRAMME LOCK

Download the Schlage Breeze app, available on both the App Store and Google Play.


Pair the lock with the app, when prompted by the locks voice command "Add Bluetooth administrator". Follow the instructions on the app.



### 4. ADJUST SPINDLE HOLDER DIRECTION

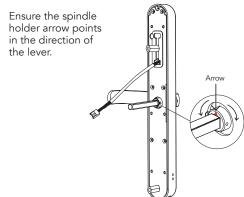

### 8. AFFIX UNIT TO DOOR

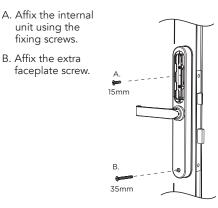


### USER TIPS

To activate the keypad press the # key.

When unlocking, after entering your PIN code, press the # key.

 For additional security, lift lever upwards to throw the deadbolt.



Add Lock