


11-Channel Input Hub Sensor Harness Diagram/Pinout (3-Conductor)

NOTE: This diagram must be read and fully understood before beginning installation. If this diagram is not fully understood, installation should not be attempted. Failure to follow these instructions and pictures may result in subsequent system failure.

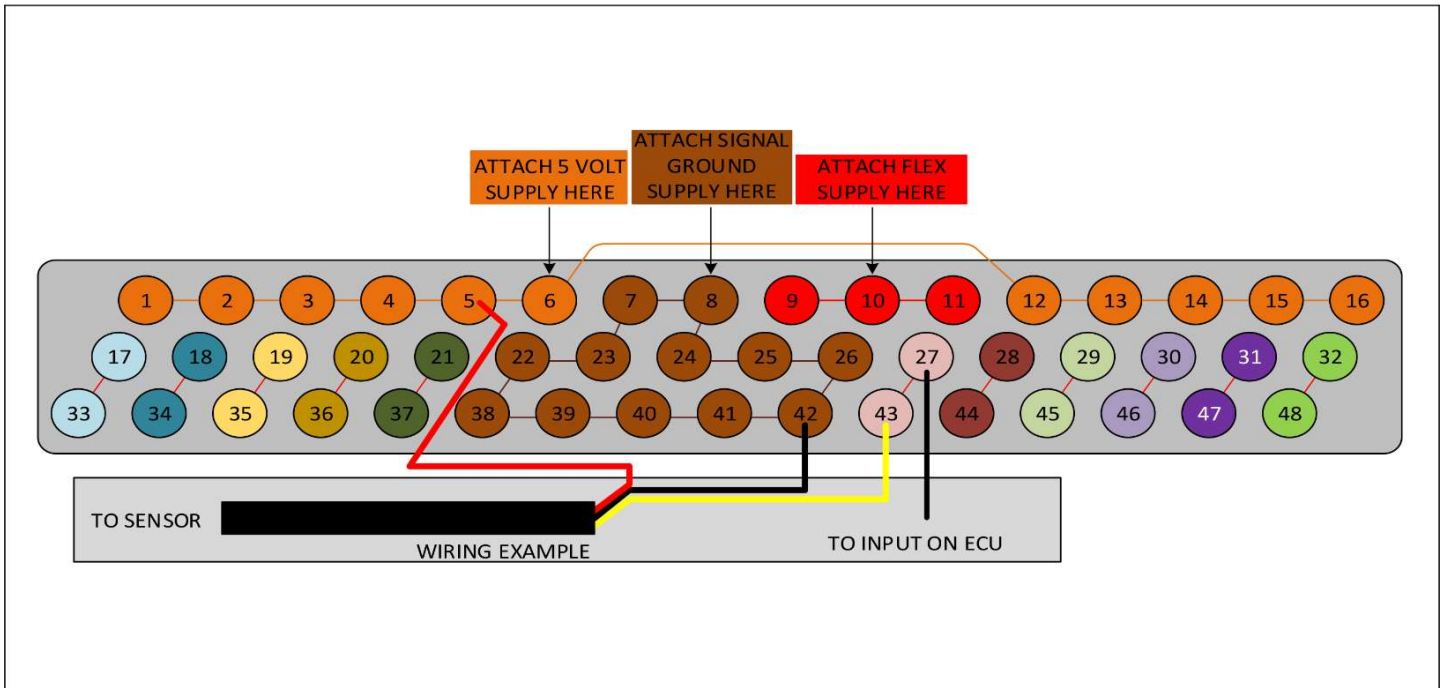

INTERFACE TO ECU	
WIRE COLOR	FUNCTION
WHITE/BLACK	INPUT 1 IN
WHITE/BROWN	INPUT 2 IN
WHITE/RED	INPUT 3 IN
WHITE/ORANGE	INPUT 4 IN
WHITE/YELLOW	INPUT 5 IN
WHITE/GREEN	INPUT 6 IN
WHITE/BLUE	INPUT 7 IN
WHITE/VIOLET	INPUT 8 IN
WHITE/GRAY	INPUT 9 IN
WHITE	INPUT 10 IN
GREEN/WHITE	INPUT 11 IN
ORANGE	5 VOLT FROM ECU
BROWN	0 VOLT FROM ECU
RED	FLEX FROM SOURCE