




8-Channel Input Hub Sensor Harness Diagram/Pinout (MilSpec)

NOTE: This diagram must be read and fully understood before beginning installation. If this diagram is not fully understood, installation should not be attempted. Failure to follow these instructions and pictures may result in subsequent system failure.

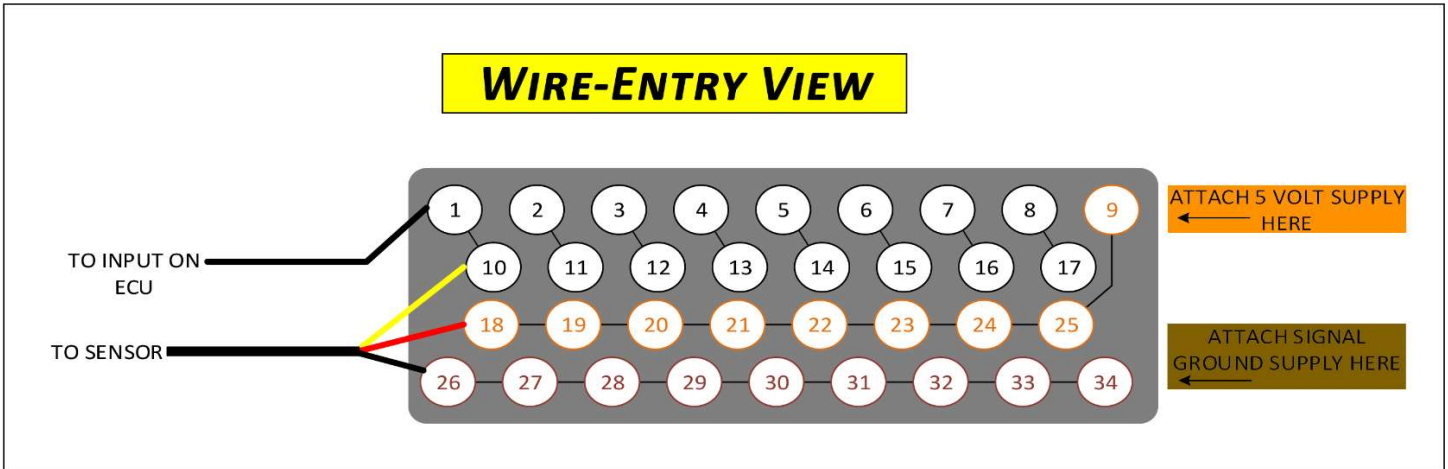

8-Channel Input Hub Connector							
PIN	WIRE COLOR	FUNCTION	SOURCE NOTES:	PIN	WIRE COLOR	FUNCTION	SOURCE NOTES:
1	WHITE/BLACK	INPUT 1 TO ECU		18	ORANGE	5 VOLT TO SENSOR	
2	WHITE/BROWN	INPUT 2 TO ECU		19	ORANGE	5 VOLT TO SENSOR	
3	WHITE/RED	INPUT 3 TO ECU		20	ORANGE	5 VOLT TO SENSOR	
4	WHITE/ORANGE	INPUT 4 TO ECU		21	ORANGE	5 VOLT TO SENSOR	
5	WHITE/YELLOW	INPUT 5 TO ECU		22	ORANGE	5 VOLT TO SENSOR	
6	WHITE/GREEN	INPUT 6 TO ECU		23	ORANGE	5 VOLT TO SENSOR	
7	WHITE/BLUE	INPUT 7 TO ECU		24	ORANGE	5 VOLT TO SENSOR	
8	WHITE/VIOLET	INPUT 8 TO ECU		25	ORANGE	5 VOLT TO SENSOR	
9	ORANGE	5 VOLT TO ECU SUPPLY		26	BROWN	0 VOLT TO SENSOR	
10	WHITE/BLACK	INPUT 1 TO SENSOR		27	BROWN	0 VOLT TO SENSOR	
11	WHITE/BROWN	INPUT 2 TO SENSOR		28	BROWN	0 VOLT TO SENSOR	
12	WHITE/RED	INPUT 3 TO SENSOR		29	BROWN	0 VOLT TO SENSOR	
13	WHITE/ORANGE	INPUT 4 TO SENSOR		30	BROWN	0 VOLT TO SENSOR	
14	WHITE/YELLOW	INPUT 5 TO SENSOR		31	BROWN	0 VOLT TO SENSOR	
15	WHITE/GREEN	INPUT 6 TO SENSOR		32	BROWN	0 VOLT TO SENSOR	
16	WHITE/BLUE	INPUT 7 TO SENSOR		33	BROWN	0 VOLT TO SENSOR	
17	WHITE/VIOLET	INPUT 8 TO SENSOR		34	BROWN	0 VOLT TO ECU SUPPLY	