 



Z E G A

INTELLIGENT
COOKWARE

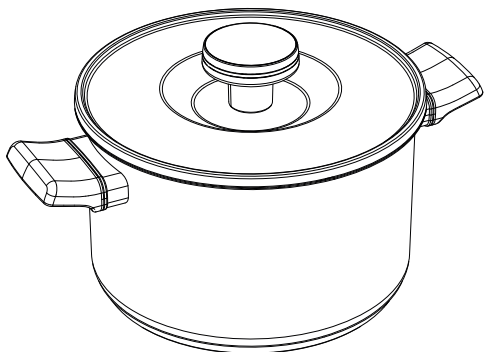


Welcome to Zega
User guide

 
What's included

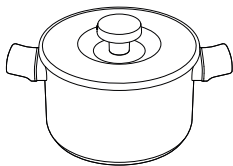


Zega 5.0L / 5.2qt. pot

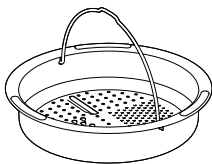


steamer / grater

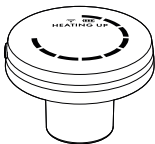


SmartControl Knob

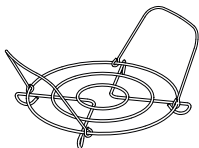

elevated meat rack

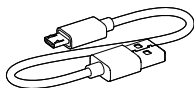


USB charging cable

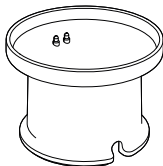

charging dock

Get started


Attach digital SmartControl knob

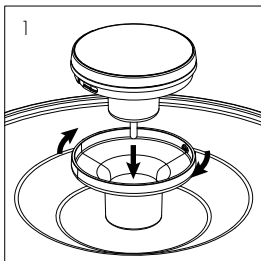

Place the SmartControl knob into the holder and locate the bayonet fixing.

Twist clockwise to tighten and secure.

Remove digital SmartControl knob

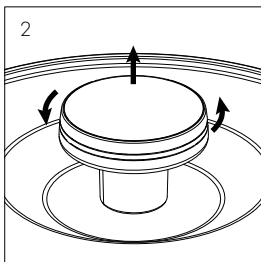

Twist SmartControl knob anti clockwise to release and remove.

SmartControl knob should be removed when washing the lid or charging.

Connect with Zega App

1. Download and install app



Scan QR code or
search for "Zega
Intelligent Cookware"



Download on the
App Store




GET IT ON
Google Play

2. Create Zega account

To create your Zega account, swipe through the welcome screens and select Sign up.

Enter your name, email address and password (min 8 characters) and press Sign up to be taken to the Main Menu.

3. Turn on the SmartControl knob

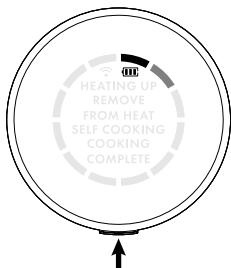

Press and hold the side button for 3 seconds to turn dial on.

The dials on the knob display will slowly revolve indicating that it is ready to pair.

4. Pair to your phone

Ensure that your phone is Bluetooth enabled.

In the Zega App, go to Settings > Manage Devices and press + to add a new device.

The on-screen instructions will guide you through the process. Once paired, the SmartControl knob will beep and the display will pulsate the dials indicating that you can now use the device.

Cook with Zega

Cook using Recipes

Selecting Recipes allows you to choose one of the delicious and healthy recipes created for you by our expert chefs.


Each recipe has a list of ingredients and easy instructions for you to follow. Simply prepare the ingredients, add them to the pot and follow the instructions to guide you through the cooking process.

Cook using Quick Cook

Selecting Quick Cook allows you to use or create your own recipes from scratch. This gives you all the functionality of Zega while allowing you to unleash your creativity.


Charge Zega

Connect the charger

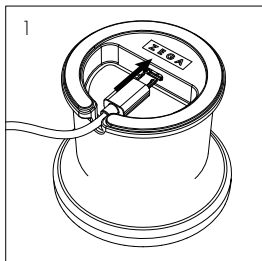

Insert the USB cable into the bottom of the charging dock and plug the other end into a suitable socket.

Insert SmartControl knob

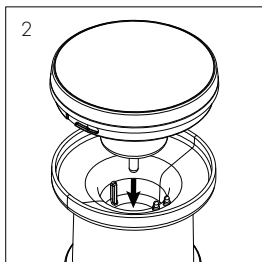

Place the SmartControl knob into the dock ensuring the slot is aligned. It will automatically charge.

Care & Maintenance

Cleaning

While the Zega pot is dishwasher-safe, the digital SmartControl knob is not and must be removed from the lid before washing. Remove the SmartControl knob and remove any residue using a lightly damp microfiber cloth, wiping the display gently and dry it with a dry microfiber cloth. Do not submerge in water. Wash the lid by hand using warm soapy water and ensure it dries thoroughly before reattaching to the lid.

Storage

All of the accessories fit inside the Zega pot for storage. Ensure that the digital SmartControl knob is turned off before storing.

Safety

Important safety instructions

- 1 Read all instructions
- 2 Never touch hot surfaces
- 3 To protect against electrical shock, do not immerse cord, plugs, or the device's electrical components in water or other liquid
- 4 Close supervision is necessary when appliance is used by or near children
- 5 Do not operate the appliance if it has malfunctioned or been damaged in any manner
- 6 Do not use outdoors
- 7 Do not place the device in a heated oven
- 8 Use extreme caution when moving the Zega pot when containing hot liquids
- 9 Do not use Zega for anything other than its intended use
- 10 Do not remove the SmartControl lid during cooking as it prevents the SmartControl knob from functioning correctly
- 11 Do not remove the SmartControl knob whilst the Zega pot is on the heat
- 12 Always protect surfaces when removing the pan from the heat whilst self-cooking mode.
- 13 Never allow Zega to boil dry.

Warranty & Contact

Lifetime guarantee

Your Zega comes with a lifetime guarantee. If you run into any issues, please contact support@zegacookware.com with the receipt, a detailed description of the issue with photo/video evidence, if possible.

The lifetime guarantee excludes damage resulting from (i) normal wear and tear, accident, misuse, abuse or commercial use, (ii) scratches, stains, discolouration, corrosion or damage from overheating, to the interior or exterior of the pan. A slight yellowing of the surface can occasionally happen after heating. This is normal and completely harmless and doesn't affect the performance of the pan and is therefore excluded from the warranty.

Get in Touch

If there is something that we have not covered above, please get in touch with us at:
support@zegacookware.com