

In-Use Screen



After a Massage program is selected, you will be taken to the **Body Scanning screen**. Once the body scan is complete, you can use the arrows to adjust the back mechanism up and down to match your specific shoulder height. Press **OK** to start massage.



- | | | |
|-----------------------|------------------------|--------------------|
| 1 Home Display Screen | 4 Indicators | 7 Active Airbags |
| 2 Time Remaining | 5 Adjustments Menu | 8 Pause Massage |
| 3 4D Intensity Level | 6 Back Roller Position | 9 Air Massage Menu |


After adjusting your shoulder height, you will be taken to the **In-use screen** where you can observe all current settings and session information. To personalize your massage, tap the screen to adjust heat, rollers, and 4D Intensity. To tailor your massage to your exact needs, use the **Adjustments Menu** and **Air Massage Menu** found at the bottom of your screen. Tap icon on screen to go to respective menu.



Adjustments Menu



Air Massage Menu

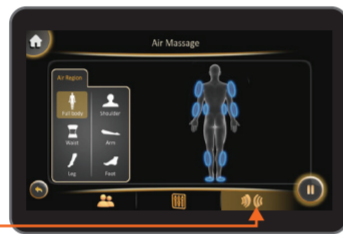


Manual Massage

Have a particular spot that needs more work? Take the power of massage into your own hands with Manual Settings. Tap **Manual** on the home display screen to enter the Manual display screen.




Back - Massage Technique

 Controls the massage technique of the back mechanism. Tap a second time to enter a faster variation of that technique. Number in top right corner represents variation. Rolling only one speed.



Additional Settings

 Controls features of your chair such as Back heat, Reflexology Foot rollers, and Kneading Calf rollers.



Focus Zone

Controls the range of motion of the back mechanism.

- Point** stops on the track for targeted relief. Tap screen to select setting.
- Partial** travels a short distance and reverses direction for focused relief.
- Full** travels the entire length of the track.

Back Mechanism Adjust

Controls the location of the back mechanism. Location indicated by red dots on figure.


Location can only be adjusted in Partial and Point modes.



Message Width

Controls width settings of back mechanism. Width indicated by yellow dots on figure.

Width can't be adjusted when in Kneading, or Swedish modes.

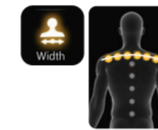


RockerTech
by Infinity

72 Stard Road, Seabrook, NH 03874 | (800) 242-0761
www.kyotamassagechairs.com

Version 1.1

RockerTech
by Infinity

Sensation™ 4D Massage Chair

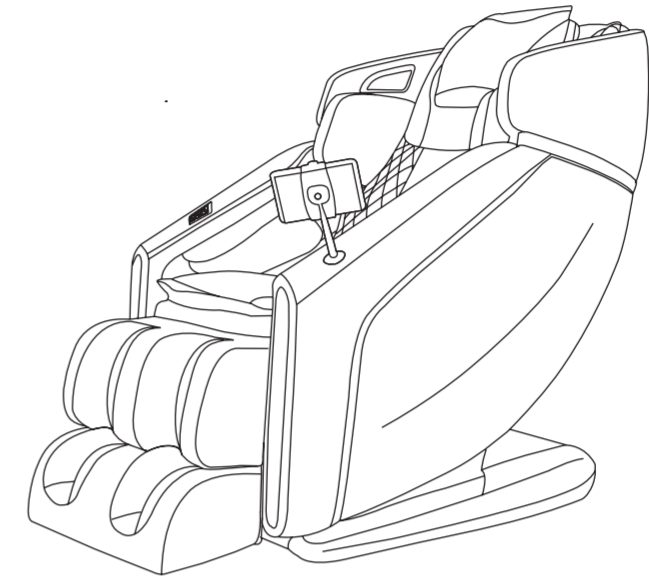


Quick Start Guide

RockerTech
by Infinity



AUTO - Select from 16 pre-set auto programs. To select simply tap the auto program you wish to run.

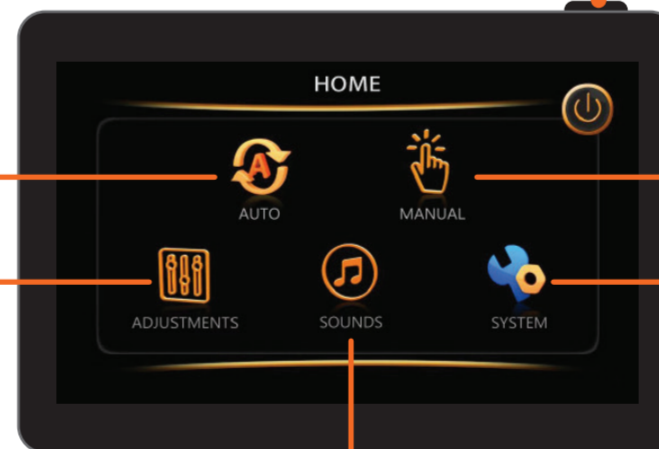

HOME - Use the power button on the top right edge of the tablet remote to turn the chair on/off. After turning on your chair, this is the first screen you will see on your tablet. Use this screen to navigate all menu options. To select, simply tap the screen with your finger.

Power On Chair Here



MANUAL - Have a particular spot that needs more work? Take the power of massage into your own hands with Manual Settings. Use this screen to fully customize your own massage and find the perfect treatment for you. Use the **Adjustments Menu** and **Air Massage Menu** found at the bottom of your screen to further customize your massage. Tap icon on screen to go to respective menu.

Air Massage Menu

Adjustments Menu



ADJUSTMENTS - While your massage program is running, use this screen to make adjustments to massage strength & speed, airbag intensity, or chair angles.



SOUNDS - Use this screen to select and control the SootheMe™ Sound Therapy feature of your chair. The selected sound will play from the Intersound™ speakers. To turn SootheMe™ nature sounds off, de-select the activated sound.



SYSTEM - Use this screen to adjust and personalize your chair and Tablet Remote settings.