



# RFID to Plug & Charge

The AutoBot non-app version charger is set to operate in RFID mode by default. However, if you prefer the convenience of Plug & Charge mode, you have the option to switch it. To make this change, please follow the step-by-step instructions provided below:


1. Use a screwdriver to carefully push the two barbs at the bottom of the equipment and remove the upper cover.

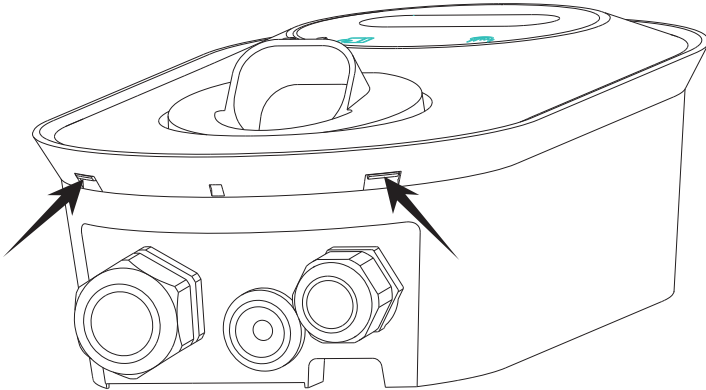

2. Loosen the six screws securing the second cover and carefully detach it from the base box.

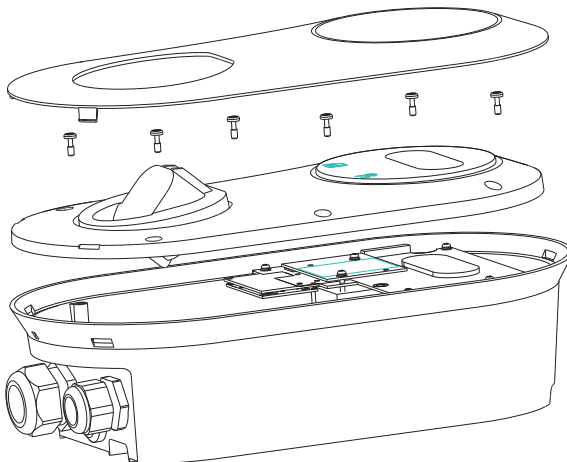


**3.** Remove the four screws per the diagram and gently lift the screen panel.

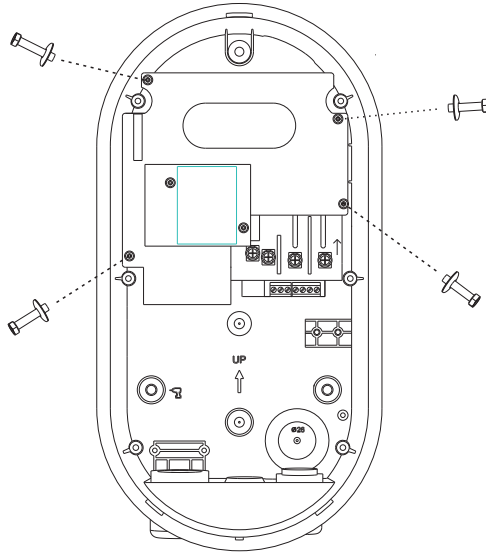


**4.** Move Key 1 to the ON position.

**⚠ DANGER**

Ensure that Key 2 and Key 3 remain unchanged. It is crucial to follow this instruction to avoid any potential product failure, electrical shock, or other hazards.

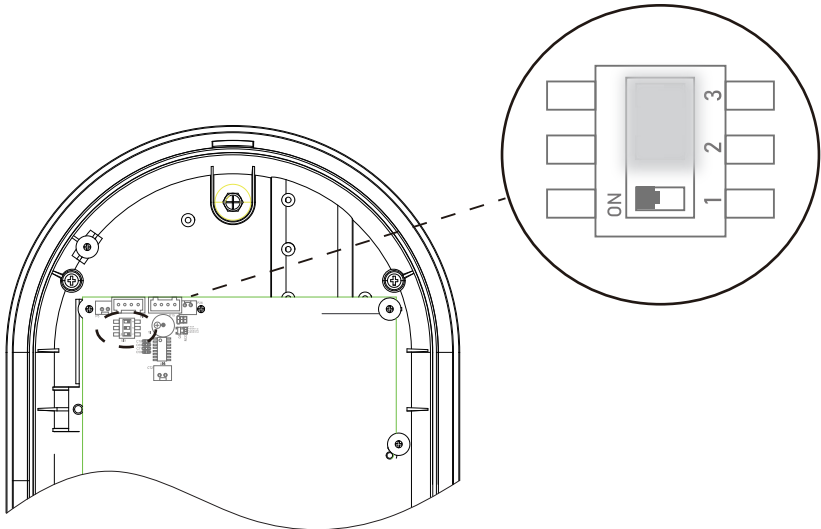

- 5.** Insert and secure the four screws to reattach the screen panel.
- 6.** Screw the second cover back.
- 7.** Fasten the upper cover by properly buckling it.

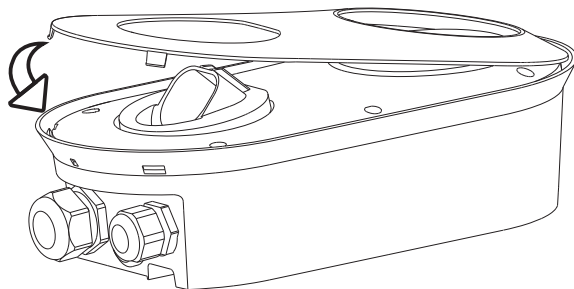

By following these instructions, you can successfully switch your AutoBot non-app version charger to the convenient Plug & Charge mode.