



If you have questions or need technical support, please contact The Guitammer Company, not the store where you purchased the product.

The Guitammer Company

Email us at:  
support@guitammer.com

Visit us on the web at:  
www.thebuttkicker.com

# OWNER'S MANUAL

# ButtKicker®

## Wireless Link2 BK-LINK2

### More Information

Visit [www.thebuttkicker.com](http://www.thebuttkicker.com) for support, FAQs, more information and details on this, and other ButtKicker® brand products and accessories.



### Limited Warranty

Your ButtKicker BK-LINK2 is warranted against failure for 1 YEAR unless otherwise stated. The Guitammer Company will service and supply all parts at no charge to the customer providing the unit is under warranty. Shipping costs are the responsibility of the customer. THE GUITAMMER COMPANY DOES NOT PAY FOR PARTS OR SERVICING OTHER THAN OUR OWN. A COPY OF THE ORIGINAL INVOICE IS REQUIRED TO VERIFY YOUR WARRANTY.

The Guitammer Company assumes no responsibilities for ButtKicker® low frequency audio transducers or speakers damaged by this unit. This warranty does not cover, and no liability is assumed, for damage due to: natural disasters, accidents, abuse, loss of parts, lack of reasonable care, incorrect use, or failure to follow instructions. This warranty is in lieu of all other warranties, expressed or implied. No representative or person is authorized to represent or assume for The Guitammer Company any liability in connection with the sale of servicing of products of The Guitammer Company. THE GUITAMMER COMPANY SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

When RETURNING merchandise to The Guitammer Company, you may call or email for a return authorization number. Describe in writing each problem. If your unit is out of warranty, you will be charged the current FLAT RATE for parts and labor to bring your unit up to factory specifications.

Serial Number:

Please record the serial number from the rear panel of your amplifier for reference.

## IMPORTANT SAFETY INSTRUCTIONS

### READ BEFORE OPERATING EQUIPMENT

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

#### WARNING

Do not ingest the battery, Chemical Burn Hazard  
(The remote control supplied with) This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.  
Keep new and used batteries away from children.  
If the battery compartment does not close securely, stop using the product and keep it away from children.  
If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

This Page Intentionally Left Blank

## Wireless Pairing

### Pairing Instructions

Connect the supplied DC Adapters to the Transmitter and Receiver. A Blue LED will illuminate and blink before remaining solid.

Push the Pairing Switch located on the bottom of the Transmitter once. The Blue LED will blink rapidly.

Push the Pairing Switch located on the bottom of the Receiver once.

The Blue LED will blink rapidly. Pairing is successful when both the Transmitter and Receiver's LED is illuminated and no longer blinking.

If the pairing fails repeat the above steps. If the units lose connection then the blue LED on both the Transmitter and Receiver will begin blinking, to pair repeat the above steps.



**Contents.....Page Number**

**Important Safety Instructions.....02**

**Warnings / Cautions.....03**

**Usage Guidelines.....05**

**Specifications.....05**

**Wireless Transmitter.....06 - 07**

**Wireless Receiver.....08 - 09**

**Wireless Pairing.....10**

**Contact Information.....Back Cover**

**Warranty.....Back Cover**

*Wireless Receiver*  
*Front of Unit*

**Status LED**

Displays the status of the Wireless Receiver. Please see Pairing Instructions (Pg. 10) for additional information.

Blinking Blue LED: Power is ON, and the unit is attempting to pair with the Wireless Transmitter.

Solid Blue LED: Power is ON, and the unit is paired with the Wireless Transmitter.

*Rear of Unit*

**DC Power Adapter Input**

Connect the included 5V 1A DC Power Adapter.

**Signal OUT**


RCA / phono input jack. Connect to your subwoofers' (or power amplifiers') input jack.

*Bottom of Unit*

**PAIRING SWITCH**

Pair Transmitter and Receiver. See instructions on page 10.

## Wireless Receiver

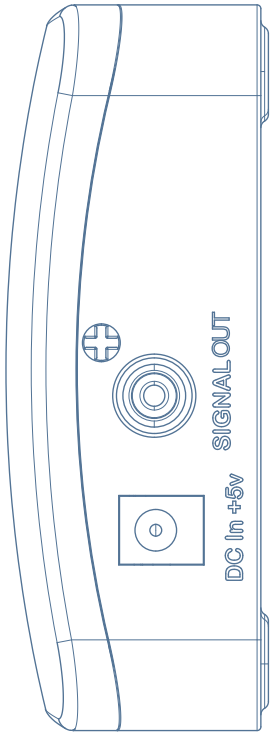

## Usage Guidelines

For use with powered subwoofers and audio amplifiers.

## Wireless Link2 Specifications

**Dimensions (Transmitter & Receiver):** 3.75" L x 3.75" W x 1.25" H  
 9.5cm x 9.5cm x 3.175cm

**Weight:** 1.1 lbs./ 0.5 kgs.

**Frequency:** 2.4GHz ISM band FHSS

**Latency:** 15mSec

**Usage:** Worldwide

**Range:** 30' (9M) Line of Sight / 20' (6M) Obstructed

**DC Power Input:** 5V 1 Amp

### Audio Frequency


**Response Range:** 10Hz - 20kHz

**Output Level:** 270mVrms

**THD:** 250mV < 0.1%

**SNR:** > 75dB

## Wireless Transmitter

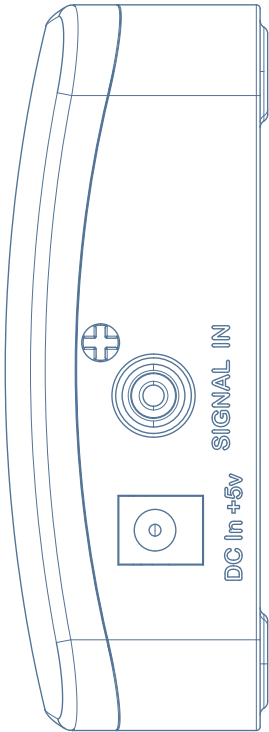

## Wireless Transmitter Front of Unit

### Status LED

Displays the status of the Wireless Receiver. Please see Pairing Instructions (Pg. 10) for additional information.

Blinking Blue LED: Power is ON, and the unit is attempting to pair with the Wireless Receiver.

Solid Blue LED: Power is ON, and the unit is paired with the Wireless Receiver.

### Rear of Unit

#### DC Power Adapter Input

Connect the included 5V 1A DC Power Adapter.

#### Signal IN

RCA / phono input jack. Connect to the subwoofer (or other) output of your audio device.

### Bottom of Unit

#### PAIRING SWITCH

Pair Transmitter and Receiver. See instructions on page 10.