

# QUICK START GUIDE

Welcome to the future of immersive entertainment!

Thank you for purchasing the ButtKicker Wireless Couch Kit.

This guide will help you to quickly set up your new ButtKicker system with your home entertainment system.

## Contents:

- A. ButtKicker Advance Transducer
- B. 300 Watt BKA300-P Amplifier with Wireless Receiver
- C. Wireless Transmitter.
- D. RCA Y" adapter
- E. ~1.5' RCA to RCA
- F. ~9.8' Braided Speaker Wire Connector Cable
- G. Couch/Chair Mounting Adapter Plater and Rubber Isolator Feet



# ATTACH TO COUCH OR CHAIR START HERE

## Attach the ButtKicker Advance to the Couch/Chair Mounting Plate

1. Use the included bolts and acorns nuts to attach the Advance transducer to the Couch/Chair Mounting Plate.
2. Ensure all bolts are firmly tightened to prevent unwanted noise.

## Place the Couch/Chair Mounting Plate Under 1 Leg of your Couch or Chair.

1. Ensure the couch or chair leg is positioned close to the Advance transducer (but not in contact with it).
2. Attach the included rubber isolator to the other legs of your couch or chair.

## Connect the Advance Transducer to the BKA300-P Amplifier.

1. Insert the tinned wire ends of the 9.8' Braided Speaker Wire Cable (F) into the ButtKicker Advance transducer terminals. Press the terminal down, insert wire, release to capture. Connect red wire to the red (+) terminal, connect black wire (-) terminal.
3. Connect the Red and Black Banana Plugs on the 9.8' Braided Speaker Wire Cable to the Speaker Output Terminals on the BKA300-P Power Amplifier. The Red Banana Plug connects to the Red Positive (+) Terminal on the BKA300-P. The Black Banana Plug connects to the Black Negative (-) Terminal on the BKA300-P.
4. Connect the power cord to the power terminal on the back of the BKA300-P Power Amplifier and then plug it into a power outlet.

**Do not turn on the amplifier until all  
of the connections are made!**

## Connecting to an Audio Source Wirelessly

1. Use the ~1.5' RCA Male to RCA Male cable to connect to the Subwoofer or Audio Output of your Audio Source. If the source is already in used, use the RCA Y Adapter to "split" the output.
2. Connect the other side of the RCA Male to RCA Male cable to the Input of the Wireless Transmitter. Connect the Wireless Transmitter to AC power using its power adapter.
3. Switch the BKA300-P rear panel switch to "Wireless".

## Connecting to an Audio Source Hardwired

1. Use the ~1.5' RCA Male to RCA Male cable to connect to the Subwoofer or Audio Output of your Audio Source. If the source is already in used, use the RCA Y Adapter to "split" the output.
2. Connect the other side of the RCA Male to RCA Male cable to the Line In Jack on the BKA300-P.
3. Switch the BKA300-P rear panel switch to "Line In".

## Play a Game, Music, or Movie.

Adjust the volume on the BKA300-P amplifier to your personal preference and enjoy!

## Recommended BKA300-P Amplifier Filter Settings.

Media	Low Cutoff Switch	High Cutoff Switch	High Cutoff Freq. Knob
Games	off	on	80 Hz
Music	on	off	disabled by the high cut switch
Movies	off	on	80 Hz

Visit [TheButtKicker.com](http://TheButtKicker.com) or email [Help@TheButtKicker.com](mailto:Help@TheButtKicker.com) for setup assistance and advice.