



# Airtek Filter Replace and Reset the AC Machine


The filter should be replaced every 600 service cycles or when the refrigerant recovery volume reaches 220 lbs. You can purchase a filter or a maintenance kit, which includes a filter, on our website.

After replacing the filter, reset the machine.


# Change Filter and Reset Machine (1)




- Note down the code on the new filter, you'll need it when resetting the machine later

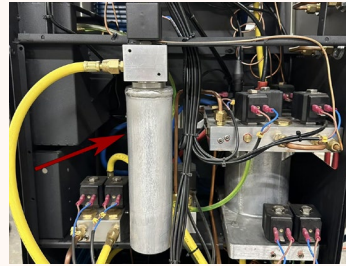


- Open the machine's casing and replace it with the new filter

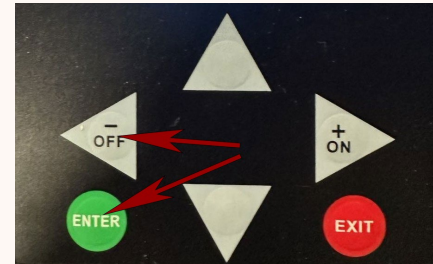


- Hold down the left arrow and green Enter button simultaneously, then power on the machine until a 6-digit code appears on the screen

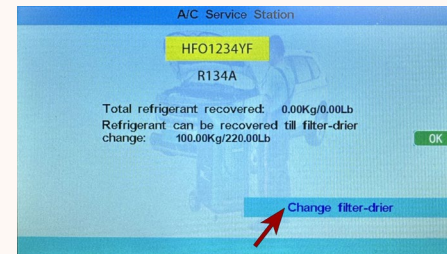

- If touch screen, switch on the machine and select "Change filter-drier". Then 6-digit code will appear on the screen.

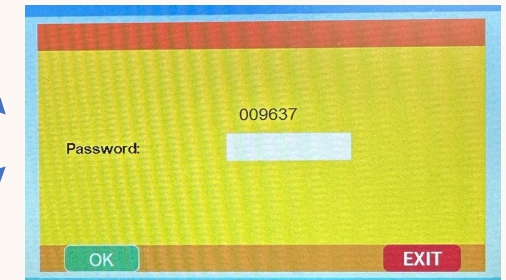


# Change Filter and Reset Machine (2)


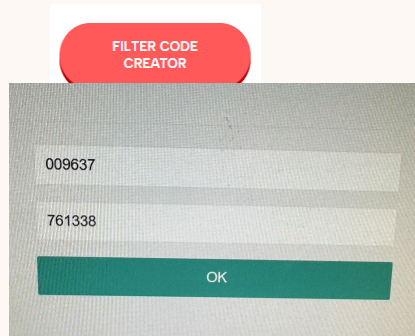


- Click and open the Filter Code Creator program. Enter the 6-digit code displayed on your machine in the first line, click OK, and the program will generate a new 6-digit code in the second line.


- Following the machine requirements, the reset will finish and the machine will restore to 600 times operations or 220 lb recovery

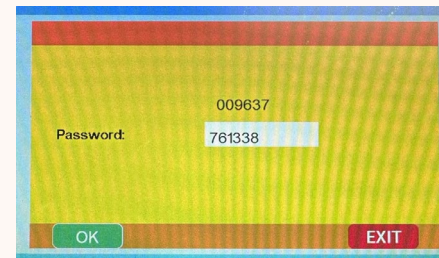

- Input the generated code into the second line then click ok. The machine will require another code.

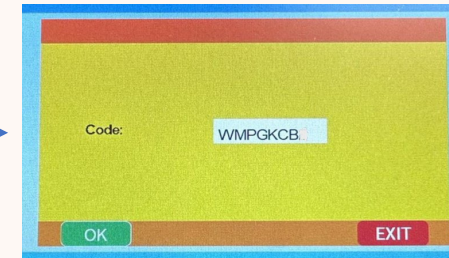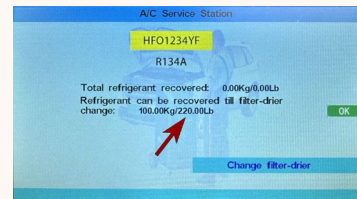

- Input the code on the new filter. The letter appears after number 9

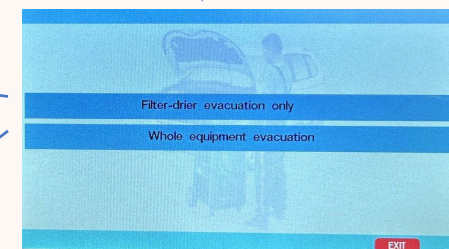

- Normally select "Filter-dryer evacuation only". The machine will evacuate one minute.