

recozy⁺



Care Guide

A little care goes a long way.

Recozy design objects are characterised by circular design, functionality, and durability. To extend the lifespan of home accessories and furniture and to keep them in good condition for a long time, a little care goes a long way.

Lighting



General care instructions

Use a soft cloth to remove any loose dust. For stubborn grime, clean the lampshade with a moist cloth. If necessary, apply some mild soap to the cloth. **Note:** Before cleaning, always turn off the electricity and remove the power plug from the outlet.

Recozy luminaires can withstand heat up to 60°C (140°F). Make sure that Recozy design objects are not continuously exposed to sunlight.

3-step dimming

To use the 3-step dimming of the lamp, operate the toggle switch on the textile cable. The LED light bulb's gradual dimming enables brightness adjustments of 100 %, 55 %, and 15 %, allowing for the creation of different light atmospheres.

Light Replacement

Consult the chapter „Light Replacement“ in the Operating and Safety Instructions to learn how to replace the LED light bulb.