



### **Tips & Precautions**

- Never load speargun out of water!!!
- Never fire speargun out of water!!!
- Never leave a loaded speargun unattended.
- Always keep the gun unloaded until you are ready to use it.
- When loading speargun, make sure no divers or objects are within shooting range.
- Always keep your finger straight and off the trigger until you are ready to shoot.
- Always keep the speargun pointed in a safe direction
- Never point the gun at anything you don't intend to destroy.
- Be sure of your target and what is beyond it.
- Be sure the barrel is clear of obstructions before loading and shooting.
- If your gun fails to fire when the trigger is pulled, hold your shooting position for several seconds; then with the muzzle pointed in a safe direction, carefully unload the gun.
- Don't rely on the gun's safety to keep it from firing.
- Fire your speargun with arm locked and fully extended and your other other arm bracing the speargun butt to prevent recoil.
- Before leaving the water, always unload your speargun and place the tip protector on spearhead.
- Prolonged exposure to sunlight may cause shorter life of the stock finish and power bands.
- Avoid dropping in sand – may cause clogging of push rod & mechanism assembly.

### **Safe Use & Operating Instructions (Reef Roller 110/125/135 Staged Bottom Bands)**

#### **I. Using the Safety**

The spearguns use a **screw safety**.

When the screw is **all the way down**, your safety is **ON**. The spear shaft will not engage the mechanism at this time. When the screw is all the way up, the safety is **OFF**.

**Note: If the screw is not all the way down, it may not be on safe.**

#### **II. Installing power bands:**

- wet bands and pass rubber into muzzle equally
- spectra wishbone end of band is for loading to the shark fin tabs

#### **III. Installing spear shaft**

- into the mechanism must be done with care

- the line release tab must be pushed back towards the butt of the speargun
- a) Place shaft under power bands and onto groove found on top of the gunstock
- b) Slide end of shaft into the mechanism, giving a firm push to overcome spring tension. Push and pull on the shaft to insure full trigger engagement.
- c) **Do Not** slam the shaft into position. This may damage firing mechanism.
- d) Do Not use the shooting line to pull shaft into mechanism.
- e) Now engage safety and rig your line.
- f) We recommend traveling with shaft out of track. If transporting speargun with engaged shaft, make sure spearshaft is secure to the speargun barrel with Velcro Strap to prevent damage to spearshaft and mechanism.
- g) Do Not drop or hit spearshafts. This could fracture or weaken at the loading notch area.

#### IV. Installing shooting line

- a) Line is attached by crimping through shark fin tab or rear of shaft depending on model purchased.
- b) Make sure power bands are on top of spearshaft and shooting line is underneath power bands.
- c) String the line from forward tab to left of line plate on front muzzle.
- d) Place line under plate, move across top of spear shaft to the line groove in the gunstock on the right side of the muzzle.
- e) Run line down gunstock around line release, then up to line anchor, and back down to line release. Use one hand to stretch bungee and put remaining loop of line around the line release.
- f) After line is rigged, load power bands.

#### V. Loading the power bands

- a) On the top of the speargun pull main band under the kicker band and the closest reaching sharkfin (just past the rest tab)
- b) Load the kicker band to further reaching shark fin
- c) On the bottom, load the inner band set to the line anchor near the trigger guard. Do the Same for the outer band set.

#### VI. Installing Slip Tip (if applicable)

- a) Pull the line from the slip tip to under the mono line on the line anchor, pull taught.
- b) Make sure the line doesn't sit on the top or bottom of speargun near the rollers. With the track facing up the line is pulled off to the right side of the speargun, near the other mono going down the groove in the muzzle.

#### **Care & Maintenance**

1. After use, flush with fresh water. Apply generous amounts of fresh water to the trigger mechanism and handle. After rinsing, turn speargun in the opposite direction to drain. Let dry. Keep out of direct sun to prevent premature band erosion.





Please Mail this warranty card for your guarantee.  
Thank you for choosing Andre Spearguns.

BLUE TUNA SPEARFISHING INC.  
1302 TOWER SQUARE, UNIT 4  
VENTURA, CA 93003

**WARRANTY**

All Andre Spearguns are guaranteed against defects under normal use conditions. A Limited Lifetime warranty is placed on our mechanisms and laminated gun stocks for warpage and delamination. This warranty does not cover normal wear or damages for misuse. A one-year warranty on mechanisms when used for commercial use. (Trigger mech. may need to be replaced with excessive use.) Warranty applies to original owner/purchaser and is not transferable.

Please register your Andre Speargun online at [www.bluetunaspearfishing.com/warranty-registration.html](http://www.bluetunaspearfishing.com/warranty-registration.html) to guarantee your warranty.

Date Purchased: \_\_\_\_\_

Store Name (where purchased): \_\_\_\_\_

Customer's Name: \_\_\_\_\_

Email Address: \_\_\_\_\_

Street Address: \_\_\_\_\_

City: \_\_\_\_\_ State: \_\_\_\_\_ Zip Code: \_\_\_\_\_

Please sign below, stating you have read and understood the "Safe Use & Operating Instructions".

X \_\_\_\_\_