




(EN)

Connect with **Wi-Fi**

BLE Gateway Instruction

BLE gateway

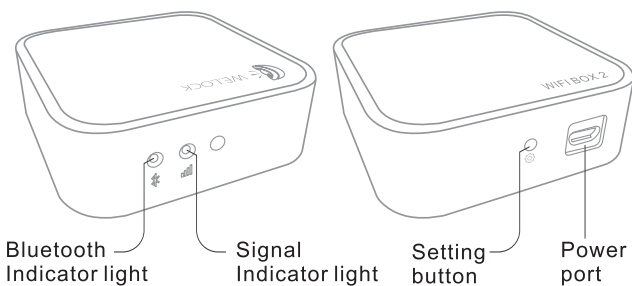

Packing list

BLE gateway *1

Data cable *1

User manual *1

Allen key *1

EN-1

1 Download WE.LOCK App by Scan below QR code



Online Service

Email:service@welockglobal.com

EN-2

2 Add gateway on APP

- ① Turn on the gateway by charge with the cable.
- ② Press the “Set” button on the gateway with the Allen key for 3s,when the gateway indicator show **red** means in paring mode.
- ③ Click “+” in the top right corner- “Add Gateway” on APP.
- ④ App will automatically detecting available gateway,enter the Wi-Fi name and Wi-Fi password,and prompt to exit after the setting is successful.(Please make sure the GPS service of your phone is on)
- ⑤ When the gateway signal indicator show **green** means gateway connect successful.

EN-3

- ⑥ Refresh the device list,the device that was bound will be automatically associated with the Bluetooth gateway.If it is not bound by the app,it needs to be bound before it can be automatically associated bythe Bluetooth gateway.
- ⑦ Newly bound locks need to wait about 3 minutes for them to be automatically associated.

3 Add device under gateway

- ① Click the gateway on device list.
- ② Click+Add lock.
- ③ Adddevice by scan the QR code on the lock.

EN-4