

Pro Secateurs Set With Sharpener User & Care Instructions

Thank you for purchasing our Davaon Pro Secateurs Set with Multi Tool Sharpener.

Support—Should you have any queries you can contact us 24/7 by sending a message via your Amazon account—Your Orders then click Contact Seller box next to your purchase. We aim to answer any questions within 2 hours of receiving your message.

Note: Always take care when using tools with sharp blades. These are extremely sharp.

User and Care Instructions

Pages 2-4 = Pro Switch 2 in 1 Ratchet Secateurs

Pages 5-7 = Pro Classic Secateurs

Pages 6-10 = Pro Multi Tool Sharpener

Page 11 = Davaon Garden Tools Range available on Amazon



Pro Switch 2 in 1 Ratchet Secateurs User & Care Instructions

Note: Always take care when using tools with sharp blades. These are extremely sharp.

General Care Instructions

1) CLEANING

- ⇒ If there is any oil on the blades, when you receive this, then please clean off using the oil sponge as seen below in the picture or with a soft cloth
- ⇒ Clean carefully after use using a damp soft cloth, or included oil sponge, to clean handle and blades ensuring you clean away from the sharp edges (NOT INTO THEM). Mind your fingers
- ⇒ Then dry using another cloth if required

2) Ensure they are locked after use

3) Oil lock and cutting mechanism from time to time

4) STORE IN A SECURE, SAFE PLACE

5) DO NOT OVER EXTEND the opening of the handles. The spring will open the secateurs to their intended width. Should you try to open then further to cut thicker than 22mm stems/branches then the spring may stretch and therefore no longer open as required. This will not be covered by warranty.



Pro Switch 2 in 1 Ratchet Secateurs User & Care Instructions

Note: Always take care when using tools with sharp blades. These are extremely sharp.

Opening & Closing Instructions

Ratchet Secateurs lock by sliding the lock button over the lower part of the ratchet mechanism

Unlock

- 1) Squeeze handles and move lock switch backwards with thumb or 2 fingers
- 2) It maybe a little stiff for the 1st few unlocks but this is normal



Lock

- 1) As above but move lock forwards

NOTE: You may need to squeeze a little more to ensure the lower part of the ratchet mechanism is under the lock button

Switching From Ratchet to Single Cut Mode

You have the option to choose between 'Ratchet' mode for thick branches and Single Cut mode, same as conventional pruner, if you are pruning smaller branches

- 1) Squeeze handles together (lock if easier for you)
- 2) Move small switch on side until it clicks in place, as shown in image to select:
 - R = Ratchet Mode - up to 22mm stems/branches
 - S = Single Cut Mode - up to 18mm stems/branches
- 3) Open and use

UNIQUE 2 in 1 QUICK SWITCH—RATCHET TO SINGLE CUT MODE



Pro Switch 2 in 1 Ratchet Secateurs User & Care Instructions

Note: Always take care when using tools with sharp blades. These are extremely sharp.

How Ratchet Mode Functions

The 'Ratchet' mechanism helps to multiply your hands power. It clicks and moves to the next setting, after each squeeze & release. This increases pressure as you cut through so you don't have to do all of the work—the secateurs do it for you. Making this ideal for thicker branches.



1) Squeeze and Release 3 times—Each time the blade will slice through more and the ratchet will click to next level

2) After 3rd or 4th Squeeze your done

Grip Examples



Note: Always take care when using tools with sharp blades. These are extremely sharp.

General Care Instructions

1) CLEANING


- ⇒ Clean carefully after use using a damp soft cloth to clean handle and blades ensuring you clean away from the sharp edges (NOT INTO THEM). Mind your fingers
- ⇒ Then dry using another cloth if required

2) Ensure they are locked after use

3) Oil lock and cutting mechanism from time to time

4) STORE IN A SECURE, SAFE PLACE

NOTE - If the lock is tight or too loose, you can use a small spanner to adjust the lock nut on the lock

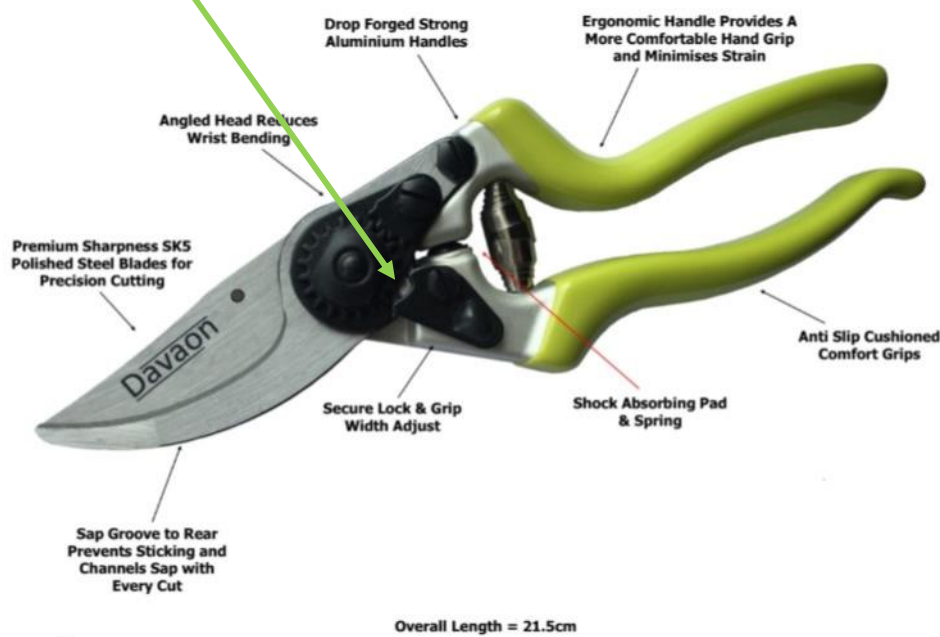

Note: Always take care when using tools with sharp blades. These are extremely sharp.


Opening & Closing Instructions



1) Full Lock Position



2) Squeeze Handles

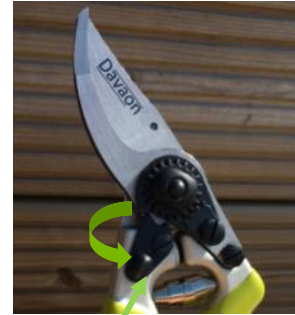

3) Use thumb or finger to move lock switch anti-clockwise to open

4) To Lock—Repeat 2 and 4 but move lock in clockwise direction

NOTE - If the lock is tight or too loose, you can use a small spanner to adjust the lock nut on the lock

Grip/Cut Width Adjustment

Use this option for smaller hand grip width or if you are cutting smaller stems and branches

1) Repeat 2 and 4 above but move lock to half open position as shown in image



Half Open Position



Full Open Position

Grip as below for best comfort and make the most of the ergonomic handles



Note: Always take care when using tools with blades and take adequate precautions

General Care Instructions - DO NOT PUSH DOWN HARD WHEN USING

1) DIAMOND COATING

- ⇒ There is no need to push down hard when using, let the coating do it's job
- ⇒ Some coating will come off with use but this is perfectly normal
- ⇒ Should you be concerned in anyway then please contact us asap so we can help

2) GUARANTEE

- ⇒ You have a 1 year replacement guarantee against any manufacturing defects.
- ⇒ You should contact us directly for any guarantee claims, with supporting photos

3) STORE IN A SECURE, SAFE PLACE





Pro Multi Tool Sharpener User & Care Instructions

Note: Always take care when using tools with blades and take adequate precautions

What Can You Sharpen?

There are many tools you can sharpen with our Multi Tool sharpener.

Garden Tools - secateurs, loppers, garden shears, spades, garden knives, axes, grass shears

Kitchen Utensils - knives (non ceramic), scissors

Others - Multi Tool Knives, Pocket Knives

How to sharpen tools?

If this is your first time sharpening tools then we would recommend watching some 'How To' videos first. There are many videos regarding sharpening of various tools. Some will help. (Note: we cannot guarantee the quality of such videos unless they are our own). We will be releasing some videos soon.

In the meantime, we will provide some basic sharpening methods on the next few pages.

As ever, you are more than welcome to contact us via your Amazon Account should you need to.

Please go to next page to see examples

**Note: Always take care when using tools with blades and take adequate precautions
We advise to check manufacturer sharpening recommendations before proceeding**

Some basic tips for sharpening garden tool blades

- 1) Firstly, clean the blade well.
- 2) Prepare the blade with a few drops of general-purpose lubricating oil.
- 3) Use rounded side of sharpener (course side) first.
*Push the sharpener forwards at a small angle (approx. 10°-15°) and to the side, exerting a little downward pressure. Repeat a few times.
*Then turn the blade over and, holding the blade almost flat against the sharpener, brush it across the surface a few times
- 4) Repeat 3 but with the fine flat side of the sharpener. This will finely tune the blade and take off any rough edges
- 5) Finish off by wiping over the blade clean and for garden tools ideally use an oily rag before storing

If you are just sharpening the blade quickly before pruning then you can just use the fine side of the sharpener.

Use can use similar methods for sharpening knives and scissors, other garden tools with blades.



Davaon Garden Tools Range

Why not check out the rest of our Davaon Garden Tools Range on Amazon:

Just search DAVAON in the Amazon search bar



