


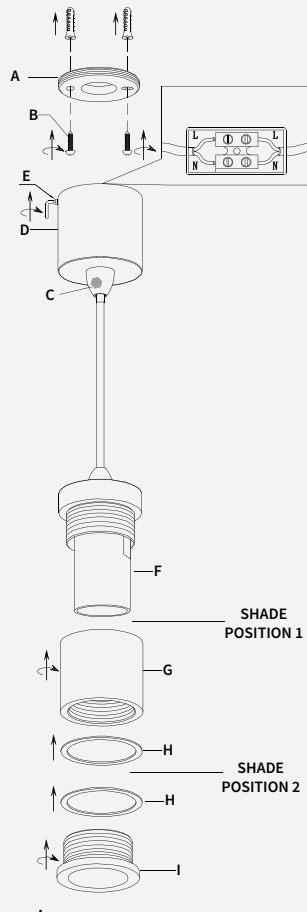

DESCRIPTION

1. Ensure mains are switched off.
2. Remove and fix ceiling disk (A) to ceiling with your own or provided screws and plugs (B).
3. Shorten the cable to the desired drop (Max length 2m).
4. Loosen cord grip grub screw (C) to allow ceiling cup (D) to spin freely around the cable.
5. Complete electrical connection using the terminal box provided.
6. Screw ceiling cup (D) onto ceiling disk (A) until tight then tighten grub screw (C).
7. Tighten grub screw (E) to lock ceiling cup.
- 8a. If you are using an exposed bulb with no shade, then screw in your chosen bulb and enjoy.
- 8b. If you are using a shade, choose which position you would like the shade to sit on the lampholder (Shade position 1 or 2)
8. Make sure both washers (H) sit on either side of the shade between the metal and the glass.
9. Do not over-tighten threaded tube (F) or threaded cap (I) as this may damage the glass.

The Parlour suspension (I02.25) has been specifically designed to suit a range of Lighting Republic accessories only. It is the responsibility of the installer to ensure once the installation has been completed that the cord has been correctly fitted to whichever fixing system used and that the product is installed safely.

