



FOLDING LINES

## MP-TWO Pro / MP-TWO Barebow Adjustment instructions

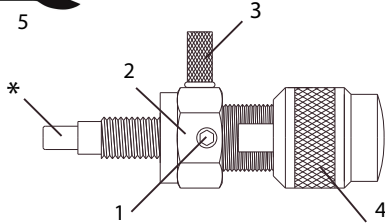

(fig.1)

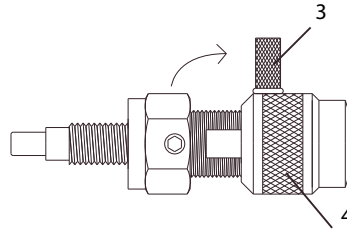

(fig.2)

\*A Nickel-Teflon coating adds durability and prevents arrow wear.

### Center shot adjustment (fig.1):

Loosen the small set screw (1) and place the thumb screw (3) on the locking ring (2) to adjust the center shot on the MP-TWO. Do not over tighten the thumb screw. Turn the cap (4) counterclockwise or clockwise to adjust. There are 20 clicks per rotation. When you are ready, tighten the locking ring with the wrench (5) and lock the set screw. Warning: Do not over tighten the plunger to the riser!

### Tension adjustment (fig.2):

Insert the thumb screw (3) in place. This will enable 20 clicks per rotation insuring a more precise & consistent tuning. To soften or stiffen the tension, turn the cap (4) counterclockwise or clockwise. Once you are satisfied with your tuning tighten slightly the thumb screw in place (There is an extra set screw with the plunger so you can change out to a more sleek finish.) Remove the cap from the plunger only if you need to add a **magnet<sup>+</sup>**.

Wishing you the best of success with your new plunger!

**Alex Wifler** ( alexwifler@wiflerindustries.com)

© wiflerindustries.com  
All rights reserved