


Honeywell

18 Cubic Feet Refrigerator With Freezer User Manual

Read and save these instructions before use

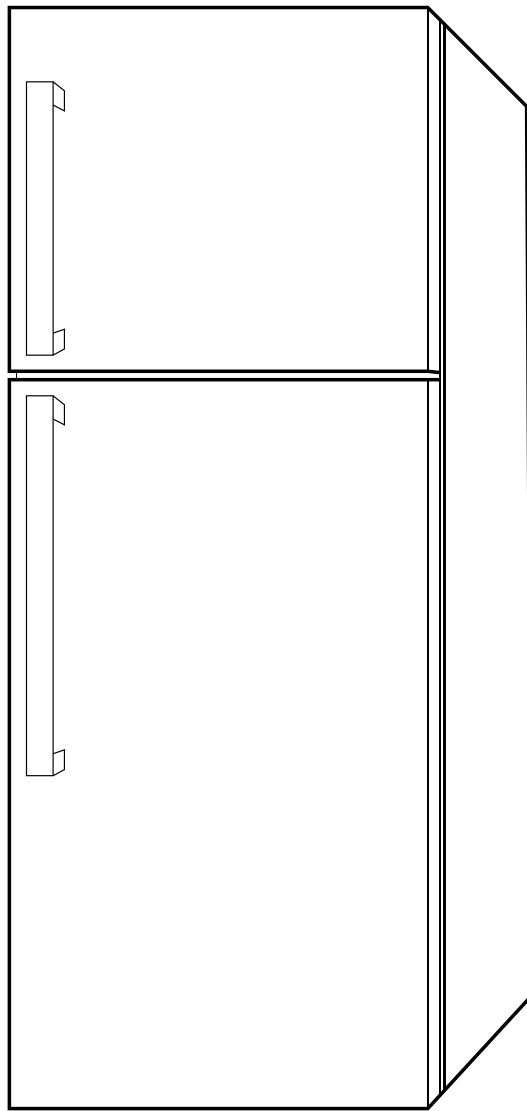

H18TFW

H18TFS

CONTENTS

1	Safety Warnings	
1.1	Warning	1
2	Proper Use of Refrigerator	
2.1	Installation	2
2.2	Door Handle Installation	2
2.3	Reversing the Door Swing	2-6
2.4	Leveling the Unit	6
2.5	Before Using Your Unit	7
2.6	Interior Accessories	7
2.7	Ice Maker Installation	8-12
2.8	Connecting Ice Maker to Water Supply	12-14
3	Product Overview	
3.1	Key components	15
4	Operation	
4.1	Display	16
4.2	Errors	16
4.3	Temperature Control Operation	17
5	Cleaning	
5.1	Defrosting	18
5.2	Cleaning the Interior and Exterior of the Unit	18
5.3	Condensation	18
6	Maintenance	
6.1	Changing the Internal Light	19
6.2	Care When Handling/Moving Your Unit	19
6.3	Servicing	19
6.4	Switching Off for Long Periods of Time	19
7	Troubleshooting	20

DEAR CUSTOMER:

Thank you for buying this refrigerator. To ensure that you get the best results from your new refrigerator, please take time to read through the simple instructions in this booklet. Please ensure that the packing material is disposed of in accordance with the current environmental requirements. When disposing of any refrigerator equipment please contact your local waste disposal department for advice on safe disposal. This appliance must be only used for its intended purpose.

1 SAFETY WARNINGS

1.1 Warning



WARNING: risk of fire / flammable materials

This appliance is intended to be used in household, non-retail applications.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

The appliance has to be unplugged after use and before carrying out user maintenance.

DO NOT use extension cords or ungrounded (two prong) adapters.

WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

WARNING: Do not damage the refrigerant circuit.

WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are the type recommended by the manufacturer.

WARNING: This refrigerator uses flammable blowing gas and refrigerant. Please dispose of according to local regulators.

DANGER: Risk of child entrapment. Before disposing your old refrigerator or freezer:

- Take off the doors.
- Leave the shelves in place so that children may not easily climb inside.

Refrigerant and cyclopentane foaming material used for the appliance are flammable. To prevent damage to the environment or any other harm, when the appliance is scrapped, it shall be kept away from any fire source and be recovered by a recovering company with corresponding qualification.

WARNING: To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.

IT IS HAZARDOUS FOR ANYONE OTHER THAN AUTHORIZED SERVICE PERSONNEL TO CARRY OUT REPAIRS. TO AVOID ELECTRICAL SHOCK, DO NOT ATTEMPT REPAIRS YOURSELF.

2 PROPER USE OF REFRIGERATOR

2.1 Installation

When selecting a position for your unit you should make sure the floor is flat and firm, and the room is well ventilated.

Avoid placing your unit near a heat source.


Avoid direct sunlight as it may increase the electrical consumption.

Extremely cold temperatures may also cause the unit not to perform properly. This unit is not designed for use in a garage or outdoor installation.

When installing the unit, ensure that 3 inch of free space is left at both sides, 1 inch at the rear and 1 inch at the top of the unit. This will allow cold air to circulate around the refrigerator and improve the efficiency of the cooling process.

2.2 Door Handle Installation

Note: The refrigerator must be disconnected from the source of electrical supply before attempting the installation of accessory.

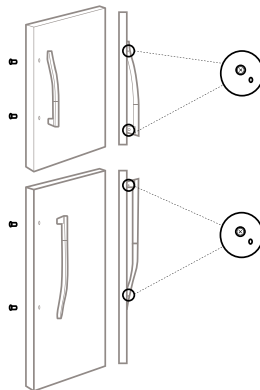

01 Take out the two cross screws, and install them into the door holes; turn the screws till to the bottom

02 Aim at screws to install the handle

03 Place the screws in the hole at the side of the handle and turn the screws until they are tight

04 Place screw caps on the screws

2.3 Reversing the Door Swing


01 Please prepare the following tools in advance:

a. Tools: cross screwdriver, Allen key and straight screwdriver

b. Parts: refer to the components and parts in the accessory pouch


02 Removing the freezer door

Remove the hinge cover and cover plate. Then remove the upper hinge with a cross head screwdriver. Raise the freezer door upward.

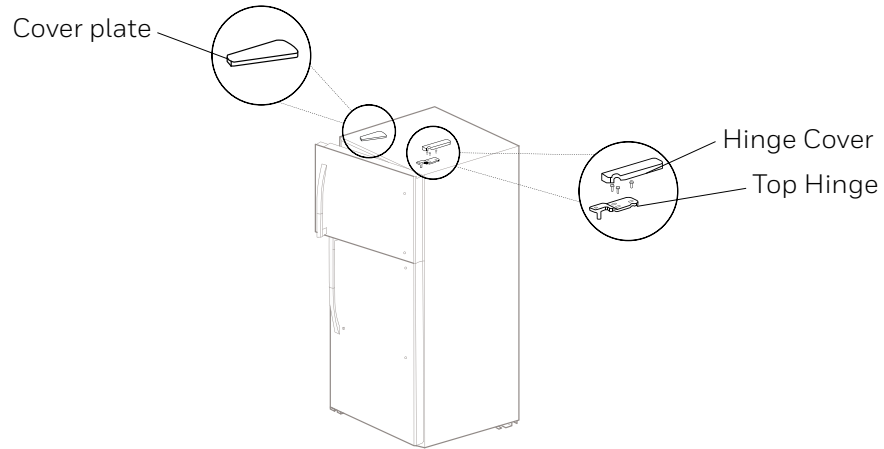


03 Removing the refrigerator door

Remove the middle hinge with a cross screwdriver. Raise the cold storage door upward.

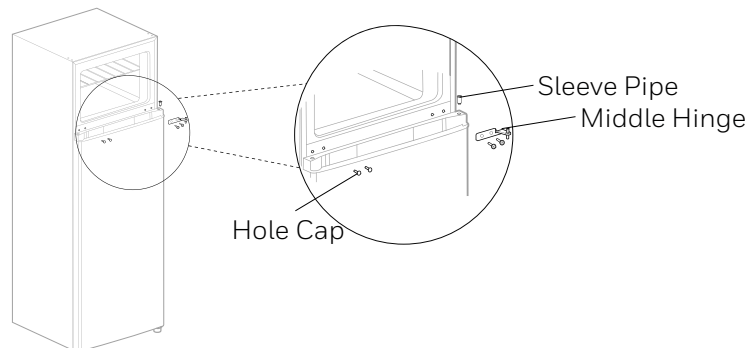


04 Replacing the bottom hinge

Remove the lower hinge with a cross screwdriver. Screw the bolt out of the lower hinge and into the other side hold of lower hinge. Fit the lower hinge on the other side of the refrigerator with screws.

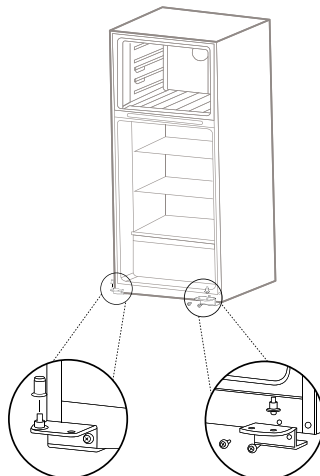


05 Replacing the door accessories

Take out the top hinge and hinge shaft hole plate from the top of freezer and refrigerator doors. Fit the top hinge on the other side of door. Remove the bottom hinge, and fix it to the other side of the door with screws. Take the middle hinge, and fix them to the left side of freezer door.

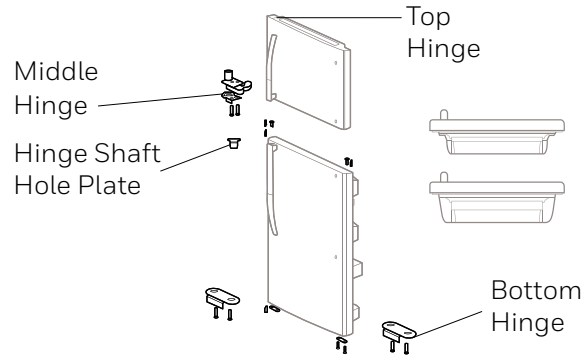


06 Fitting the refrigerator door

Fit the refrigerator door on the bottom hinge. Fix the left hinge to the refrigerator with screws. Put the hinge shaft gasket into the hinge shaft.

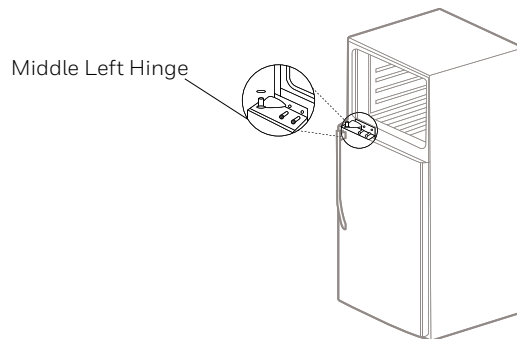


07 Fitting the freezer door

Put the freezer door into the top hinge, and fix it on the top of the refrigerator with screws. Cover with the hinge cover, then place the cover plate on the other side.

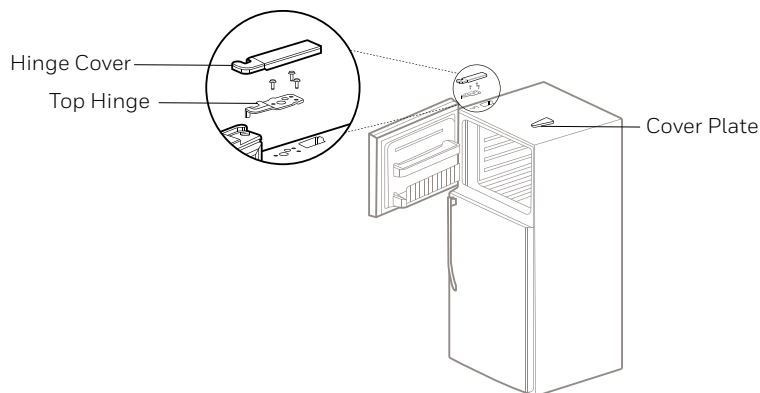


08 Removing the handles

Remove the handle caps. Screw the handle fastening screws with an Allen key. Remove the handle.

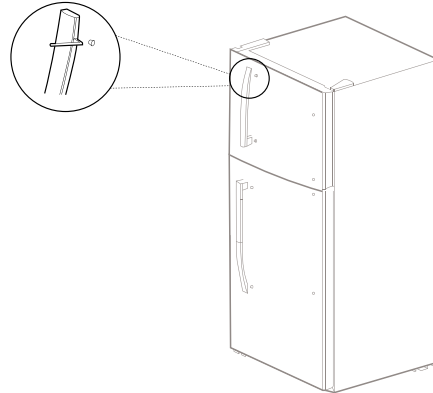


09 Fitting the handles

Remove the screws from the handles and fit them on the other side of the door. Place the handle into the handle bolts and screw it tightly with the Allen key.

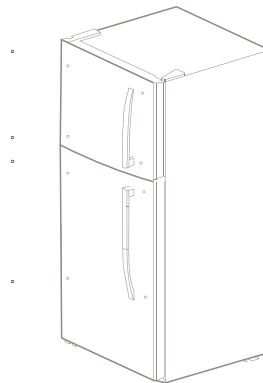


10 Fitting the accessories

Put the handle caps in, handle cover plate, hinge hole plug and middle beam pin in place.

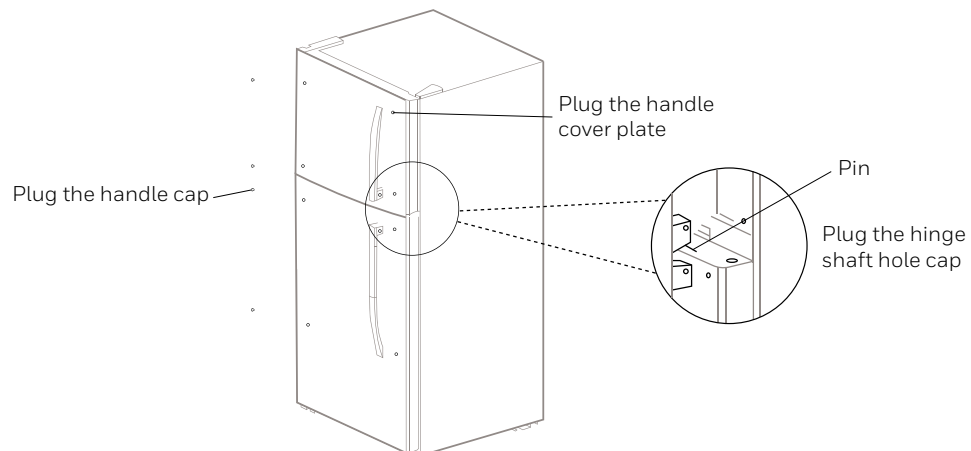


11 Flipping the handle of the appliance doors

When the door is changed between left and right, the refrigerator handle (A) is placed on the freezer, and the freezer handle (B) is placed on the refrigerator.

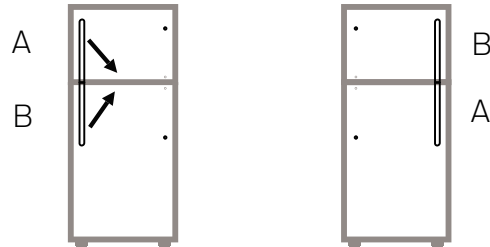

2.4 Leveling the Unit

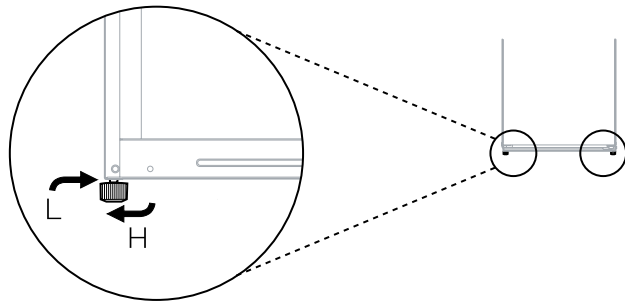

To raise the appliance, turn the feet clockwise.

To lower the appliance, turn the feet counterclockwise.

Adjust the right and left feet based on the procedures above to a horizontal level.

2.5 Before Using Your Unit

Before plugging in

You must check that you have a socket which is compatible with the plug supplied within the unit.

Before turning on

Do not turn on until two hours after moving the unit.

2.6 Interior Accessories

Various glass or plastic storage shelves are included with your appliance - different models have different combinations.

You should always slide one of the full size glass storage shelves into the lowest set of guides, above the fruit and vegetable containers, and keep it in this position. To do this, pull the storage shelf forward until it can be swiveled upwards or downwards and removed.

Please do the same in reverse to insert each shelf at a different height.

In order to make the full use of the volume of the fresh food storage compartment and frozen-food storage compartment, the user can remove one or more shelves or drawers, out of the appliance, according to your daily use.

2.7 Ice Maker Installation

Remove a protective cover before connecting the wire of the ice machine in the box.


Tools Required:

- 1/4 inch copper supply line with shut off valve
- 1/4 inch brass compression nut and ferrule


The copper tubing and shut off valve are available in a kit from your local hardware or plumbing supply store. Coil enough tubing at the back of the unit to allow movement for cleaning.




Unplug the appliance to eliminate the danger of electric shock during installation, you must unplug the refrigerator from its electrical outlet.

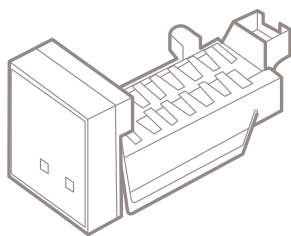


Ice Maker

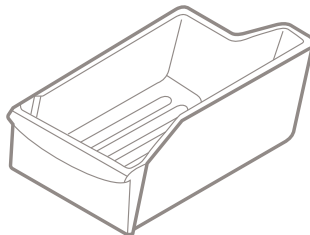

Ice Container

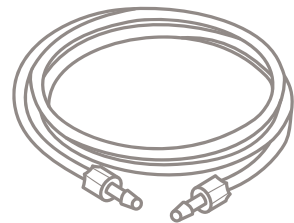

Plastic Water
Supply Tubing

 


Screws (x2)




Screws (x2)



 
Leveling Bracket
Screw (x1)




Leveling Bracket
(x1)

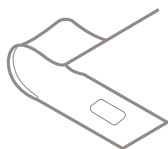


Steel Clamp (x1)

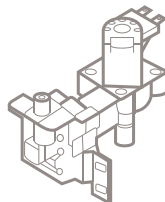

Water Valve (x1)

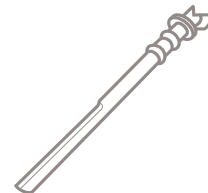

Water Inlet Tube (x1)

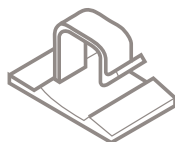

Plastic Clamp (x2)

Tools Required:


- Putty Knife
- Pliers
- 1/4 inch Socket Wrench
- Needle Nose Pliers or Nut Driver
- Adjustable Wrench
- Knife

01 Unplug the refrigerator from the wall outlet.


02 Remove the ice tray from the freezer.

03 Move the shelf to the next partition.


04 Remove plugs from the inside freezer compartment with putty knife.

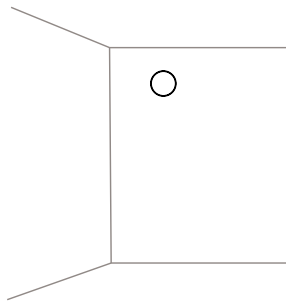


05 Peel off label covering ice maker hole.

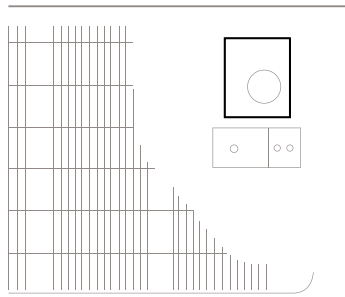

06 With needle nose pliers, remove foam from hole.

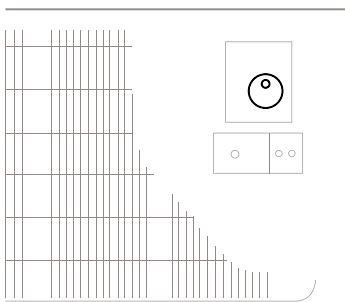


07 Push water inlet tube into small hole on the back of the refrigerator. Rotate while inserting tube until flat surface of inlet tube is tight against the back of the refrigerator.

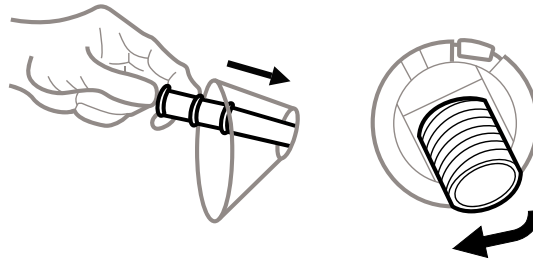


08 Push plastic water supply tubing into water inlet tube as far as it will go and manually tighten nylon compression nut onto threaded end of inlet tube. Tighten another one half turn with a wrench.


09 Install adjustable leveling bracket on the bottom of the ice maker with screw. DO NOT tighten bracket.

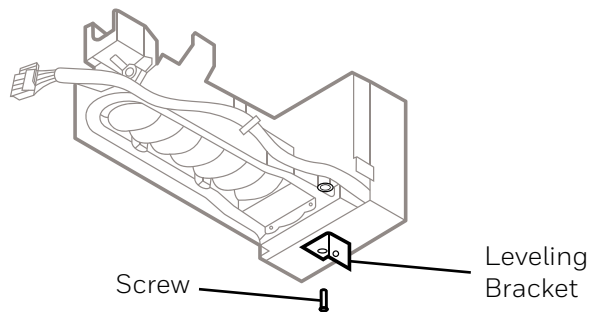


10 Put two ice maker mounting screws into freezer wall. Turn each screw five times clockwise.

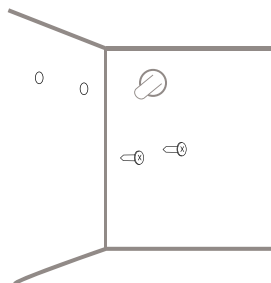


11 With ice maker in one hand, plug ice maker connector into connector mounted on top of the freezer panel. Make sure the connection is tight.

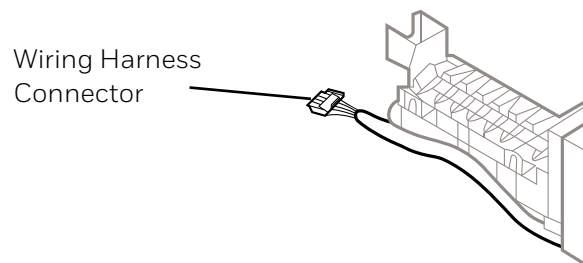


12 Mount the ice maker onto the two screws you installed in step 10. Tighten screws. Make sure water inlet tube is sitting inside the fill cup.

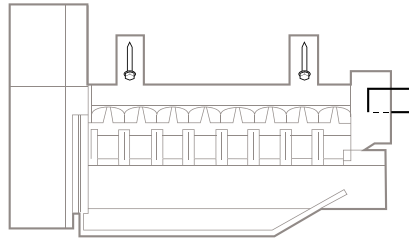


13 Adjust the leveling bracket to level ice maker. Ice maker is level when gap between freezer wall and ice maker is the same at the top and bottom. Tighten screw when level.

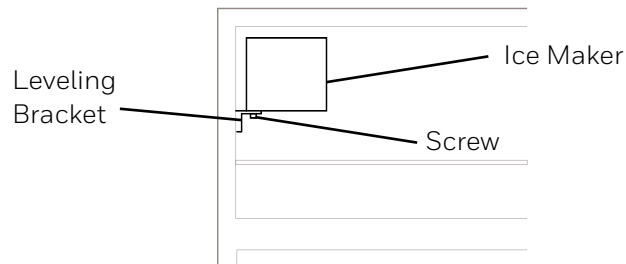


14 Reinstall freezer shelf in lower position. Set ice container on shelf.

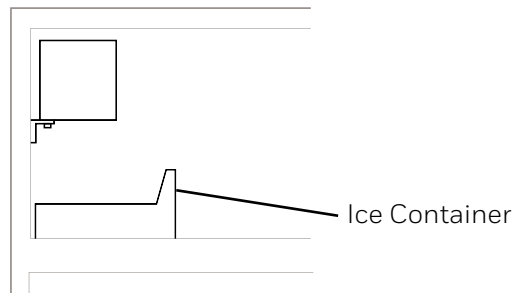


15 Locate the holes at the bottom right corner of the rear panel. Holes are only drilled through cabinet liner. Align water valve bracket with holes. Use a power drill with a cross screw head bit to drive the two screws through the bracket and into the cabinet.

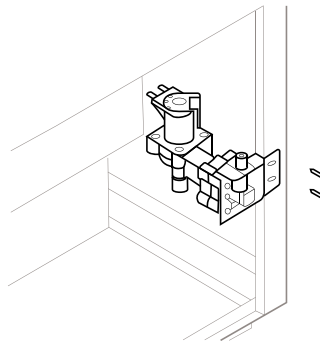


16 Connect wiring harness to water valve. Make sure connection is tight.

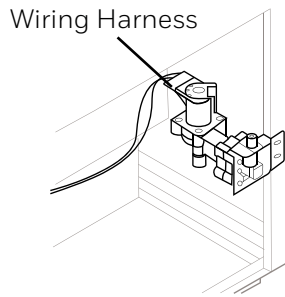

17 Push plastic water supply tubing into the bottom of the water valve as far as it will go. Manually tighten the nylon nut onto the threaded end of the water valve. Tighten another one half turn with wrench. DO NOT over tighten.

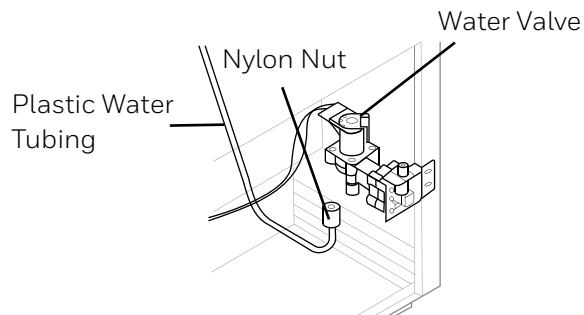

18 Secure plastic water tubing to the rear of the cabinet with two plastic clamps.
NOTE: Clean the back of the cabinet with a commercial household cleaner, ammonia or alcohol before applying clamps.

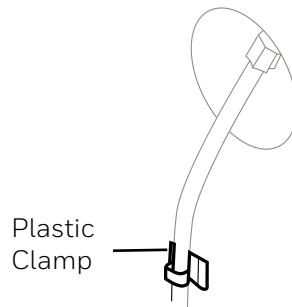

2.8 Connecting Ice Maker to Water Supply


To eliminate the danger of electric shock during installation, you must unplug the refrigerator from its electrical outlet.

IMPORTANT: Ensure that your water supply line connections comply with all local plumbing codes.

Before installing the water supply line, you will need:

- Basic tools: adjustable wrench, flat head screwdriver, and phillips screwdriver.
- Access to a household cold water line with water pressure between 20 and 120 psi.
- A water supply line made of 1/4 inch (6.4 mm) OD, copper tubing. To determine the length of copper tubing needed, you will need to measure the distance from the ice maker inlet valve at the back of the refrigerator to your cold water pipe. Then add approximately 7 feet (2.1 meters), so the refrigerator can be moved out for cleaning.
- A shutoff valve to connect the water supply line to your household water system. DO NOT use a self-piercing shutoff valve.
- A compression nut and ferrule (metal ring) for connecting the water supply line to the ice maker inlet valve.

2.8 Connecting Ice Maker to Water Supply

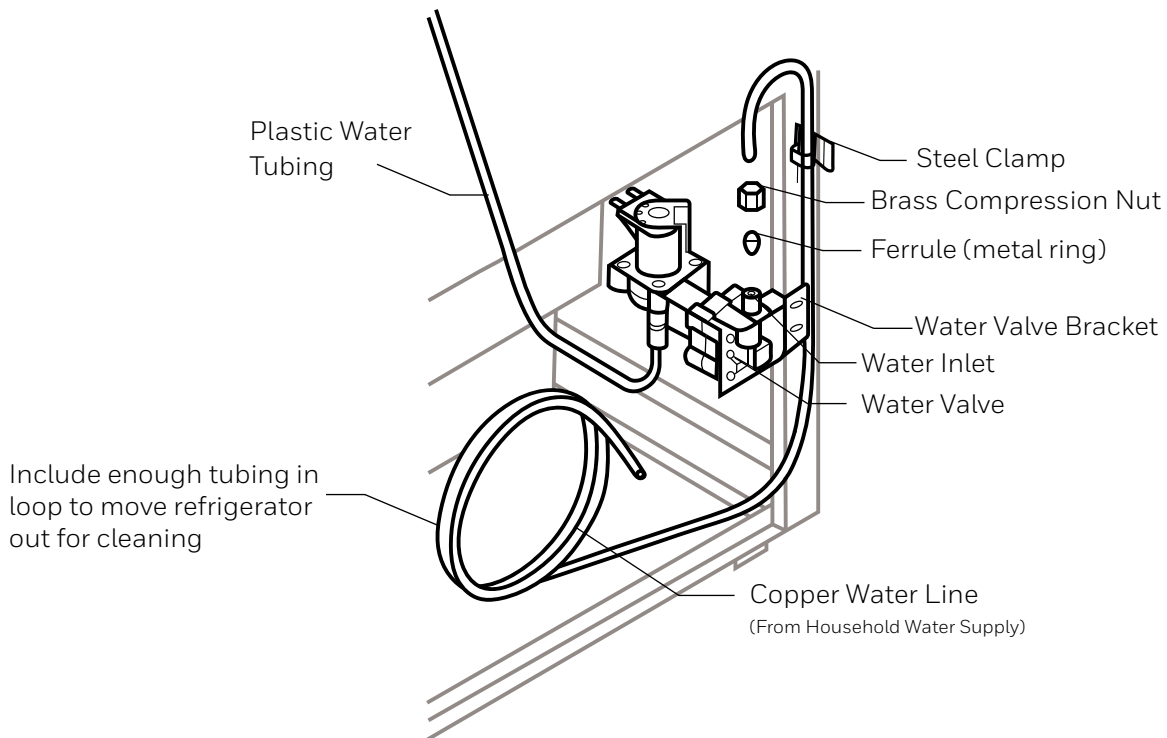


To connect water supply line to ice maker inlet valve:

- 01** Disconnect refrigerator from electric power supply.
- 02** Place end of water supply line into sink or bucket. Turn ON water supply and flush supply line until water is clear. Turn OFF water supply at shutoff valve.
- 03** Unscrew plastic cap from water valve inlet and discard it.
- 04** Slide brass compression nut, then ferrule (metal ring), onto water supply line, as shown.
- 05** Push water supply line into water valve inlet as far as it will go (1/4 inch). Slide ferrule (metal ring) into valve inlet and tighten compression nut onto valve. Tighten another half turn with a wrench; DO NOT over tighten.
- 06** With steel clamp and screw, secure water supply line to rear panel of refrigerator at location as shown.
- 07** Roll excess water supply line (about 2 1/2 turns) behind refrigerator as shown and arrange coils so they do not vibrate or wear against any other surface.
- 08** Turn ON water supply at shutoff valve and tighten any connections that leak.
- 09** Reconnect refrigerator to electric power supply.
- 10** To turn ice maker on, lower wire signal arm. (See ice maker front cover for on/off position of arm.)

IMPORTANT: It takes approximately 24 hours for the ice maker to begin producing ice. Air in new plumbing lines may cause ice maker to cycle two or three times before making a full tray of ice. New plumbing may cause ice to be discolored or have poor flavor. Discard ice made during the first 24 hours.


3 PRODUCT OVERVIEW

3.1 Key Components

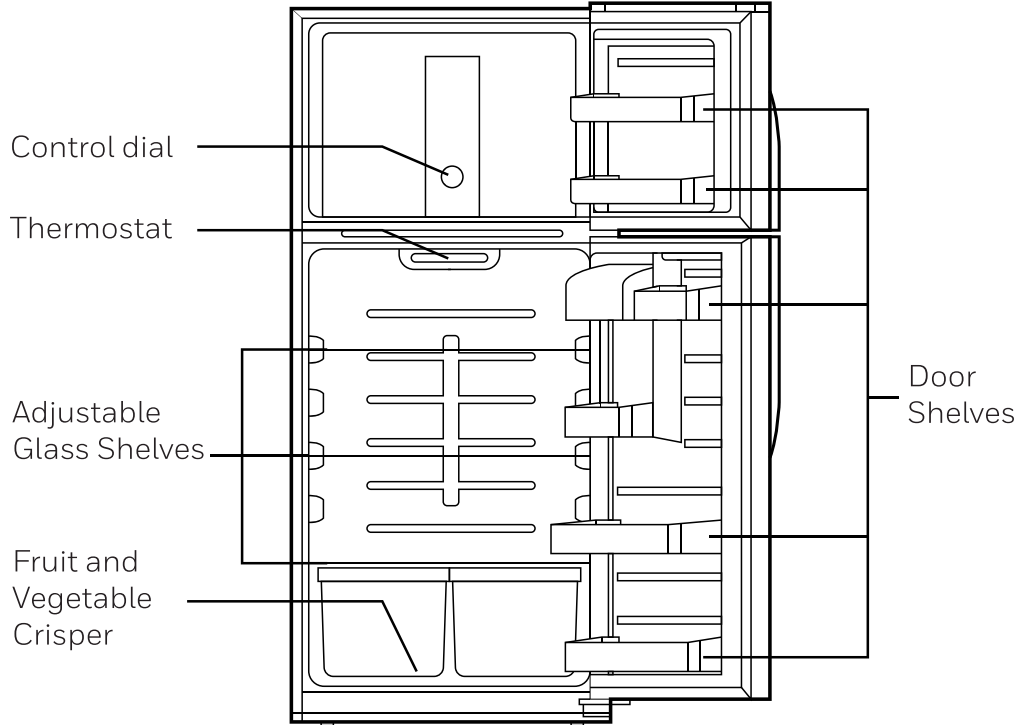

4 OPERATION

4.1 Display

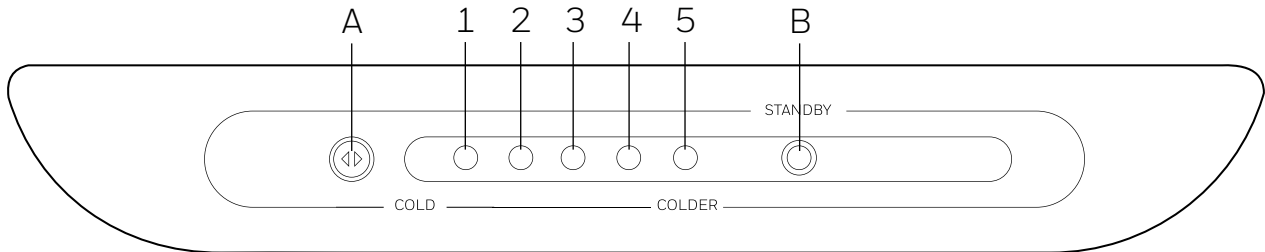

01 Buttons

Button (A): Press this button to shift between temperatures

Buttons (1-5): 1 is the warmest setting, 5 is the coldest setting


Button (B): When the fridge is running, press the standby button (B) for 3 seconds to put the refrigerator into standby mode. The standby indicator light will turn on. When the freezer is in standby, press the button to put the refrigerator into the normal state.

4.2 Errors

- Once initially powered on, the display screen will be on full display for 3s, and then operates as the displayed middle temperature.
- In case of a failure, the appropriate LED light show the error code.

Error code	Error description
LED ①,② lit	Refrigerator temperature sensor circuit failure
LED ①,③ lit	Freezer defrost sensor failure
LED ①,④ lit	Ambient temperature sensor failure

4.3 Temperature Control Operation

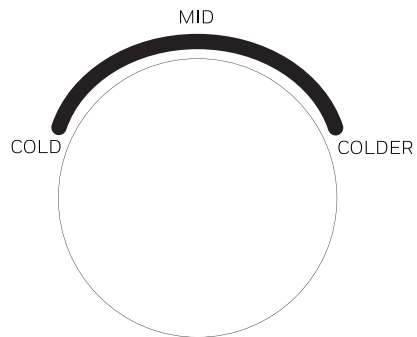

- 01** The freezer is automatically in the mid temperature setting.
- 02** If the freezer is in the COLDER position when the temperature is lower than 10°F. The fridge temperature will be automatically changed to the 4 or 5 temperature setting.
- 03** If the freezer is in the COLD position when the temperature is lower than 40°F. The fridge temperature will be automatically changed to the 1 or 2 temperature setting.

Tips: When the freezer is placed in COLDER position, the fridge can be rapidly cooled, but if it is placed in COLDER position for too long, the temperature inside the fridge may be reduced drastically.

5 CLEANING

5.1 Defrosting

Auto-defrost for frost-free refrigerator.

5.2 Cleaning the Interior and the Exterior of the Unit

- Remove all the shelves and the salad bin. To remove the salad bin, first remove the lower door shelf.
- Wipe the inside of the unit with a weak solution of bicarbonate soda and then rinse with warm water using a wrung-out sponge or cloth. Wipe completely dry before replacing the shelves and salad bin.
- Use a damp cloth to clean the exterior, and then wipe with a standard furniture polish. Make sure that the door is closed to avoid the polish getting on the magnetic door seal or inside the unit.

5.3 Condensation

Condensation may appear on the outside of the unit. This may be due to a change in room temperature. Wipe of any moisture residue. If the problem continues, please contact a qualified technician for assistance.

6 MAINTENANCE

6.1 Changing the Internal Light

Setting the refrigerator control to off does not remove power to the light circuit.

CAUTION: Light bulb may be hot.

Illuminating lamp parameter: MAX 40W

- 01 Unplug the refrigerator.
- 02 The bulb is located at the top of the compartment near the opening.
- 03 Replace with an appliance bulb of the same or lower wattage.
- 04 Plug the refrigerator back in.

6.2 Care When Handling/Moving Your Unit

Hold the unit around its sides or base when moving it. Under no circumstances should it be lifted by holding the edges of the top surface.

The refrigerator is arranged at the bottom of the condenser, be careful to keep the bottom dry in the handling process.

Confirm feet are level before moving.

6.3 Servicing

The unit should be serviced by an authorized professional. Under no circumstances should you attempt to repair the unit yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunction.

6.4 Switching Off for Long Periods of Time

When the unit is not in use for a long period of time, disconnect it from the main supply, empty all food and clean the appliance, leaving the door open to prevent from unpleasant smells.

7 TROUBLESHOOTING

Inoperation	<p>Ensure the appliance is plugged in and connected to power</p> <p>Check that the voltage is not low</p> <p>The temperature control knob is not set to "OFF"</p>
Odor	<p>Thoroughly clean the interior of the refrigerator.</p>
Long-term operation of compressor	<p>Do not overload the appliance</p> <p>Do not put hot contents in the appliance</p> <p>Note that it is normal that the appliance operates for a longer time in summer when the ambient temperature is higher</p>
Light is out	<p>Check whether the appliance is connected to power supply. If the light is damaged, have it replaced by a specialist.</p>
Doors cannot be properly closed	<p>Check for any items blocking the appliance door or unbalanced items.</p> <p>Check if the appliance is tilted</p>
Loud noise	<p>Ensure that the appliance is sitting on a flat and stable surface</p> <p>Ensure that the appliance accessories are properly placed</p>
Door seal fails to be tight	<p>Remove foreign matter from the door seal.</p> <p>Heat the door seal and then cool it for restoration (or use an electrical drier or a hot towel for heating).</p>
Water pan overflows	<p>Heavy defrosting may occur when there is too much food in the appliance chamber or if the food contains too much water.</p> <p>Frosting may occur if the doors are not properly closed, as entry of air could cause frosting which could increase water overflow during defrost.</p>
Hot housing	<p>Heat dissipation of the built-in condenser via the housing is normal.</p> <p>When housing becomes hot due to high ambient temperature or storage of too much food, provide ventilation to facilitate heat dissipation.</p>
Surface condensation	<p>Condensation on the exterior of the door seals is normal when the ambient humidity is too high. Wipe condensation with a clean towel.</p>
Abnormal noise	<p>The compressor may cause a buzzing sound when starting up or shutting down.</p> <p>The solenoid valve or electric switch valve may create a clattering sound which is normal and does not affect the operation.</p>



Limited Warranty

Models included are:

H101TFS, H16MRB, H16MRS, H33MRB, H33MRS, H31MRS, H31MRB, H11MFW, H11MFB, H11MFS, H17UFW, H17UFS, H35CFW, H5CFW, H7CFW, H14WCB, H24WCB, H34WCB, H52WCS, H48BCS, H115BCS, H4MFSS, HDS18SS, HDS24SS, HCTDS1W, HCTDS2W, HAC5, HAC5-B, HAC6, HAC6-B, HAC8, HAC8-B, HAC10, HAC10-B, HAC12, HAC12-B, HAC14, HAC12-B, HAC-U8, HAC-U8-B, HAC-U10, HAC-U10-B, HAC-U12-W, HAC-U12-B, H3UFW, H3UFB, H3UFS, HAC-8I

Products listed above are covered by the terms of this Limited Warranty. For purposes of this Limited Warranty, the term “product” means any appliance manufactured for BHRS Group. BHRS Group warrants that it will, at BHRS Group’s option, replace or repair the Purchaser’s BHRS Group product sold in the U.S. or Canada by an authorized retailer if that product is defective due to faulty workmanship or materials, subject to the limitations described in this Limited Warranty. BHRS Group undertakes no responsibility for the quality of the goods except as otherwise provided in this warranty. There are no warranties that extend beyond the description on the face hereof. This Limited Warranty is valid only in connection with the original purchase of new products from authorized retailers and extends from the original purchase date of the original product purchased. This warranty extends only to the original purchaser of the product and lasts for one (1) year from the date of the original purchase or until the original purchaser of the product sells or transfers the product, whichever first occurs. An “original purchaser,” for the purposes of this Limited Warranty, is an individual or entity who purchases the product directly from BHRS Group or an authorized retailer of BHRS Group with the intent to use the product for personal consumer use and commercial or industrial use and not with the intent to resell the product. An “authorized retailer,” for purposes of this Limited Warranty, is an individual or entity authorized by BHRS Group to sell the product directly to original purchasers. An individual or entity that purchases the product from whatever source with the intent to resell the product is an unauthorized reseller (“unauthorized reseller”). For the purpose of this Limited Warranty a “Third Party” would be considered any plumber, maintenance company, or individual hired by the Purchaser.

This Limited Warranty does not apply to used, refurbished, renewed, floor model or “demo” products, or to products sold by unauthorized resellers, including without limitation, unauthorized resellers on third party websites, including, without limitation, Craigslist, eBay, Amazon, etc. Unauthorized resellers are not “original purchasers” for the purpose of this Limited Warranty. If the purchaser is not the original purchaser of this product, the purchaser takes the product “AS IS,” “with all faults” and without warranty. BHRS Group reserves the right to require a valid serial number located on your product to submit a valid claim under this Limited Warranty. Products where the serial number has been removed or evidence showing the removal or attempted removal of the serial number label will not be eligible to make a claim under this Limited Warranty. IF THE PURCHASE OF THIS PRODUCT WAS NOT DIRECTLY FROM BHRS GROUP, PROOF OF PURCHASE WILL BE REQUIRED TO DEMONSTRATE THAT PURCHASER IS THE ORIGINAL PURCHASER AND THE PRODUCT WAS PURCHASED FROM AN AUTHORIZED RETAILER, AND ELIGIBLE TO MAKE A VALID CLAIM UNDER THIS LIMITED WARRANTY.

Your purchase date is established from the date of your sales receipt. BHRS Group may require the purchaser to provide proof of the quality and condition of the appliance if the purchaser makes a claim under this Limited Warranty. BHRS Group reserves the right to invalidate this Limited Warranty if the appliance is determined, in BHRS Group’s reasonable discretion, to be inadequate or if the appliance is found to be in an unsanitary condition. This warranty does not apply if the product was damaged or failed because of accident, improper handling or operation, relocation, abuse, misuse, unauthorized repairs made or attempted, or improper installation or maintenance. Under this Limited Warranty, products are required to be plugged directly into a grounded wall outlet. Plugging a product into an extension cord or surge protector will be considered misuse and will void this Limited Warranty. If damage to the product has occurred during shipping, the damage must be reported to BHRS Group within the first 30 days from the original purchase date to be eligible to make a claim under the Limited Warranty. Shipping damage reported to BHRS Group outside of the first 30 days from the original purchase date will not be eligible for a valid

claim under this Limited Warranty. This warranty does not cover shipping costs for the return of products to BHRS Group for repair or replacement.

To submit a valid claim under this Limited Warranty, troubleshooting the product with a BHRS Group Customer Success Expert is required. If troubleshooting the product is refused by the Purchaser, BHRS Group reserves the right to deny the Limited Warranty Claim. In the event a part is necessary to correct the problem with a Product, BHRS Group will provide the part at no cost to the original purchaser under this Limited Warranty. Replacing parts or attempting to correct an issue with the Product is required prior to submitting a claim for a replacement product under this Limited Warranty. Instructions for troubleshooting a Product or replacing a part will be provided by BHRS Group. Troubleshooting, repairs, part replacement, installation, and proper maintenance are the responsibility of the Purchaser. Instructions for proper installation and maintenance will be provided in the user manual.

Installation, maintenance, or repairs of the Product is the responsibility of the Purchaser. The Purchaser reserves the right to use a Third Party for installation, maintenance, and repair at their own risk. BHRS Group is not responsible for any additional cost incurred for installation, maintenance, or repair of the Product including but not limited to additional material needed for installation or the cost of a Third Party. Damage or failure of the Product due to improper installation, maintenance, or repair caused by a Third Party or the Purchaser is not the responsibility of BHRS Group and will not be covered under this Limited Warranty. Instructions for proper installation and maintenance will be provided in the user manual.

ANY AND ALL WARRANTIES, EXPRESSED OR IMPLIED (INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTY OF MERCHANTABILITY), LAST ONE YEAR FROM THE DATE OF ORIGINAL PURCHASE OR UNTIL THE ORIGINAL PURCHASER OF THE PRODUCT SELLS OR TRANSFERS THE PRODUCT, WHICHEVER FIRST OCCURS. IN NO EVENT SHALL BHRS GROUP'S LIABILITY UNDER ANY EXPRESS OR IMPLIED WARRANTY INCLUDE (I) INCIDENTAL OR CONSEQUENTIAL DAMAGES FROM ANY CAUSE WHATSOEVER, INCLUDING BUT NOT LIMITED TO ELECTRICAL OR WATER DAMAGE, OR (II) REPLACEMENT OR REPAIR OF ANY HOUSE FUSES, CIRCUIT BREAKERS OR RECEPTACLES. NOTWITHSTANDING ANYTHING TO THE CONTRARY, IN NO EVENT SHALL BHRS GROUP'S LIABILITY UNDER ANY EXPRESS OR IMPLIED WARRANTY EXCEED THE PURCHASE PRICE OF THE PRODUCT AND ANY SUCH LIABILITY SHALL TERMINATE UPON THE EXPIRATION OF THE WARRANTY PERIOD.

Except as otherwise provided, BHRS Group will not charge Original Purchaser to repair or replace the purchaser's Product if it is deemed defective during the length of this Limited Warranty, but any transportation costs associated with repairs or replacements are Purchaser's responsibility. No new warranty is provided with a replacement product. The warranty for the replacement product runs from the date of the original purchase of the original product. In the event that repair is necessary, such repair will be at no charge to the Purchaser except for transportation costs associated with such repair or replacement of a product in compliance with the terms of this Limited Warranty.

In the event, a warranty claim is filed and a warranty replacement is deemed necessary, the purchaser will be required to surrender the original product to BHRS Group at the time of replacement. Some states and provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so these exclusions or limitations may not apply to you. This warranty gives you specific legal rights. You may also have other rights which vary from state to state and province to province.

If you want to return or replace the product, please contact the store where it was purchased (remember to bring the purchase invoice). If your product needs repair, please contact us via email or phone.

BHRS Group, LLC

585 Prospect St.
Lakewood, NJ 08701

Customer Service Tel: 1-800-604-0295
Customer Service Email: support@honeywellappliances.com
Website: honeywellappliances.com

©2021 BHRS Group, LLC. All Rights Reserved.

The Honeywell Trademark is used under license from Honeywell International Inc. Honeywell International Inc. makes no representations or warranties with respect to this product. This product is manufactured by BHRS Group, LLC.

MADE IN CHINA

The Honeywell logo, consisting of the word "Honeywell" in a bold, black, sans-serif font.